

- Manuals.plus /
- › Corbero /
 - › Corbero CLH9404MK Front Load Washing Machine User Manual

Corbero CLH9404MK

Corbero CLH9404MK Front Load Washing Machine

User Instruction Manual

Introduction	Safety	Setup	Operating	Maintenance & Support	Troubleshooting	Specifications	Warranty
--------------	--------	-------	-----------	--------------------------	-----------------	----------------	----------

1. INTRODUCTION

Thank you for choosing the Corbero CLH9404MK Front Load Washing Machine. This appliance is designed to provide efficient, quiet, and adaptable laundry care for your daily needs. Featuring a 9 kg capacity, 1400 RPM spin speed, and an Inverter Motor, it offers optimal energy performance and silent operation. Its advanced steam technology refreshes garments and reduces wrinkles, while the Jet Wash system ensures deep and quick cleaning. The Delayed Start function allows you to program cycles to fit your schedule, and the XXL door facilitates easy loading and unloading of even bulky items.



Figure 1: Corbero CLH9404MK Front Load Washing Machine, showcasing its modern design and front-loading drum.

2. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance and retain them for future reference. Failure to follow these instructions could result in electric shock, fire, or serious injury.

- Ensure the appliance is properly grounded.
- Do not install or store the appliance where it will be exposed to temperatures below freezing or exposed to the weather.
- Do not allow children to play on or in the appliance. Close supervision is necessary when the appliance is used near children.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances.

- Always unplug the appliance from the power supply before cleaning or performing any maintenance.
- Do not operate the appliance if it is damaged or malfunctioning. Contact authorized service personnel.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Check for any transport damage. Keep packaging materials out of reach of children.

3.2 Removing Transport Bolts

Before use, remove all transport bolts located at the rear of the machine. These bolts secure the drum during transit and must be removed to prevent damage during operation. Store them for future transport if needed.

3.3 Placement

Place the washing machine on a firm, level floor. Ensure there is adequate space around the appliance for ventilation and access. Avoid direct sunlight or heat sources.

3.4 Leveling the Appliance

Adjust the leveling feet at the bottom of the machine until the appliance is perfectly level and stable. This prevents excessive vibration and noise during operation.

3.5 Water and Power Connection

Connect the water inlet hose to a cold water tap. Ensure all connections are tight to prevent leaks. Connect the drain hose to a suitable drain pipe or sink. Plug the power cord into a grounded electrical outlet. Refer to local regulations for proper installation.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The Corbero CLH9404MK features an intuitive control panel with a digital display and a rotary knob for program selection, along with touch controls for various functions.



Figure 2: Close-up of the control panel, showing the digital display and program options.

4.2 Loading Laundry

Open the XXL door and load your laundry into the drum. Do not overload the machine; ensure there is enough space for clothes to tumble freely. The 9 kg capacity is suitable for large loads, including bulky items like duvets.

- Lavado Jet
- Puerta XXL

Corbero



Figure 3: The spacious XXL door allows for easy loading and unloading of laundry.

4.3 Detergent Dispenser

Pull out the detergent dispenser drawer. Add appropriate amounts of detergent and fabric softener to the designated compartments. Refer to your detergent packaging for recommended dosages.



Figure 4: The detergent dispenser drawer with compartments for detergent and softener.

4.4 Program Selection

Turn the program selector knob to choose one of the 15 available wash programs. Common programs include:

- **Cotton:** For durable cotton items.
- **Synthetics:** For synthetic fabrics.
- **Mix:** For mixed loads.
- **Wool/Hand Wash:** Gentle cycle for delicate items.
- **Quick 15:** A rapid wash cycle for lightly soiled items.
- **Steam:** Utilizes steam technology to refresh clothes and reduce wrinkles.
- **Jet Wash:** An innovative system for deep and fast cleaning.
- **Rinse + Spin:** For additional rinsing and spinning.
- **Drum Clean:** A self-cleaning program for the drum.

4.5 Delayed Start Function

The Delayed Start function allows you to postpone the start of a wash cycle. Press the 'Delayed Start' button repeatedly to select the desired delay time. This feature is useful for taking advantage of off-peak electricity rates or having laundry ready at a specific time.



Figure 5: The Delayed Start function icon on the washing machine, indicating its ability to postpone wash cycles.

4.6 Starting a Wash Cycle

After selecting the program and any desired options, press the 'Start/Pause' button to begin the wash cycle.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

5.1 Cleaning the Detergent Dispenser

Periodically remove and clean the detergent dispenser drawer under running water to prevent detergent residue buildup.

5.2 Cleaning the Drum

Use the 'Drum Clean' program regularly (e.g., once a month) to clean the inside of the drum and remove any detergent or fabric softener residue. Do not add laundry during this cycle.

5.3 Cleaning the Filter

Locate the drain pump filter, usually at the bottom front of the machine. Place a shallow container underneath to catch any

water. Unscrew the filter slowly to drain water, then remove and clean any lint or debris. Reinsert and tighten the filter securely.

5.4 Exterior Cleaning

Wipe the exterior surfaces of the washing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6. TROUBLESHOOTING

Before contacting service, please check the following common issues:

Problem	Possible Cause	Solution
Machine does not start	No power; Door not closed; Program not selected	Check power supply; Close door firmly; Select a program and press Start
Excessive vibration/noise	Transport bolts not removed; Machine not level; Uneven load	Remove transport bolts; Level the machine; Redistribute laundry
Water leakage	Hoses loose; Detergent overdose; Drain filter clogged	Tighten hose connections; Use less detergent; Clean drain filter
Water not draining	Drain hose kinked/blocked; Drain filter clogged	Check drain hose; Clean drain filter
Poor washing results	Overloading; Incorrect program/detergent; Water pressure low	Reduce load; Select appropriate program/detergent; Check water supply

7. TECHNICAL SPECIFICATIONS

- **Model:** CLH9404MK
- **Type:** Front Load Washing Machine
- **Capacity:** 9 kg
- **Max Spin Speed:** 1400 RPM
- **Motor Type:** Inverter Motor (for efficient and quiet operation)
- **Programs:** 15 (including Steam, Jet Wash, Quick 15, Drum Clean)
- **Special Features:** Delayed Start, XXL Door
- **Dimensions (D x W x H):** 58 cm x 59.5 cm x 84.5 cm
- **Weight:** 72 kg
- **Control Type:** Touch
- **Energy Efficiency Class:** A
- **Energy Consumption (per 100 cycles):** 49 kWh
- **Water Consumption (per cycle):** 39 L

- Noise Level (Spin): 72 dB



Figure 6: The Inverter Motor technology ensures quiet and energy-efficient operation.



ENERGY



CORBERO**CLH9404MK**

A

B

C

A

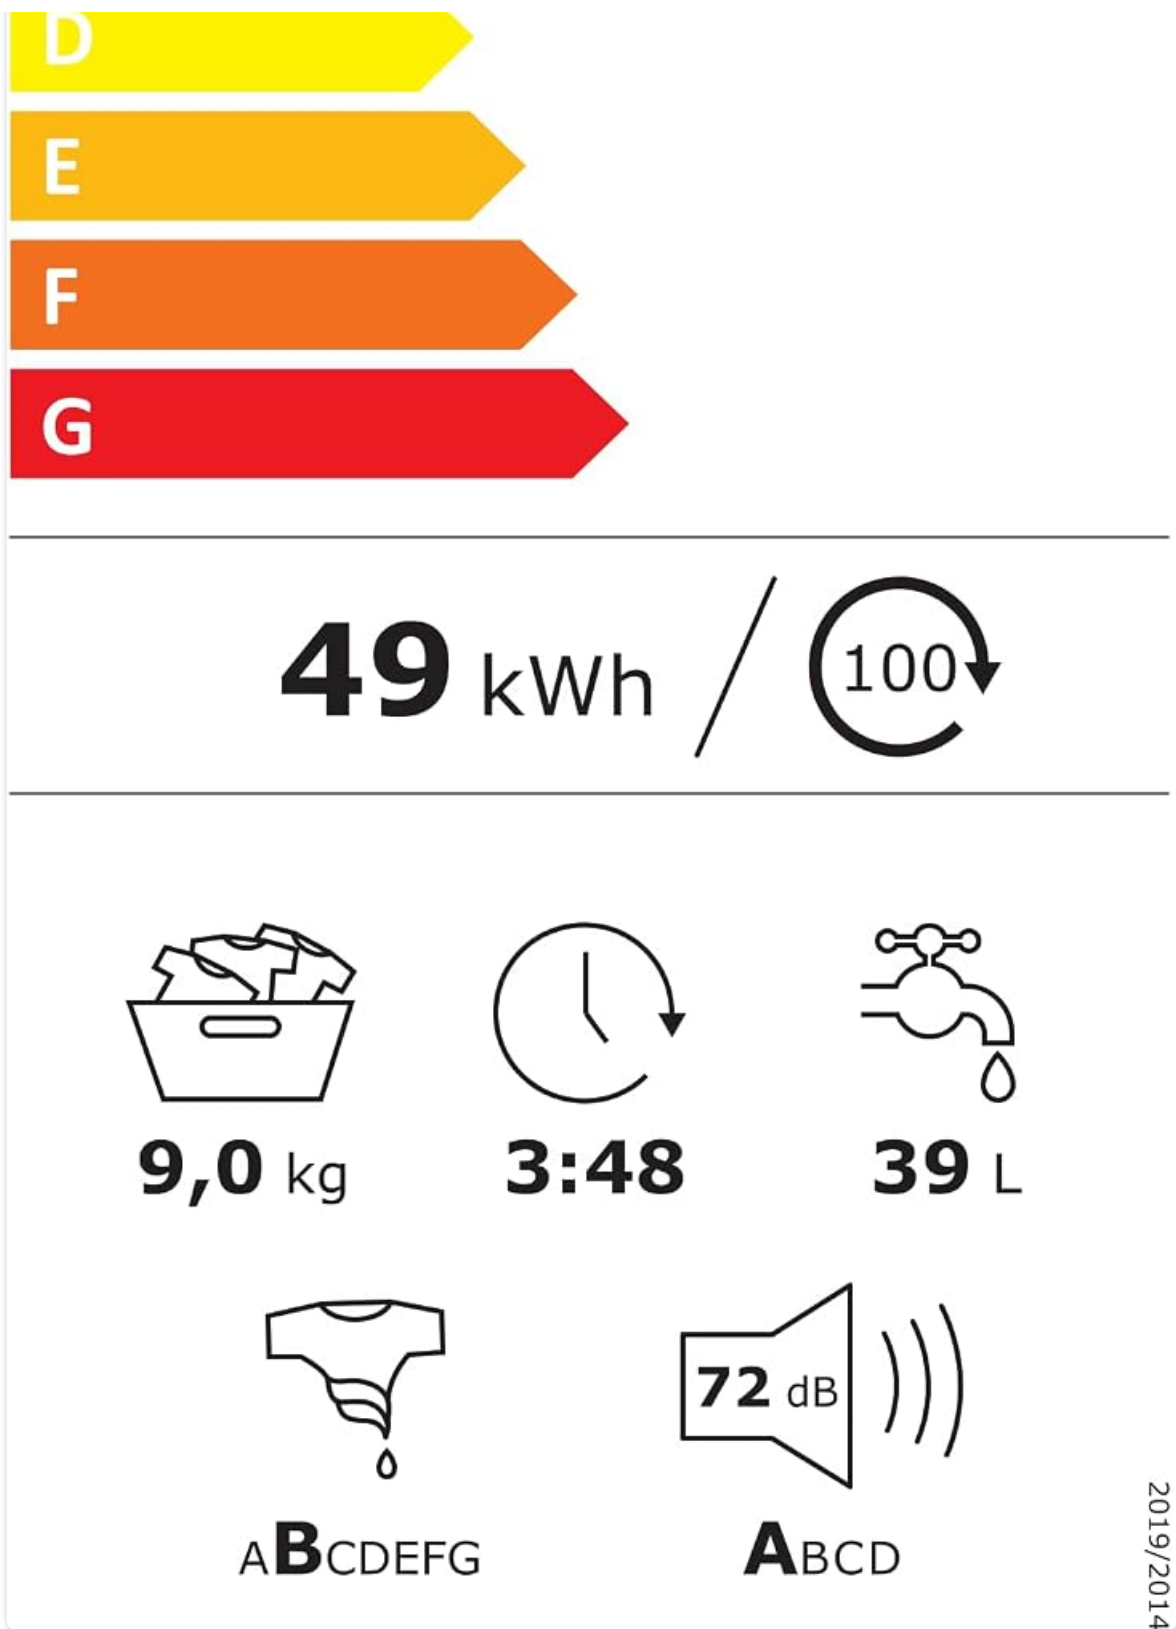


Figure 7: Energy label for Corbero CLH9404MK, showing its A-class energy efficiency. For more details, visit the official EPREL database: [EPREL Database Link](#)

8. WARRANTY AND SUPPORT

This Corbero appliance comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical assistance, spare parts, or service requests, please contact Corbero customer support or your authorized dealer. Ensure you have your model number (CLH9404MK) and purchase

date ready when contacting support.

What's in the Box:

- Corbero CLH9404MK Washing Machine
- Power Cable
- Instruction Manual

© 2024 Corbero. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DDKYMCBS>

More documents and user manuals: <https://manuals.plus/>