

RIVA RIVA Festival

RIVA Festival Wi-Fi Bluetooth Hi-Fi Speaker User Manual

Model: RIVA Festival

1. INTRODUCTION

Welcome to the RIVA Festival experience. This manual provides essential information for setting up, operating, and maintaining your RIVA Festival Wi-Fi Bluetooth Hi-Fi speaker. Please read these instructions carefully to ensure optimal performance and longevity of your device.

What's in the Box

- RIVA Festival Speaker
- Power Cable
- Quick Start Guide

2. PRODUCT OVERVIEW

Key Features

- **Premium Sound Quality:** 10 drivers delivering 200 watts of power with patented Trillium audio technology for authentic stereo surround sound.
- **Versatile Connectivity:** Wi-Fi, Bluetooth, Optical, USB, and 3.5mm AUX input.
- **Enhanced Audio Streaming:** Supports Chromecast MRM, Airplay2, Spotify, TIDAL, and other streaming services.
- **OTA Upgrade Support:** Over-The-Air updates ensure continuous performance optimization and new features.
- **USB Charge Out:** Convenient 5V/2.1A USB port for charging external devices.

Speaker Components and Controls

The RIVA Festival speaker features a sleek design with intuitive controls and comprehensive connectivity options.



This image displays the front of the RIVA Festival speaker, featuring a white casing and a metallic grille with the RIVA logo centered.



1

3

2

4

1. Aux-in

2. Power

3. USB Play/USB Charge Out 5V/2.1A

4. Home/Airplane Mode Switch

This image provides a detailed view of the speaker's rear panel, highlighting the connectivity options. Labels indicate: 1. Aux-in, 2. Power input, 3. USB Play/USB Charge Out 5V/2.1A, and 4. Home/Airplane Mode Switch.

Audio Technology

The RIVA Festival utilizes patented Trillium Audio Technology, incorporating 10 drivers to deliver a powerful 200-watt audio experience. This design ensures an authentic stereo soundstage.

Patented Trillium Audio Technology



An exploded diagram illustrates the internal structure of the RIVA Festival speaker, showcasing its 10 drivers and the patented Trillium Audio Technology. The image emphasizes the speaker's acoustic design, including the wooden enclosure and driver placement, contributing to its 200 watts total power output.

3. SETUP

Power Connection

1. Connect the provided power cable to the power input port on the rear of the RIVA Festival speaker.
2. Plug the other end of the power cable into a standard electrical outlet.
3. Press the power button on the speaker to turn it on.

Initial Network Setup (Wi-Fi & Bluetooth)

For Wi-Fi and advanced features, download the RIVA Voice app from your device's app store. Follow the in-app

instructions for Wi-Fi network configuration.



Apple AirPlay 2



Bluetooth®



Chromecast built-in



Spotify®

The RIVA Festival speaker is shown on a wooden surface, with a hand holding a smartphone next to it. The phone screen illustrates the RIVA control application, showing options for media sources like My Device, Media Server, USB Storage, and Spotify, along with input types such as AUX and Bluetooth.

- **Wi-Fi Setup:** Use the RIVA Voice app to connect your speaker to your home Wi-Fi network. This enables features like Chromecast, Airplay2, and multi-room audio.
- **Bluetooth Pairing:** Press and hold the Bluetooth button on the speaker until the indicator light flashes. On your device, navigate to Bluetooth settings and select "RIVA Festival" to pair.

Connecting Audio Sources

- **Aux-in:** Connect an audio device using a 3.5mm auxiliary cable to the Aux-in port on the rear panel.
- **Optical:** For digital audio, connect an optical cable from your source device to the optical input on the speaker.
- **USB:** Insert a USB drive with audio files into the USB Play port. The speaker supports various audio formats.

4. OPERATING INSTRUCTIONS

Multi-room Audio

The RIVA Festival supports multi-room audio playback through Chromecast and Airplay2. Use compatible apps (e.g., Google Home, Apple Home) to group multiple RIVA speakers or other compatible devices for synchronized audio throughout your home.

Streaming Services

Access your favorite music streaming services directly through Wi-Fi. The speaker is compatible with Spotify, TIDAL, and others via Chromecast or Airplay2.

USB Charge Out

The USB port on the rear panel can also be used to charge your smartphone or other USB-powered devices with a 5V/2.1A output.

OTA (Over-The-Air) Updates

Your RIVA Festival speaker can receive software updates wirelessly. Ensure your speaker is connected to Wi-Fi to receive the latest features and performance enhancements automatically.

OTA (Over-The-Air) Upgrade

1.0

2.0



Stay up-to-date with
the latest features and improvements

This graphic depicts the OTA upgrade process, showing a RIVA Festival speaker transitioning from version 1.0 to 2.0, symbolizing continuous software improvements and feature updates.

Home/Airplane Mode Switch

The switch on the rear panel allows you to toggle between Home mode (full Wi-Fi functionality) and Airplane mode (disables Wi-Fi for portable use or reduced interference).

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Avoid abrasive cleaners or solvents.
- **Placement:** Place the speaker on a stable, flat surface. Avoid direct sunlight, heat sources, or areas with high humidity.
- **Ventilation:** Ensure proper ventilation around the speaker to prevent overheating. Do not block any vents.

6. TROUBLESHOOTING

No Power

- Ensure the power cable is securely connected to both the speaker and a working electrical outlet.
- Verify the power outlet is functional by plugging in another device.

No Sound

- Check the volume level on both the speaker and your audio source device.
- Ensure the correct input source (Wi-Fi, Bluetooth, Aux, Optical, USB) is selected.
- For Bluetooth, ensure the speaker is paired and connected to your device.
- For Wi-Fi streaming, verify the speaker is connected to your network and the streaming app is functioning correctly.

Connectivity Issues (Wi-Fi/Bluetooth)

- Restart the speaker and your source device.
- Ensure the speaker is within range of your Wi-Fi router or Bluetooth device.
- If using Wi-Fi, check your router's internet connection.
- Try resetting the speaker to factory settings (refer to the Quick Start Guide for instructions).

7. SPECIFICATIONS

Feature	Detail
Model Name	RIVA Festival
Speaker Type	Multi Room
Special Features	Bass Boost, Hi Res Audio, Multi Room Audio
Recommended Uses	For Music Players, For Smartphones or Tablets, Indoor
Compatible Devices	Desktop, Laptop, MP3 Player, Smartphone, Tablet
Surround Sound Channel Configuration	2.0
Color	White
Product Dimensions	7.87"D x 14.37"W x 7"H
Item Weight	14 Pounds
Is Waterproof	FALSE
Control Method	App
Wireless Communication Technology	Airplay, Bluetooth, Wi-Fi
Power Source	Corded Electric

Feature	Detail
Audio Driver Type	Dynamic Driver
Supported Internet Services	Chromecast, Airplay2, Spotify, others
Speaker Maximum Output Power	200 Watts
Connectivity Technology	Auxiliary, Bluetooth, Optical, USB, Wi-Fi
Audio Output Mode	Stereo
Mounting Type	Tabletop Mount



The image provides a perspective view of the RIVA Festival speaker with its physical dimensions clearly marked: 7.87 inches in depth, 14.37 inches in width, and 7 inches in height.

8. WARRANTY AND SUPPORT

Warranty Information

The RIVA Festival speaker comes with a Limited Warranty. Please refer to the warranty card included in your product packaging or visit the official RIVA website for detailed terms and conditions.

Customer Support

For further assistance, technical support, or service inquiries, please visit the RIVA Audio support page on their official website or contact their customer service department. Contact information can typically be found in the Quick Start Guide or on the manufacturer's website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question