

Sheawasy SHXJ-02

Sheawasy Digital Camera SHXJ-02 User Manual

1. INTRODUCTION

Thank you for choosing the Sheawasy Digital Camera SHXJ-02. This compact and user-friendly camera is designed for beginners, offering 1080P Full HD photo and video capabilities. It features dual screens, a 16X digital zoom, and an LED fill light, making it suitable for capturing everyday moments, selfies, and vlogs. This manual provides essential information for setting up, operating, and maintaining your camera.

2. PRODUCT OVERVIEW

Familiarize yourself with the camera's components and controls.



Figure 2.1: Camera Components and Controls Diagram

This diagram illustrates the various components and controls of the Sheawasy SHXJ-02 Digital Camera, highlighting the main screen, front screen, lens, LED fill light, and all operational buttons.



Figure 2.2: Front and Back View of the Camera

A comprehensive view of the Sheawasy SHXJ-02 Digital Camera, displaying its front with the lens and front screen, and its back with the main display and navigation controls.

Camera Features:

- **Dual Screens:** 2.4-inch main screen and 1.5-inch front screen for versatile shooting.
- **1080P FHD:** High-definition photo and video capture.
- **16X Digital Zoom:** Magnify subjects for detailed shots.
- **Autofocus:** Automatically adjusts focus for clear images.
- **LED Fill Light:** Enhances visibility in low-light conditions.
- **Music Function:** Play MP3 audio files directly from the camera.
- **Compact Design:** Lightweight and portable for on-the-go use.
- **Built-in 32GB Storage:** Ample space for photos and videos.

3. SETUP

3.1 Battery Installation and Charging

The camera is powered by an included Lithium Polymer battery. Ensure the battery is fully charged before initial use. Connect the camera to a power source using the provided USB cable. The charging indicator will show the charging status.

3.2 Memory Card Insertion

A 32GB memory card is included with your camera. Locate the memory card slot, typically on the side or bottom of the camera. Insert the memory card gently until it clicks into place. Ensure it is inserted in the correct orientation to avoid damage.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

To power on the camera, press and hold the Power button located on the top of the device. To power off, press and hold the Power button again until the screen turns off.

4.2 Taking Photos

1. Turn on the camera.
2. Frame your shot using either the main rear screen or the front screen for selfies.
3. The camera features autofocus. Allow it a moment to adjust for clarity.
4. Press the Shutter button firmly to capture the photo.

4.3 Recording Videos

1. Turn on the camera.
2. Switch to video recording mode using the Mode button.
3. Press the Shutter button once to start recording.
4. Press the Shutter button again to stop recording.

4.4 Using Dual Screens

The camera is equipped with a 2.4-inch main screen on the back and a 1.5-inch front screen. The front screen is particularly useful for:

- **Selfies:** Easily compose self-portraits.
- **Vlogging:** Monitor your framing while recording videos of yourself.
- **Composition Adjustment:** Ensure everyone is in the frame for group shots.

Dual screen Camera

Main screen

- 2.4 inch TFT screen
- Real-time viewfinder



Front screen

- 1.5 inch TFT screen
- Convenient for selfie, vlogging

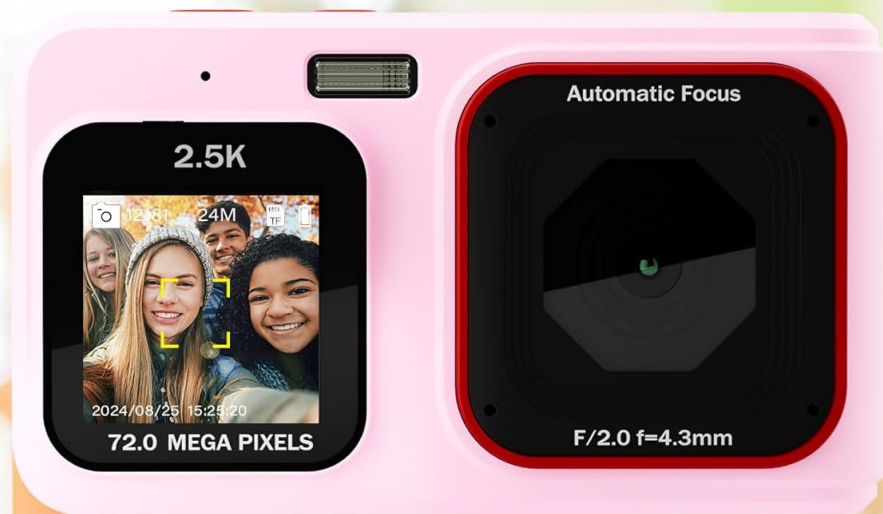


Figure 4.1: Dual Screen Functionality

This image highlights the camera's dual screen feature, with the larger rear screen for general viewing and a smaller front screen ideal for selfies and vlogging.



Figure 4.2: Autofocus and Selfie Mode

This visual explains the camera's autofocus capability, which helps in capturing clear subjects, and illustrates its use in selfie mode with the front screen.

4.5 Digital Zoom

Use the Zoom In (+) and Zoom Out (-) buttons to digitally magnify or reduce your subject. The camera features 16X digital zoom. Note that digital zoom may reduce image quality compared to optical zoom.

4.6 LED Fill Light

For shooting in low-light environments, activate the built-in LED fill light. Refer to the camera's menu or a dedicated button (if available) to toggle this feature on or off.



Figure 4.3: LED Fill Light in Action

This image illustrates the effectiveness of the built-in LED fill light, showing how it improves visibility and detail in low-light photography compared to not using it.

4.7 Music Playback Function

The camera includes a music playback feature. Press the dedicated MP3 button to access music files stored on the memory card. You can connect headphones via the 3.5mm audio jack for private listening.

Music Function

- One-click music play button
- 3.5mm headphone jack



Figure 4.4: Music Functionality

This image demonstrates the camera's integrated music playback feature, including the 3.5mm audio jack for headphones.

4.8 Playback Mode

To review your captured photos and videos, switch to Playback mode using the Mode button. Use the navigation buttons to browse through your media. Press the OK button to view a selected item.

5. MAINTENANCE

5.1 Cleaning the Camera

- Use a soft, dry cloth to clean the camera body.
- For the lens and screens, use a specialized lens cleaning cloth and solution to avoid scratches.
- Do not use harsh chemicals or abrasive materials.

5.2 Storage

Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an

extended period, remove the battery.

6. TROUBLESHOOTING

- **Camera not turning on:** Ensure the battery is fully charged and correctly inserted.
- **Images are blurry or dark:** Check lighting conditions. Use the LED fill light in low light. Hold the camera steady during capture. Note that this is an entry-level camera, and image quality expectations should be set accordingly.
- **Cannot view images on camera:** Ensure you are in Playback mode. Navigate through files using the directional buttons.
- **Memory card error:** Reinsert the memory card. If the issue persists, try formatting the card (this will erase all data) or use a different compatible memory card.
- **Camera freezes:** Remove and reinsert the battery to reset the camera.

7. SPECIFICATIONS

Feature	Specification
Model Name	SHXJ-02
Brand	Sheawasy
Video Resolution	1080P FHD
Effective Still Resolution	1 MP
Digital Zoom	16X
Photo Sensor Technology	CMOS
Screen Size	2.4 Inches (Main), 1.5 Inches (Front)
Memory Storage Capacity	32 GB (Built-in)
Battery Type	Lithium Polymer
Connectivity Technology	USB
Supported File Format	AVI (Video)
Autofocus	Yes (Contrast Detection)
LED Fill Light	Yes
Water Resistance Level	Not Water Resistant




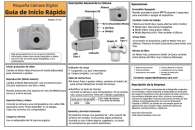


8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or contact Sheawasy customer service. Keep your purchase receipt as proof of purchase for any

warranty claims.

For further assistance, please visit the official Sheawasy website or contact their support channels.

Related Documents - SHXJ-02

	<p>HJD-02 Mini Digital Camera Quick Start Guide Sheawasy</p> <p>Get started quickly with your HJD-02 Mini Digital Camera. This guide covers setup, operations, taking photos and videos, transferring files, FAQs, and warranty information from Sheawasy.</p>
	<p>Mini Cámara Digital GL-X2: Guía de Inicio Rápido Sheawasy</p> <p>Guía de inicio rápido para la cámara digital Sheawasy GL-X2. Aprenda a encender, cambiar modos, tomar fotos, grabar video, reproducir y exportar archivos. Incluye información sobre carga, garantía y la empresa Sheawasy.</p>
	<p>HJD-02 4K Mini Digital Camera Quick Start Guide</p> <p>Quick start guide for the HJD-02 4K Mini Digital Camera by Sheawasy, covering setup, operation, photography, video recording, playback, and troubleshooting.</p>
	<p>Sheawasy FC-4K Digital Camera Quick Start Guide</p> <p>A concise guide to operating the Sheawasy FC-4K digital camera, covering setup, photo and video capture, file management, and warranty information.</p>
	<p>Control Remoto Inteligente Sheawasy: Manual de Usuario y Características</p> <p>Guía completa del Control Remoto Inteligente Sheawasy. Aprenda a conectarlo vía Bluetooth, usarlo como disparador de cámara y controlador multimedia. Incluye especificaciones técnicas, compatibilidad y detalles de soporte.</p>
	<p>Sheawasy OI-4000 Mini Digital Camera Quick Start Guide</p> <p>Learn how to use your Sheawasy OI-4000 mini digital camera with this quick start guide. Covers basic operations, charging, photo taking, and exporting files.</p>

