

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Lubluelu](#) /

› [Lubluelu Cordless Vacuum Cleaner Model 202 User Manual](#)

Lubluelu 202

Lubluelu Cordless Vacuum Cleaner Model 202 User Manual

Model: 202

1. INTRODUCTION

Thank you for choosing the Lubluelu Cordless Vacuum Cleaner Model 202. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your vacuum cleaner. Please read it thoroughly before first use and keep it for future reference.

2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using your vacuum cleaner:

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia cleaner, drain cleaner).
- Do not use without dust cup and/or filters in place.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.

- Recharge only with the charger specified by the manufacturer.

3. PACKAGE CONTENTS

Carefully unpack your Lubluelu Cordless Vacuum Cleaner and check that all items are present and in good condition. The package should include:

- Main Motor Unit (Handheld Vacuum)
- Extension Wand (Telescopic Tube)
- Motorized Brush Head with LED Lights
- Removable Battery Pack
- Charging Adapter
- 2-in-1 Dusting Tool
- Long Crevice Tool
- Wall Mount Bracket and Screws
- User Manual



2-in-1 LED Brush



Dusting Tool



Long Crevice Tool



Image: Included accessories for versatile cleaning.

4. PRODUCT OVERVIEW

The Lubluelu Cordless Vacuum Cleaner Model 202 is designed for efficient and convenient cleaning across various surfaces. Key features include:

- **Powerful Suction:** Up to 25,000 Pa suction power with a 220W digital motor for deep cleaning.
- **Long Runtime:** Up to 50 minutes of continuous cleaning in minimum mode with its 2200 mAh removable battery.
- **Self-Standing Design:** Allows the vacuum to stand upright independently for convenient pauses during cleaning or compact storage.
- **Advanced Filtration:** 4-layer HEPA filtration system captures 99.7% of dust particles down to 0.3 m.
- **LED Brush Head:** Integrated LED lights illuminate dark areas, revealing hidden dust and debris.
- **Versatile Cleaning:** Comes with multiple attachments for cleaning hard floors, carpets, pet hair, stairs, car interiors, and hard-to-reach areas.

Self-Stable & Compact Storage



Image: The vacuum cleaner's self-standing capability for easy storage and pauses.



Image: Illustration of the vacuum's suction power modes and battery endurance.

Efficient Cleaning Do More with a Full Charge



Image: Demonstrating the vacuum's extended runtime during a cleaning session.

5. SETUP

5.1 Assembly

- Attach the Extension Wand:** Insert the top end of the extension wand into the main motor unit until it clicks securely.
- Attach the Brush Head:** Insert the bottom end of the extension wand into the motorized brush head until it clicks securely.
- Install the Battery:** Slide the removable battery pack into the slot on the main motor unit until it locks into place.
- Attach Accessories:** For handheld use, attach the 2-in-1 dusting tool or long crevice tool directly to the main motor unit. For extended reach, attach them to the end of the extension wand.

5.2 Charging the Battery

Before first use, fully charge the battery. The battery can be charged while attached to the vacuum or separately.

- Connect the charging adapter to a power outlet and then to the charging port on the battery pack (either on or off the

vacuum).

- The battery indicator lights will show the charging status. A full charge typically takes about 4 hours.
- Once fully charged, disconnect the adapter.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off and Suction Modes

- Press the power button on the main motor unit to turn the vacuum on. It will start in the default suction mode.
- Press the mode button to cycle through different suction power levels (e.g., Eco, Standard, Max).
- Press the power button again to turn the vacuum off.

6.2 Using Attachments

- **Motorized Brush Head:** Ideal for cleaning hard floors, carpets, and picking up pet hair. The LED lights will automatically illuminate when in use.
- **2-in-1 Dusting Tool:** Use the brush bristles for dusting delicate surfaces like shelves, keyboards, or upholstery. Retract the bristles for a wider nozzle to clean larger debris.
- **Long Crevice Tool:** Perfect for reaching tight spaces, corners, between sofa cushions, and car interiors.

Powerful Cleaning. Effortlessly Agile



Image: Cleaning pet hair and debris with the vacuum cleaner.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

7.1 Emptying the Dustbin

- Press the dustbin release button to detach the dustbin from the main motor unit.
- Position the dustbin over a trash can and press the bottom release button to open the flap and empty the contents.
- Close the flap and reattach the dustbin to the main motor unit until it clicks.

7.2 Cleaning Filters

The HEPA filter and mesh filter should be cleaned regularly (e.g., weekly, depending on usage) and replaced every 3-6 months.

1. Remove the dustbin.
2. Twist and pull out the filter assembly (HEPA filter and mesh filter).

3. Tap the filters gently to remove loose dust. For a deeper clean, rinse the filters under cold running water until the water runs clear.
4. **Important:** Ensure filters are completely dry before reassembling and using the vacuum. Air dry for at least 24 hours.
5. Reinsert the dry filters and reattach the dustbin.

7.3 Cleaning the Brush Roll

Periodically check the brush roll for tangled hair or debris.

1. Turn off the vacuum and detach the motorized brush head.
2. Locate the brush roll release tab or button on the side of the brush head. Press or slide it to remove the brush roll.
3. Use scissors or a cleaning tool (often included) to cut and remove any tangled hair or fibers from the brush roll.
4. Clean any debris from the brush head housing.
5. Reinsert the brush roll and secure it in place.

8. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged or not properly installed.	Ensure battery is fully charged and securely inserted.
Low suction power	Dustbin is full. Filters are clogged. Blockage in the nozzle, wand, or hose.	Empty dustbin. Clean or replace filters. Check for and remove any blockages.
Brush roll not spinning	Brush roll is jammed by debris. Brush head is not properly attached.	Clean debris from brush roll. Ensure brush head is securely attached to the wand.
Short battery runtime	Battery not fully charged. Using high suction mode continuously. Battery aging.	Fully charge the battery. Use lower suction modes when possible. Consider battery replacement if runtime significantly decreases over time.

9. SPECIFICATIONS

Feature	Specification
Model Number	202
Brand	Lubluelu
Power	220 Watts
Max Suction Power	25,000 Pa
Max Runtime	50 minutes (in minimum mode)

Feature	Specification
Battery Capacity	7 x 2200 mAh
Charging Time	Approximately 4 hours
Filter Type	HEPA Filter (4-layer system)
Item Weight	3.66 Kilograms
Special Features	Self-standing, Removable Battery, LED Brush Head
Recommended Surface	Hard floor, Carpet

10. WARRANTY AND SUPPORT

Lubluelu products are manufactured to high-quality standards. For warranty information, technical support, or service inquiries, please refer to the warranty card included in your package or contact Lubluelu customer service through the retailer where the product was purchased. Please have your model number (202) and purchase date available when contacting support.