

[Manuals.plus](#) /

› [Peak Design](#) /

› Peak Design Travel Backpack 30L Instruction Manual

Peak Design BTR-30-MN-2

Peak Design Travel Backpack 30L Instruction Manual

Model: BTR-30-MN-2

Brand: Peak Design

INTRODUCTION

This manual provides detailed instructions for the proper use, care, and maintenance of your Peak Design Travel Backpack 30L. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

The Peak Design Travel Backpack 30L is engineered for shorter trips and everyday carry, offering intuitive organization, weatherproof protection, and expandable storage. Its clean, rugged form adapts seamlessly to various gear and destinations.





Front view of the Peak Design Travel Backpack 30L in Midnight color.

KEY FEATURES

- **Expandable Capacity:** Adjusts from 27L (compressed) to 33L (expanded) to accommodate varying loads.
- **Intuitive Access:** Features a large rear hatch for total access and a subdivided top pocket for quick access to essentials.
- **Durable Construction:** Made with a weatherproof 400D recycled nylon canvas shell, 900D bottom liner, and burly #10 UltraZip for enhanced durability.
- **Versatile Carry Options:** Includes magnetic tuck-away shoulder straps, a luggage pass-through, 360-degree grab handles, and hidden external carry straps.
- **Dedicated Storage:** Padded laptop and tablet sleeves, expansive side pockets for bottles or tripods, and internal organization for keys, glasses, and passports.



Compresses to 27L and expands up to 33L

Side-by-side comparison showing the backpack in its compressed 27L state and expanded 33L state.

Magnetic
tuck-away
shoulder straps



Rear view of the backpack highlighting the magnetic tuck-away shoulder straps for streamlined carry.



Rear access
via burly #10
Ultra Zip.

The backpack opened from the rear, showing the main compartment accessible via the large UltraZip.

Pockets for keys, glasses,
passport, etc.



Close-up of the top pocket, revealing internal subdivisions for organizing small items like keys, glasses, and passports.

Padded laptop
+ tablet sleeves.



A hand inserting a laptop into the dedicated padded sleeve located within the backpack's main compartment.



Expansive side
pockets for water
bottles, tripods,
and more.

A tripod stored securely in one of the expansive side pockets of the backpack.



Cleverly concealed external carry straps.

The backpack viewed from the side, demonstrating the cleverly concealed external carry straps.

SETUP AND INITIAL USE

1. **Unpacking:** Carefully remove the backpack from its packaging. Inspect the product for any signs of shipping damage.
2. **Strap Adjustment:** Adjust the shoulder straps to a comfortable length that allows the backpack to sit properly on your back. The sternum strap can be adjusted vertically along the shoulder straps for optimal fit and weight distribution.
3. **Capacity Expansion:** To expand the backpack's capacity from 27L to 33L, locate the expansion zippers on the sides and bottom of the main compartment. Unzip these to increase the internal volume.
4. **Strap Stowage:** For streamlined carry, such as when checking the bag or storing it in tight spaces, the shoulder straps can be tucked away into the rear panel. Locate the magnetic anchors and secure the straps within the designated pockets.

OPERATING AND USAGE

Main Compartment Access

The primary access to the main compartment is via a large rear hatch, secured by a durable #10 UltraZip. This design allows for a full clamshell opening, facilitating easy packing and unpacking of your belongings.

Top Pocket

The enlarged top pocket is designed for quick access to frequently used items. It features internal subdivisions with stretch and zip pockets, ideal for organizing small essentials such as keys, glasses, or passports.

Laptop and Tablet Sleeves

Dedicated padded sleeves for laptops (up to 16 inches) and tablets are integrated into the main compartment, accessible from the rear. These sleeves provide secure and protected storage for your electronic devices.

Side Pockets

Expansive side pockets are strategically placed to hold water bottles, compact tripods, or other items requiring quick retrieval. These pockets are designed to securely hold items even when the backpack is in motion.

External Carry Straps

Hidden external carry straps can be deployed from designated pockets to secure additional gear, such as jackets or sleeping pads, to the exterior of the backpack. These straps offer versatility for carrying extra items.

Luggage Pass-Through

A convenient luggage pass-through strap is located on the rear panel. This feature allows the backpack to be securely mounted on the handle of rolling luggage, simplifying transit through airports or train stations.

CARE AND MAINTENANCE

- **Cleaning:** For general cleaning, wipe the exterior of the backpack with a damp cloth and a small amount of mild soap. Do not machine wash, bleach, or tumble dry, as this can damage the materials and coatings.
- **Stain Removal:** For more stubborn stains, use a soft brush and a small amount of gentle detergent. Gently scrub the affected area, then rinse thoroughly with clean water to remove any soap residue.
- **Drying:** After cleaning, allow the backpack to air dry completely in a well-ventilated area. Avoid direct sunlight or heat sources, which can degrade the fabric over time. Ensure the backpack is fully dry before storing.
- **Storage:** When not in use, store the backpack in a cool, dry place. Avoid prolonged exposure to extreme temperatures or high humidity, which can affect material integrity.
- **Zipper Care:** Periodically clean zippers with a small brush to remove any dirt, dust, or debris that may accumulate in the teeth. If zippers become stiff or difficult to operate, apply a silicone-based zipper lubricant to ensure smooth functionality.

TROUBLESHOOTING


Problem	Possible Cause	Solution
Zippers are stiff or stuck.	Dirt or debris accumulated in zipper teeth; lack of lubrication.	Clean zippers thoroughly with a small brush. Apply a silicone-based zipper lubricant to the teeth.

Problem	Possible Cause	Solution
Backpack feels uncomfortable during wear.	Shoulder or sternum straps are improperly adjusted; backpack is overloaded or weight is unevenly distributed.	Re-adjust all straps (shoulder, sternum) to ensure a snug and balanced fit. Distribute contents evenly within the backpack. Reduce load if necessary.
Water resistance seems reduced.	Outer fabric's Durable Water Repellent (DWR) coating may be worn; prolonged exposure to heavy rain.	Ensure all zippers are fully closed and flaps are secured. Consider applying a DWR spray specifically designed for outdoor gear to refresh the water repellency. Note that "weatherproof" does not imply full submersion protection.

SPECIFICATIONS

- **Model Number:** BTR-30-MN-2
- **Capacity:** 27 Liters (compressed) to 33 Liters (expanded)
- **Dimensions (H x W x D):** 20.87 x 13.54 x 7 inches (53 x 34 x 18 cm)
- **Weight:** 3.39 pounds (1.54 kg)
- **Material:** Weatherproof 400D recycled nylon canvas shell, 900D bottom liner
- **Laptop Compatibility:** Fits up to 16-inch laptops
- **Color:** Midnight (for this specific model)

30L TRAVEL BACKPACK

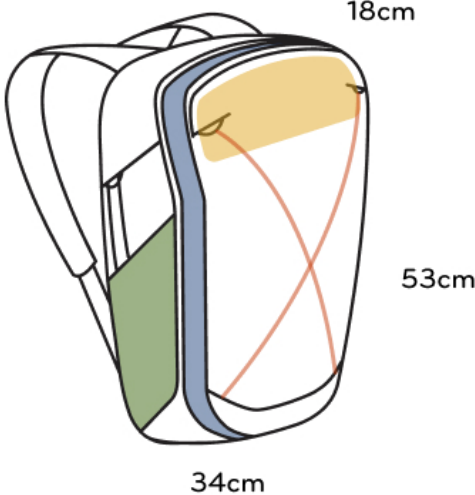

18cm

53cm

34cm

AVAILABLE IN BLACK, SAGE, & MIDNIGHT.

SIZE	27L > 33L (expands!)
FEATURES	- Quick-access top pocket - Expandable side pockets - Zipper expansion - External carry straps
ACCESS	clamshell back access
PACKING/CAMERA CUBE CAPACITY (units)	 3*
CARRY ON	yes
LAPTOP SLEEVE	yes (16")
WEIGHT	1.44kg (3.17lb)

*only fits camera cubes when fully expanded

Diagram illustrating the dimensions and key features of the 30L Travel Backpack.

WARRANTY AND SUPPORT

Peak Design products are designed for exceptional durability and are backed by a limited lifetime warranty against defects

in materials and workmanship. This warranty covers manufacturing defects for the lifetime of the product.

For warranty claims, technical support, or any further assistance regarding your Peak Design Travel Backpack 30L, please contact Peak Design customer service directly through their official channels.

Manufacturer: Peak Design

Website: www.peakdesign.com

Return Policy: This product is generally subject to a 30-day return policy from the point of purchase. Please refer to the specific return terms and conditions of your retailer for detailed information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question