

[Manuals.plus](#) /

> [CHULUX](#) /

> CHULUX Slim Single Serve Coffee Maker (Model CL-KM807-L) User Manual

CHULUX CL-KM807-L

CHULUX Slim Single Serve Coffee Maker (Model CL-KM807-L) User Manual

Your guide to brewing perfect coffee with ease.

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your CHULUX coffee maker. Keep this manual for future reference.

- Do not immerse the appliance, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always fill the water reservoir before brewing.
- Do not open the brewer head during the brewing process.
- Only available at elevations below 4,000 feet.

PACKAGE CONTENTS

Verify that all items are included in your package:

- One Cup Coffee Maker
- Removable Drip Tray
- Stainless Steel Drip Tray Cover

PRODUCT OVERVIEW

Familiarize yourself with the components of your CHULUX Slim Single Serve Coffee Maker.



Image: Diagram showing the unique 4-hole needle design, large and deep water fill area, and compatibility with coffee pods and tea capsules.

The coffee maker features a unique 4-hole needle design for even extraction and a large, deep water fill area to prevent spilling. It is compatible with K pod 1.0 & 2.0 coffee and tea capsules.

SETUP

Before first use, perform a cleaning cycle without a coffee pod.

1. Place the coffee maker on a stable, flat surface.
2. Plug the power cord into a grounded electrical outlet.

3. Lift the brewer head.
4. Fill the water reservoir with fresh water (6-12 oz). Do not exceed the MAX fill line.
5. Place a mug on the drip tray.
6. Close the brewer head and press the power button to start a cleaning cycle. Discard the hot water.
7. Repeat this process 2-3 times to ensure the machine is clean.

OPERATING INSTRUCTIONS

Brewing Coffee

Follow these simple steps to brew your coffee:



Image: Visual guide for brewing coffee in four steps.

1. **Step 1: Add Water.** Open the brewer head and pour your desired amount of fresh water (6-12 oz) into the reservoir. The fill area is 2 inches deep for easy pouring.
2. **Step 2: Insert K-Cup.** Place a K-pod 1.0 or 2.0 coffee or tea capsule into the pod holder.
3. **Step 3: Close and Lock Lid.** Close the brewer head firmly until it locks into place.
4. **Step 4: Press Start.** Place your mug on the drip tray and press the power button. The indicator light will turn blue, and brewing will begin shortly.

The coffee maker reaches an ideal temperature of 190°F in approximately 2 minutes. It features an auto-off function after each brew for energy efficiency.

Hot & Better Tasting

Perfectly brewing coffee within 185-193°F



Image: The CHULUX coffee maker dispensing hot coffee into a mug, illustrating the brewing process.

Mug Size Compatibility

The removable and upward adjustable drip tray accommodates various mug sizes:

- Up to 7.3" without the drip tray.
- 6.2" with the drip tray.
- 4.3" with the drip tray adjusted upward.

Fits Various Mug Sizes

Removable and upward adjustable drip tray to fit a variety of cups <4.3" or <7.3" high.



Image: Two CHULUX coffee makers demonstrating how the adjustable drip tray allows for different mug heights (4.3" and 7.3").

MAINTENANCE

Cleaning

Regular cleaning ensures optimal performance and taste.

- Wipe the exterior with a damp cloth.
- The drip tray and cover are removable for easy cleaning.
- The coffee maker is **not** dishwasher safe.

Descaling

Descaling is recommended every 1-2 months, depending on usage frequency and water hardness, to prevent clogging and maintain flow.



Image: Visual guide for descaling the coffee maker.

1. Use a sharp item to clear the four holes in the top lid if they appear clogged.
2. Remove and clean the water filter basket.
3. Add pre-made descaling liquid or a vinegar-water solution to the water tank, then start a brewing cycle without a pod.
4. After the first cycle, add the same descaling solution to the tank again and brew after 1 hour.
5. Run several cycles with fresh water to rinse thoroughly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee not brewing / No water dispensing	Water reservoir empty; Clogged needle; Machine not powered on.	Ensure water is added; Clean the 4-hole needle; Check power connection and press start button.
Coffee tastes weak or watery	Too much water for the pod; Pod not properly punctured; Old coffee pod.	Use less water (6-8 oz for stronger brew); Ensure pod is seated correctly and lid is closed firmly; Use fresh pods.
Machine leaks	Drip tray not correctly installed; Overfilling water reservoir; Pod not seated correctly.	Ensure drip tray is secure; Do not overfill water past MAX line; Re-seat the coffee pod.
Brewing is slow	Mineral buildup (scaling).	Perform a descaling cycle as described in the Maintenance section.

SPECIFICATIONS

Feature	Detail
Brand	CHULUX
Model Name	K Pod Coffee Maker
Item Model Number	CL-KM807-L

Feature	Detail
Color	Lavender
Product Dimensions	9.7"D x 4.4"W x 8.98"H
Item Weight	2.6 pounds
Coffee Maker Type	Drip Coffee Machine
Compatible Coffee Pods	K-Cup, K-Cup 2.0
Capacity	6 to 12 Fluid Ounces (adjustable)
Voltage	120 Volts
Operation Mode	Fully Automatic
Special Features	Fit 7.3" Travel Mug, Only 4 inch Wide, Unique 4-Hole Needle, Portable, Auto Shut-Off, Compact, Lightweight
Is Dishwasher Safe	No

WARRANTY AND SUPPORT

For warranty information or customer support, please contact CHULUX directly through their official website or the retailer where the product was purchased. Keep your purchase receipt for proof of purchase.