

[Manuals.plus](#) /

› [SUNGOOYUE](#) /

› SUNGOOYUE Portable MP3 Music Player Set Instruction Manual

SUNGOOYUE SUNGOOYUExgog5w0mpk

SUNGOOYUE Portable MP3 Music Player Set Instruction Manual

Model: SUNGOOYUExgog5w0mpk

1. PRODUCT OVERVIEW

The SUNGOOYUE Portable MP3 Music Player Set provides a compact and durable solution for enjoying your music on the go. Crafted from aluminum alloy, this mini MP3 player features a convenient back-clip design, making it suitable for various activities. It supports MicroSD card expansion up to 8GB and offers over 5 hours of continuous playback.

- Light in weight, portable and easy to carry, can be used for outside activity.
- Back-clip design, can be fixed firmly on your cloth or other devices, also suitable for sports.
- Long battery life, can play for more than 5 hours, more convenient to use.
- Built-in memory card expansion slot, supports a maximum extension of 8GB.



Image: Front view of the MP3 player, showing the central control panel with play/pause, track navigation, and volume buttons.

2. PACKAGE CONTENTS

Verify that all items are present in your package:

- 2 x SUNGOOYUE Portable MP3 Music Player
- 1 x Earphones
- 1 x USB Charging Cable



Image: The MP3 player shown alongside the included earphones and USB charging cable.

3. DEVICE LAYOUT

Familiarize yourself with the player's buttons and ports:

- **Central Control Panel:** Play/Pause, Next Track, Previous Track, Volume Up (+), Volume Down (-)
- **Side Ports:** USB charging/data port, MicroSD card slot
- **Top:** 3.5mm Headphone Jack, Power ON/OFF Switch

- **Back:** Integrated Clip



Image: Top view of the MP3 player, highlighting the 3.5mm headphone jack and the ON/OFF power switch.



Image: Side view of the MP3 player, illustrating the USB charging/data port and the MicroSD card expansion slot.

4. SETUP

4.1 Charging the Player

1. Connect the small end of the included USB cable to the player's USB port.
2. Connect the standard USB end to a computer's USB port or a compatible USB wall adapter (not included).
3. Allow the player to charge fully before first use. A full charge provides over 5 hours of playback.

4.2 Inserting a MicroSD Card

1. Locate the MicroSD card slot on the side of the player.
2. Gently insert a MicroSD card (up to 8GB, not included) into the slot until it clicks into place. Ensure the card is oriented correctly.
3. To remove, push the card inward until it clicks, then release, and it will spring out.

4.3 Loading Music Files

1. Ensure a MicroSD card is inserted into the player.
2. Connect the player to your computer using the USB cable. The player will appear as a removable disk drive.
3. Drag and drop your MP3 audio files from your computer to the player's disk drive.
4. Safely eject the player from your computer before disconnecting the USB cable.

4.4 Connecting Earphones

1. Insert the 3.5mm jack of your earphones into the headphone port located on the top of the player.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- To power on, slide the ON/OFF switch (located on the top) to the 'ON' position.
- To power off, slide the ON/OFF switch to the 'OFF' position.

5.2 Playback Controls

- **Play/Pause:** Press the central button to start or pause playback.
- **Next Track:** Press the right arrow button to skip to the next song.
- **Previous Track:** Press the left arrow button to go back to the beginning of the current song, or press twice to go to the previous song.
- **Volume Up:** Press the '+' button to increase the volume.
- **Volume Down:** Press the '-' button to decrease the volume.

5.3 Using the Back Clip

The integrated back clip allows you to securely attach the MP3 player to clothing, bags, or other items, making it ideal for sports and active use.

- Simply press the clip open and attach it to your desired location.
- Ensure the player is securely fastened to prevent accidental detachment during movement.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the player's surface. Avoid liquid cleaners or abrasive materials.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the player frequently. Charge it regularly, even if not in use for extended periods.
- **Water Exposure:** This device is not waterproof. Avoid exposure to water or high humidity.

7. TROUBLESHOOTING

Problem	Possible Solution
Player does not turn on.	Ensure the battery is charged. Connect to a power source and try again. Check the ON/OFF switch position.
No sound from earphones.	Check if earphones are properly plugged in. Increase the volume. Test with different earphones. Ensure music files are loaded correctly.
Music files not playing.	Ensure files are in MP3 format. Verify the MicroSD card is inserted correctly and contains music.
Player not recognized by computer.	Try a different USB port or cable. Ensure the player is powered on. Restart your computer.

8. SPECIFICATIONS

Feature	Detail
Brand	SUNGOOYUE

Feature	Detail
Model Number	SUNGOOYUExgog5w0mpk
Connectivity Technology	USB
Memory Storage Capacity	Supports MicroSD up to 8 GB (card not included)
Color	Silver
Compatible Devices	Headphones, Earphones
Media Type	Memory Card
Display Technology	No display
Supported Audio Standards	MP3
Battery Average Life	5+ Hours
Material	Aluminum Alloy
Special Feature	Portable, Back-Clip Design

9. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For specific warranty details, please refer to the product packaging or contact your retailer.

For technical support or further assistance, please contact SUNGOOYUE customer service through the retailer's platform or the official brand website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question