

[Manuals.plus](#) /

› [AKCISOT](#) /

› AKCISOT Atomic 10 Inch Wall Clock User Manual

AKCISOT AKCISOT483

AKCISOT Atomic 10 Inch Wall Clock User Manual

Model: AKCISOT483

PRODUCT OVERVIEW

The AKCISOT Atomic 10 Inch Wall Clock is designed for precise timekeeping by automatically synchronizing with the atomic clock signal. Its silent sweep movement ensures a quiet environment, making it ideal for various indoor settings. The clear, easy-to-read display features bold numbers for excellent visibility.

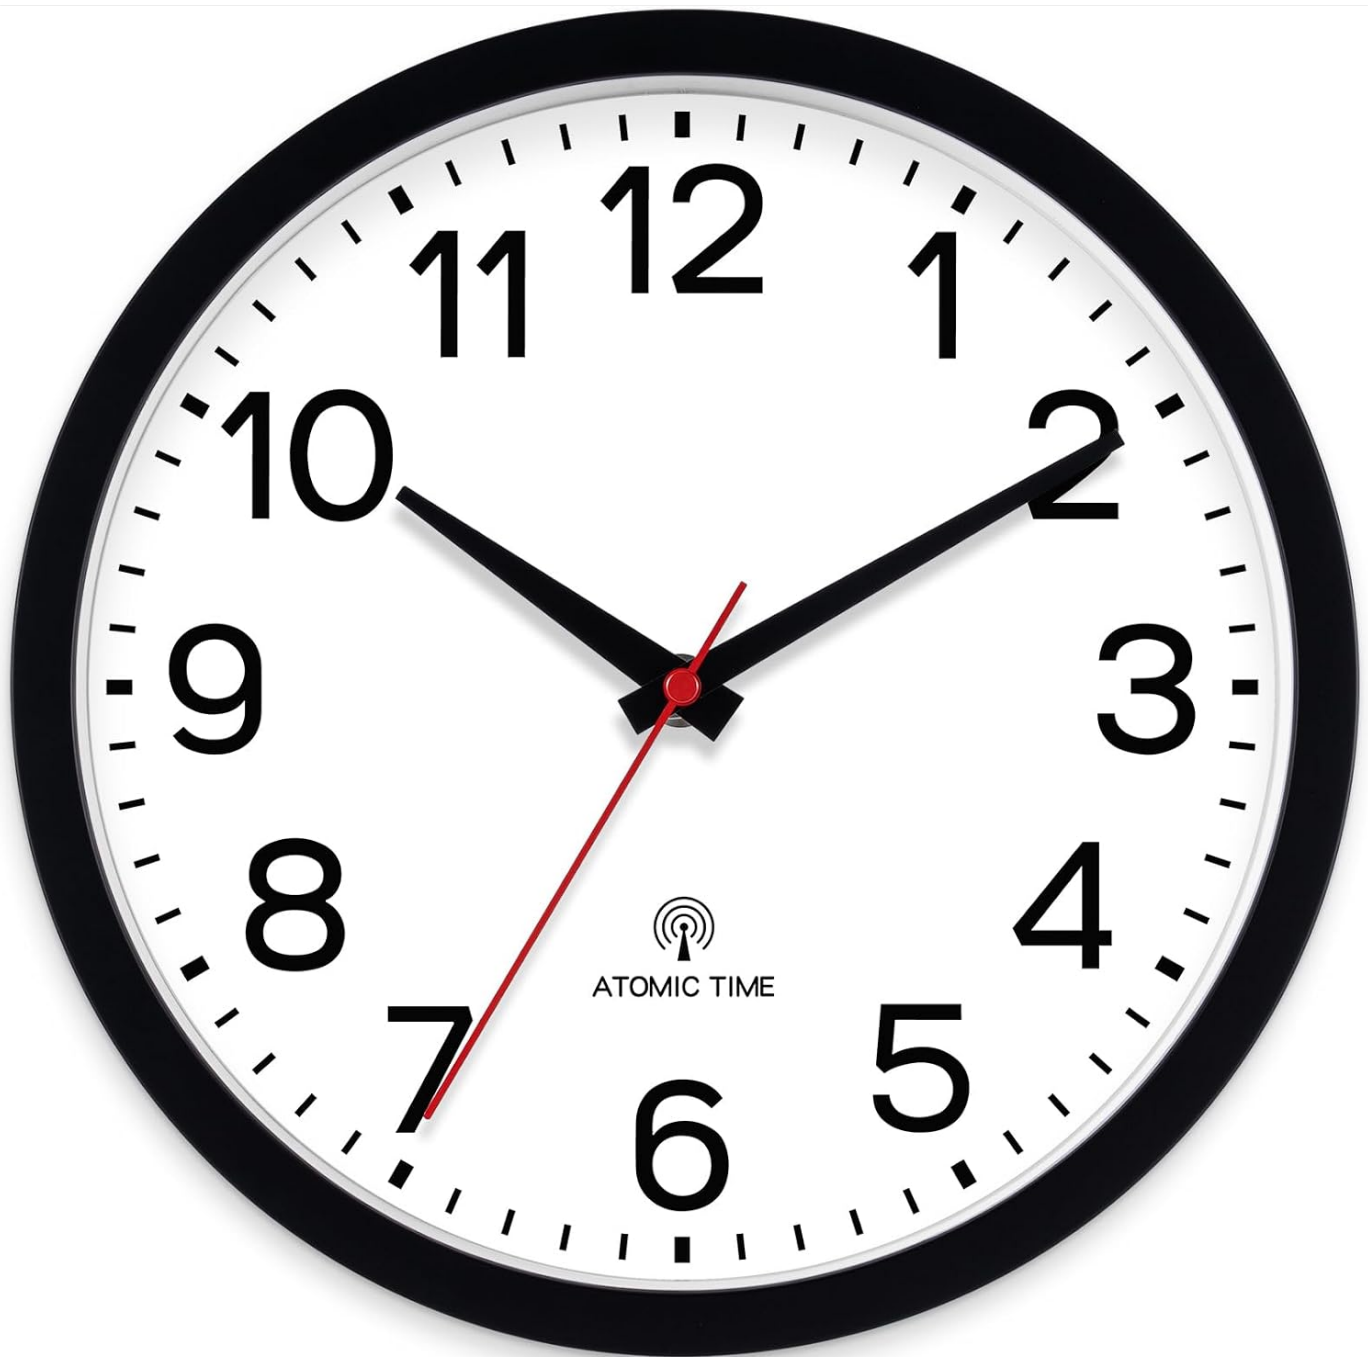


Figure 1: Front view of the AKCISOT Atomic 10 Inch Wall Clock.

SETUP

1. Battery Installation

To power your AKCISOT Atomic Wall Clock, you will need one (1) AA alkaline battery (not included). Follow these steps for proper installation:

1. Locate the battery compartment on the back of the clock.
2. Insert one AA alkaline battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
3. Close the battery compartment cover securely.



Figure 2: Rear view with battery compartment and controls.

2. Initial Synchronization

Upon battery installation, the clock will automatically attempt to receive the atomic time signal. This process may take several minutes to an hour, depending on your location and signal strength. For best reception, place the clock near a window and away from large metal objects or electronic devices that may cause interference.

The clock will set itself to the correct time once a stable signal is received. The second hand will typically move to the 12 o'clock position and pause until synchronization is complete, then it will move to the correct time.

OPERATING INSTRUCTIONS

The AKCISOT Atomic Wall Clock features simple controls located on the back for manual adjustments if needed.

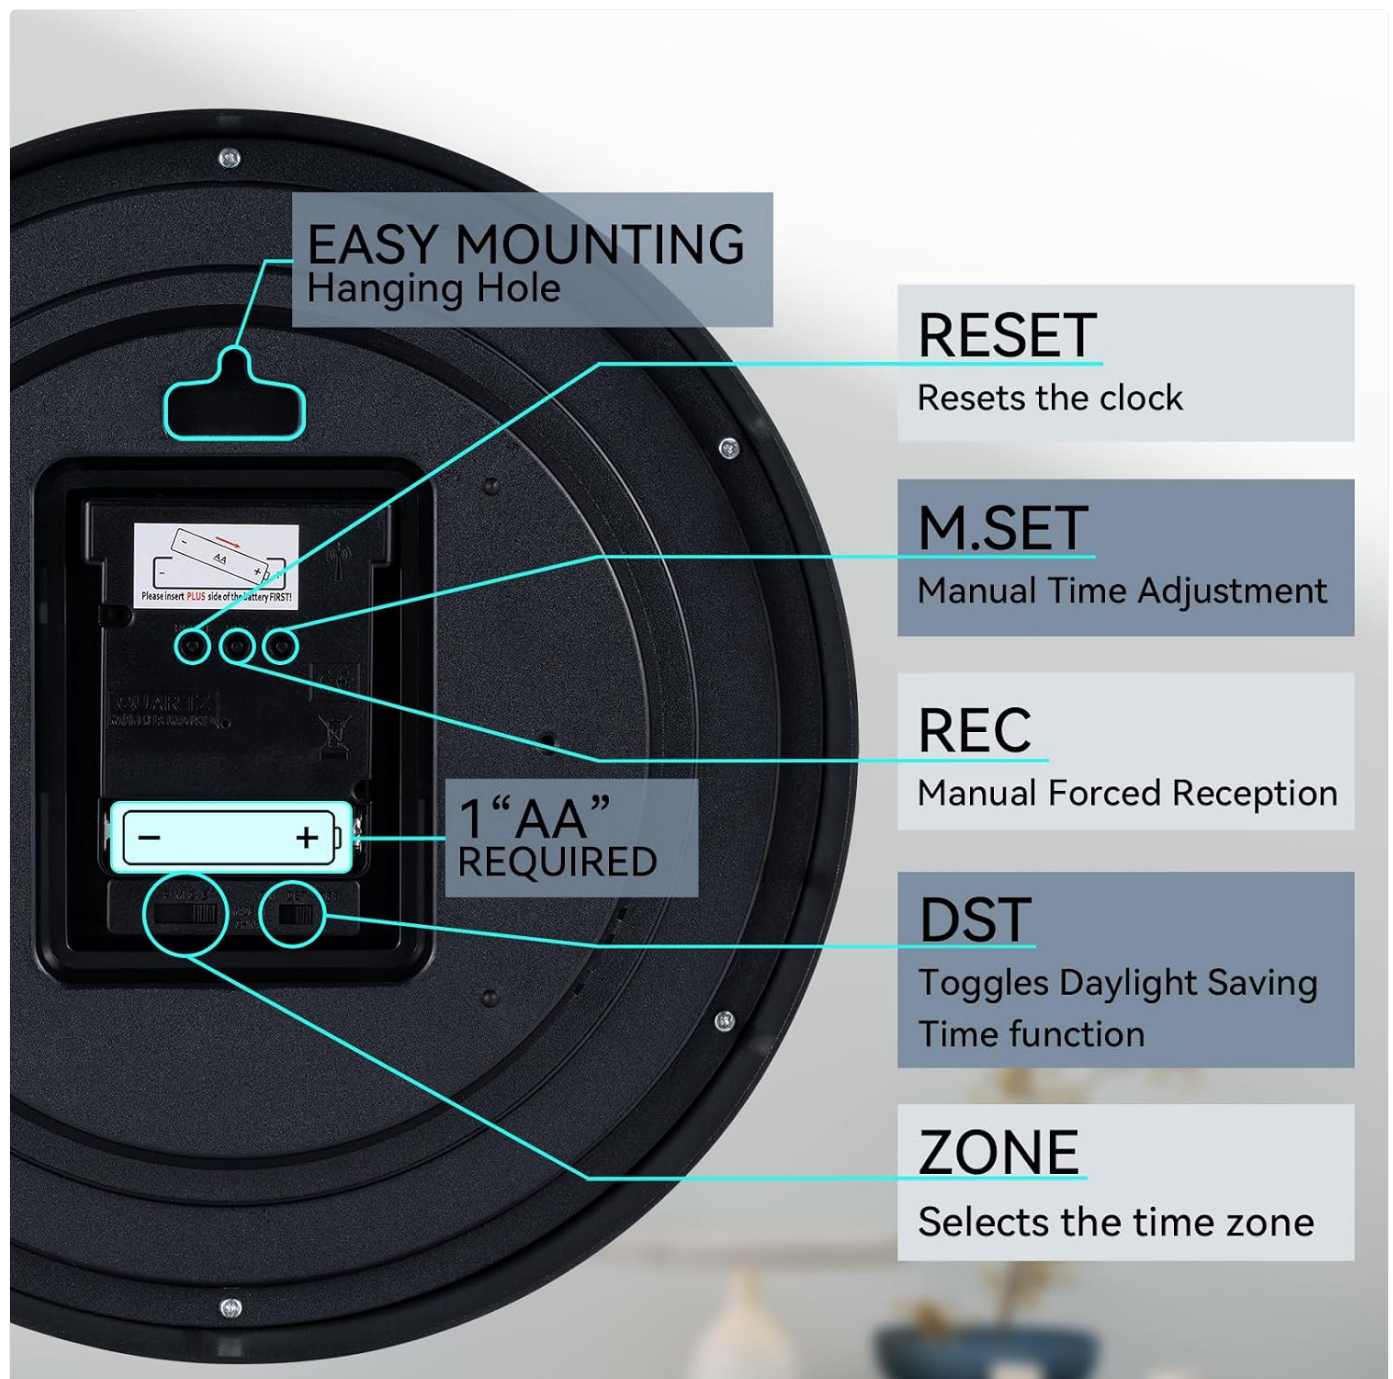


Figure 3: Control buttons on the back of the clock.

1. Setting Time Zone

The clock allows you to select your specific time zone. Use the **ZONE** switch on the back of the clock to choose from the following options:

- **PT** - Pacific Time
- **MT** - Mountain Time
- **CT** - Central Time
- **ET** - Eastern Time

Select the appropriate time zone for your region. The clock will adjust accordingly after successful signal reception.

2. Daylight Saving Time (DST) Adjustment

The clock can be manually set to account for Daylight Saving Time. Use the **DST** switch on the back of the clock to toggle this function On or Off. Ensure this setting matches your local DST observance.

3. Manual Time Adjustment (M.SET) and Forced Reception (REC)

- **M.SET:** In rare cases where the atomic signal is not available or you need to set the time manually, use the **M.SET** button to advance the time. Press and hold to move the hands quickly.
- **REC:** To manually force the clock to attempt receiving the atomic signal, press the **REC** button. This can be useful if you suspect the clock has lost synchronization.
- **RESET:** The **RESET** button is used to reset the clock's internal mechanism, typically after battery replacement or if the clock is not functioning correctly.

MAINTENANCE

1. Cleaning

To maintain the appearance of your clock, wipe it with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the finish or internal components.

2. Battery Replacement

Replace the AA alkaline battery annually or when the clock's movement becomes erratic or stops. Always use a fresh, high-quality alkaline battery for optimal performance.

TROUBLESHOOTING

If you encounter issues with your AKCISOT Atomic Wall Clock, refer to the table below for common problems and their solutions.

Problem	Possible Cause	Solution
Clock not setting time automatically.	Weak or no atomic signal reception.	• Relocate the clock closer to a window or in an open area. • Ensure no large metal objects or electronics are interfering with the signal. • Press the REC button to force signal reception. • Allow up to 24 hours for the clock to receive the signal, especially in areas with weaker reception.
Clock hands are not moving or are stuck.	Low battery or incorrect battery installation.	• Replace the battery with a fresh AA alkaline battery. • Check that the battery is inserted with correct polarity (+/-). • Press the RESET button.
Time is incorrect after initial setup.	Incorrect time zone setting or DST setting.	• Verify the ZONE switch is set to your correct time zone. • Check the DST switch setting to ensure it matches your local Daylight Saving Time observance. • If necessary, manually adjust the time using the M.SET button.
Clock makes ticking noise.	This model features a silent sweep movement.	The AKCISOT Atomic Wall Clock is designed with a silent sweep second hand. If you hear ticking, please ensure you have the correct model. If the issue persists, contact customer support.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	AKCISOT

Feature	Detail
Model Number	AKCISOT483
Color	Atomic_black
Display Type	Analog
Style	Modern
Special Feature	Silent Clock, Atomic Time Synchronization
Product Dimensions	10"W x 1.38"H
Power Source	Battery Powered (1 AA alkaline battery, not included)
Room Type	Bathroom, Bedroom, Home Office, Kitchen, Living Room
Shape	Round
Indoor/Outdoor Usage	Indoor, Outdoor (covered area recommended for outdoor)
Material	Plastic
Frame Material	Plastic
Item Weight	14.1 ounces
Watch Movement	Quartz
Operation Mode	Atomic

WARRANTY AND SUPPORT

Warranty Information

This product is sold without a specific manufacturer's warranty. Please refer to the retailer's return policy for any issues within the return period.

Customer Support

For further assistance or inquiries not covered in this manual, please contact AKCISOT customer support through the retailer's platform where the product was purchased. Provide your product model number (AKCISOT483) and a detailed description of your issue for efficient support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question