

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [BLITZHOME](#) /
- › [BLITZHOME Countertop Portable Mini Dishwasher BH-6-CDW User Manual](#)

## BLITZHOME BH-6-CDW

# BLITZHOME Countertop Portable Mini Dishwasher BH-6-CDW User Manual

Model: BH-6-CDW

## 1. INTRODUCTION

---

This manual provides detailed instructions for the safe and efficient operation, installation, and maintenance of your BLITZHOME Countertop Portable Mini Dishwasher, Model BH-6-CDW. Please read this manual thoroughly before using the appliance and retain it for future reference.



Image 1.1: BLITZHOME Countertop Portable Mini Dishwasher, front view with control panel and interior visible.

## 2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury when using your dishwasher, follow these basic precautions:

- Read all instructions before using the appliance.
- Use the dishwasher only for its intended function.
- Do not operate the dishwasher if it has a damaged power cord or plug, if it is not working properly, or if it has been dropped or damaged.
- Connect to a properly rated, protected, and grounded power supply.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep children away from detergent and rinse aid.
- Ensure proper ventilation around the appliance.
- Do not attempt to repair or replace any part of your dishwasher unless specifically recommended in this manual.

- Always unplug the dishwasher before cleaning or performing maintenance.
- Use only detergents and rinse aids recommended for automatic dishwashers.
- Load sharp items so they are not likely to damage the door seal or interior.
- Do not touch the heating element during or immediately after use.

### 3. PACKAGE CONTENTS

---

Verify that all items listed below are included in your package:

- 1x Dishwasher Unit
- 1x Measuring Cup
- 1x Fruit and Vegetable Basket
- 1x 59.06" Drain Hose
- 1x 59.06" Water Inlet Hose
- 1x Clamp
- 1x Suction Cup
- 1x Instruction Manual (this document)

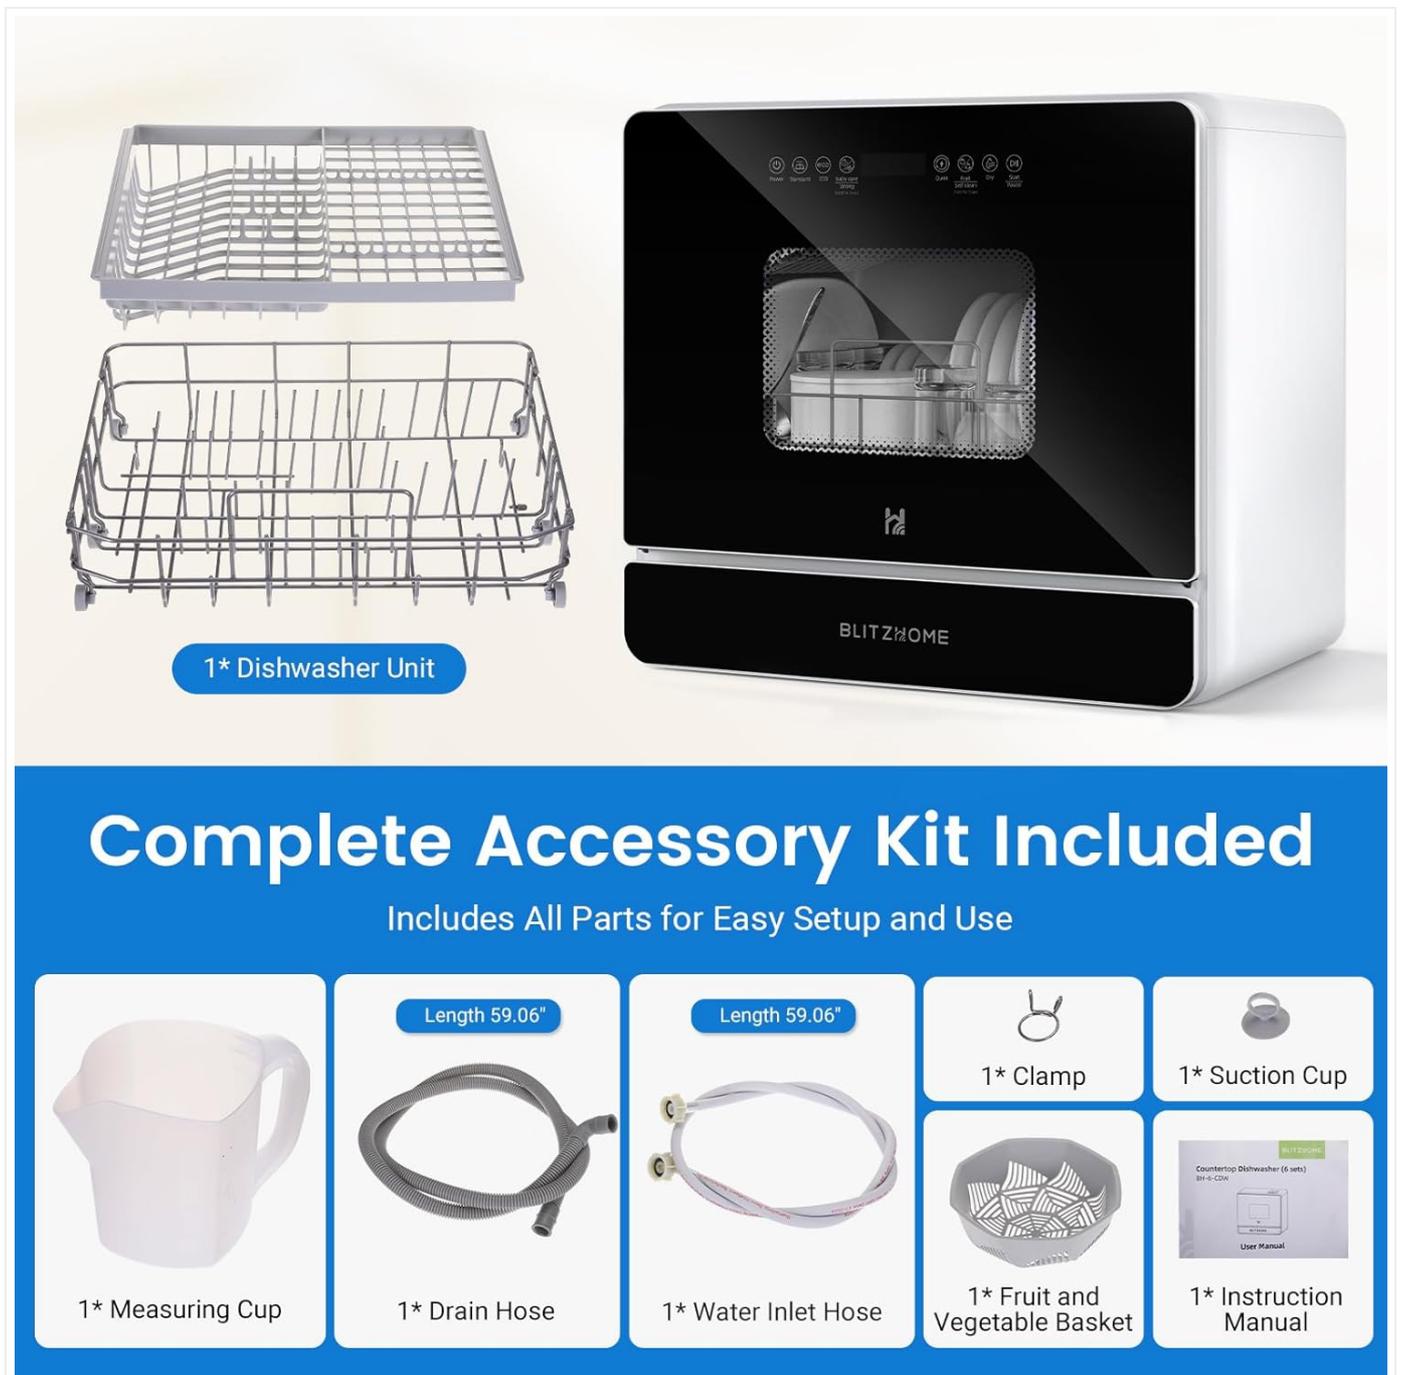


Image 3.1: Included accessories for the BLITZHOME Countertop Portable Mini Dishwasher.

## 4. PRODUCT OVERVIEW

### 4.1 Components

Familiarize yourself with the main components of your dishwasher:

- **Control Panel:** Touch-sensitive interface for program selection and operation.
- **Dish Rack:** Upper and lower racks for loading dishes, cups, and cutlery.
- **Spray Arms:** Three spray arms ensure 360° cleaning coverage.
- **Water Inlet:** Point for manual water filling or hose connection.
- **Drain Outlet:** Connection point for the drain hose.
- **Filter Assembly:** Located at the bottom of the wash tub, collects food particles.
- **Detergent Dispenser:** For adding dishwasher detergent.
- **Water Tank:** 5.2L built-in tank for manual water supply.

# Compact Design, Large Capacity

Perfect for Daily Use in 4-6 Person Households

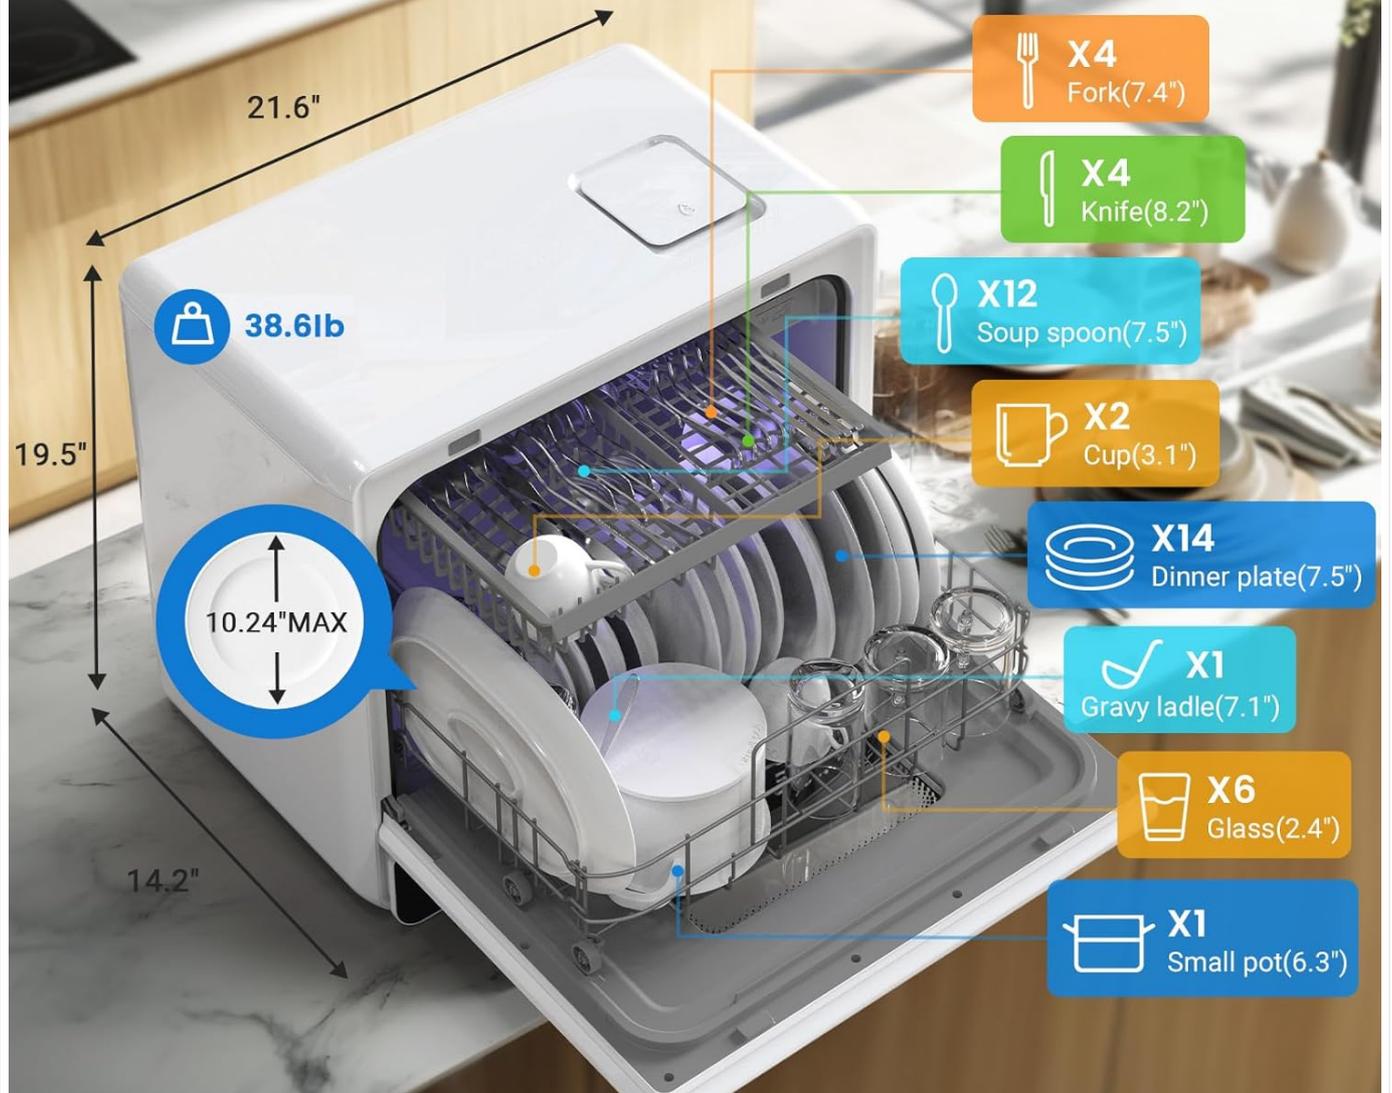


Image 4.1: Dishwasher interior showing dish racks and capacity. Dimensions are 21.6" (length) x 14.2" (width) x 19.5" (height).

## Detailed Interior Design for Optimal Performance



Image 4.2: Detailed interior features including automatic LED light, removable storage rack, detachable filter, water inlet, and leak protection.

## 5. SETUP AND INSTALLATION

---

### 5.1 Placement

Place the dishwasher on a flat, stable surface. Ensure there is adequate space around the unit for ventilation and access to the water inlet/drain. The compact design allows placement in various locations such as countertops, RVs, or dorms.

### 5.2 Water Supply Modes

Your dishwasher supports two water supply methods:

- **Tank Mode (Manual Fill):** Use the included measuring cup to pour water directly into the water inlet at the top of the unit. The built-in 5.2L water tank will hold enough water for a full cycle.
- **Faucet Mode (Automatic Fill):** Connect the water inlet hose to a compatible faucet. Ensure the connection is secure to prevent leaks.

# No Installation Required Just Place and Go

Tank Mode and Faucet Mode, Designed for Convenience



Image 5.1: Illustration of dual water supply options: manual tank fill and automatic faucet connection.

## 5.3 Drain Hose Connection

Connect the drain hose to the drain outlet on the back of the dishwasher. Secure the other end of the drain hose into a sink or a suitable drainage container using the provided clamp and suction cup.

## 6. OPERATING INSTRUCTIONS

### 6.1 Loading Dishes

Load dishes into the racks, ensuring they do not block the spray arms. Larger items can be placed in the lower rack. The top rack can be removed to accommodate plates up to 11.81 inches.



Image 6.1: Dishwasher racks with examples of loaded dishes and instructions for removing the upper rack.

## 6.2 Adding Detergent

Add a small amount of dishwasher detergent to the dispenser. Do not use liquid dish soap, as it can cause excessive suds.

## 6.3 Selecting a Wash Program

The dishwasher offers 9 wash programs. Select the appropriate program using the control panel:

- **Standard (58 mins):** For daily dishware with normal soil.
- **ECO (88 mins):** Energy-efficient cycle for normally soiled dishes.
- **Baby Care (78 mins):** High-temperature wash for baby bottles and items.
- **Strong (98 mins):** For heavily soiled pots and pans.
- **Quick (28 mins):** For lightly soiled dishes that need a fast wash.
- **Fruit (19 mins):** Gentle wash for fruits and vegetables.
- **Self-Clean (28 mins):** For cleaning the dishwasher interior.
- **Dry (60 mins):** Activates the PTC hot air drying system.
- **Delayed Start (1-24H):** Allows you to set a delayed start time for any wash program.

# 9 Programs for Various Cleaning Scenarios

Effortlessly Clean Tableware, Fruits, Vegetables, and Baby Items



Image 6.2: Overview of the 9 wash programs and control panel interface.

## 6.4 Starting a Cycle

After loading dishes and selecting a program, press the "Start/Pause" button to begin the wash cycle. The dishwasher will automatically proceed through washing, rinsing, and drying phases.

## 6.5 Hot Air Drying and Air Refresh

The PTC hot air drying system activates for 60 minutes after a wash cycle to ensure dishes are dry. The 72-hour air refresh function circulates air to prevent odors and maintain hygiene.

# PTC Hot Air Drying and Air Refresh Storage System

Keeps Tableware Fresh and Odor-Free, Even After Extended Storage

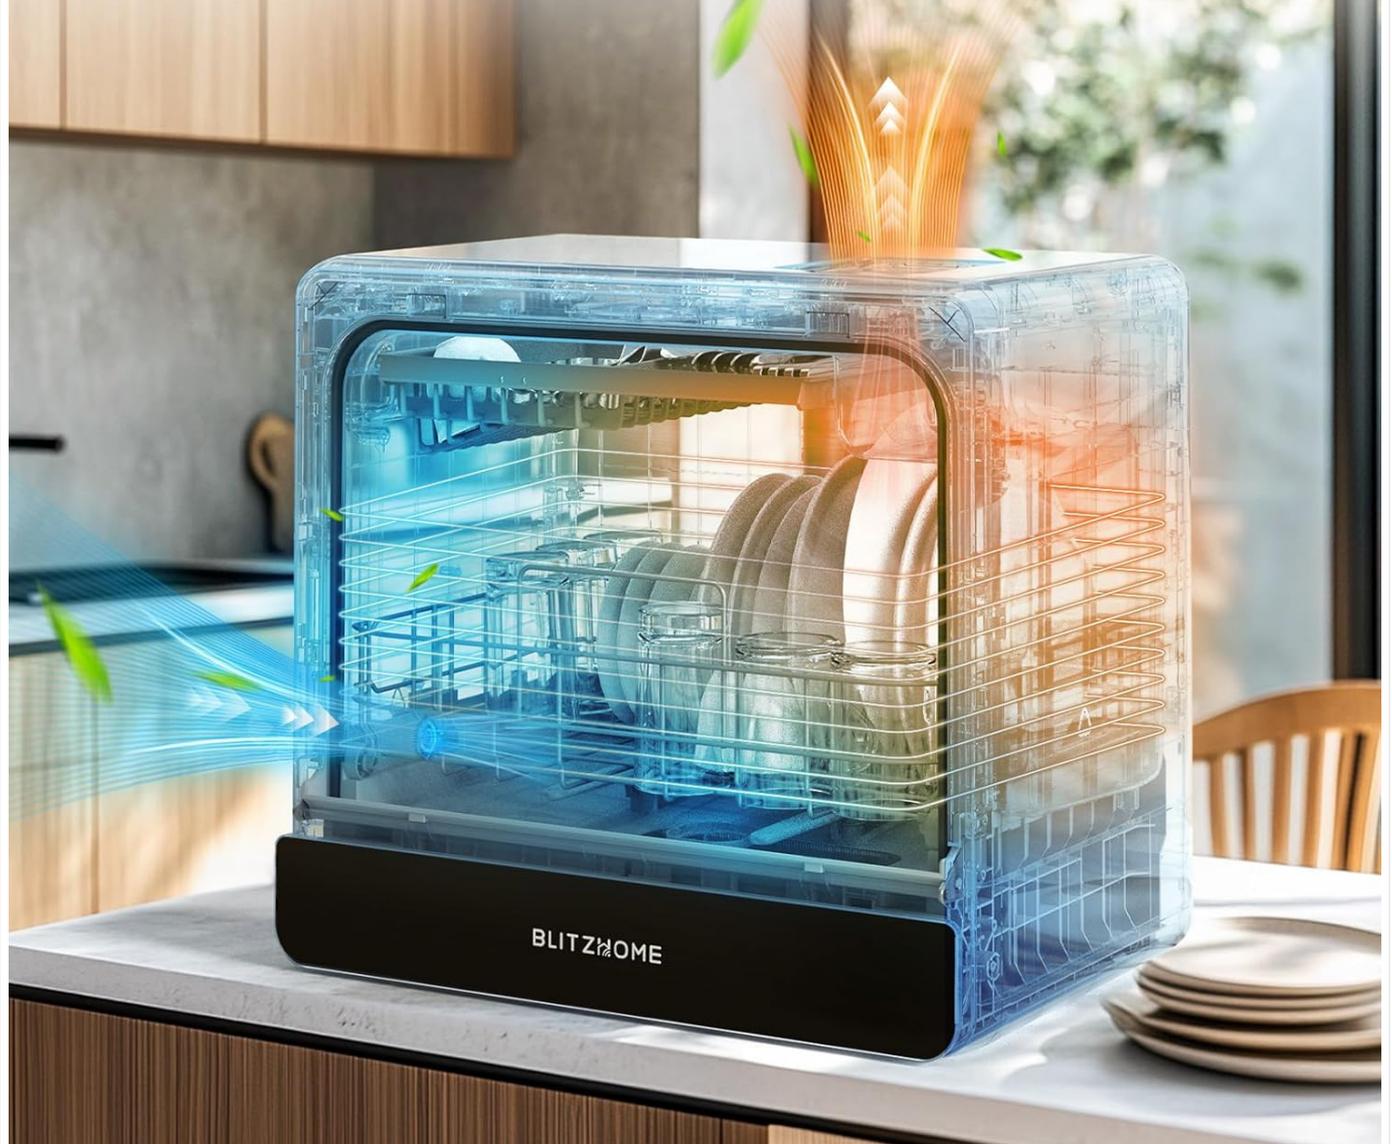


Image 6.3: Visual representation of the PTC hot air drying and air refresh storage system.

## 6.6 Delayed Start Function

To use the delayed start function, select your desired wash program, then press the 'Delayed Start' button repeatedly to set the delay time from 1 to 24 hours. The cycle will begin automatically after the set delay.



Image 6.4: The 1-24 hour flexible delayed start feature.

## 7. MAINTENANCE AND CARE

### 7.1 Cleaning the Filter Assembly

Regularly clean the filter assembly to ensure optimal performance. Twist and remove the filter from the bottom of the wash tub. Rinse it under running water to remove food particles. Reinstall securely.

### 7.2 Cleaning the Spray Arms

Check the spray arm nozzles for blockages. If clogged, remove the spray arms and clear any debris with a thin wire or toothpick. Rinse and reattach.

### 7.3 Cleaning the Exterior and Interior

Wipe the exterior of the dishwasher with a damp cloth. For the interior, run a "Self-Clean" cycle periodically with a dishwasher cleaner to remove mineral buildup and odors.

## 8. TROUBLESHOOTING

Refer to the table below for common issues and their solutions:

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; Door not closed properly; Program not selected.	Ensure power cord is securely plugged in; Close the door firmly; Select a wash program and press Start.
Dishes not clean	Improper loading; Clogged spray arms; Insufficient detergent; Filter clogged.	Reload dishes correctly; Clean spray arm nozzles; Use recommended amount of detergent; Clean the filter assembly.
Water not draining	Drain hose kinked or blocked; Drain filter clogged.	Check and straighten drain hose; Clean the drain filter.
Excessive suds	Incorrect detergent used; Too much detergent.	Use only automatic dishwasher detergent; Reduce detergent quantity.
Dishwasher is noisy	Dishes rattling; Foreign object in pump; Appliance not level.	Rearrange dishes; Check for and remove foreign objects; Ensure dishwasher is on a level surface.

## 9. SPECIFICATIONS

Feature	Detail
Brand	BLITZHOME
Model Name	BCD6W
Model Number	BH-6-CDW
Form Factor	Mini, Countertop
Dimensions (L x W x H)	21.57 x 14.17 x 19.53 inches
Item Weight	38.5 pounds (17.5 Kilograms)
Voltage	120 Volts
Annual Energy Consumption	950 Watts
Water Consumption (per cycle)	5.2 Liters (approx. 1.37 Gallons)
Capacity	5.2 Liters (internal tank)
Number of Wash Programs	9 (Standard, ECO, Baby Care, Strong, Quick, Fruit, Self-Clean, Dry, Delayed Start)
Special Features	2 Water Supply Modes, 24Hrs Delay Start, PTC Hot Air Drying, 72H Air Refresh Storage, 360° Spray Arms
Material	Stainless Steel
Controls Type	Touch
Noise Level	56 dB
UPC	695845667114

## 10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official BLITZHOME website. Keep your proof of purchase for warranty claims.

You can visit the BLITZHOME store on Amazon for more information: [BLITZHOME Store](#)



### Related Documents - BH-6-CDW

	<p><a href="#">BLITZHOME Mini Dishwasher CDW1: Product Introduction and Parts List</a></p> <p>This document provides an introduction to the BLITZHOME Mini Dishwasher, model CDW1, and lists its key components. It covers essential parts like the water inlet, control panel, spray arm, filter, door, and various baskets and hoses.</p>
	<p><a href="#">BLITZHOME Sous Vide Cooker User Manual</a></p> <p>User manual for the BLITZHOME Sous Vide Cooker, a WiFi-enabled 1100W immersion circulator with app control, accurate temperature and timer settings, and quiet operation.</p>

	<p><a href="#">Danby DDW621WDB 6-Place Setting Countertop Dishwasher   White</a></p> <p>Explore the features and specifications of the Danby DDW621WDB countertop dishwasher. This compact, energy-efficient appliance offers 6 place settings, multiple wash cycles, and a convenient delayed wash feature, making it ideal for small families.</p>
	<p><a href="#">VEVOR Cabinet Access Door User Manual and Specifications</a></p> <p>Comprehensive guide for VEVOR Cabinet Access Doors, including safety instructions, assembly steps, product parameters for models BH-001 to BH-020, and maintenance tips. Find detailed specifications and installation guidance.</p>
	<p><a href="#">COMFEE Countertop Dishwasher User Manual</a></p> <p>Comprehensive user manual for the COMFEE Countertop Dishwasher, detailing installation, operation, maintenance, troubleshooting, and warranty information. Features include 8 washing programs, 6 place settings, and Energy Star certification.</p>
	<p><a href="#">BLITZHOME Mini Dishwasher CDW1: Product Introduction and Parts List</a></p> <p>This document provides an introduction to the BLITZHOME Mini Dishwasher, model CDW1, and lists its key components. It covers essential parts like the water inlet, control panel, spray arm, filter, door, and various baskets and hoses.</p>

Documents - BLITZHOME – BH-6-CDW

Produktdatenblatt																																							
<p>DELEGIERTE VERORDNUNG DER KOMMISSION zur Ergänzung der Richtlinie 2002/95/EG des Rates über die Bekämpfung von Haushaltsgeräten</p> <p>Name oder Handelsname des Lieferanten: Blitzhome</p> <p>Anschrift des Lieferanten: MAIRWAY Consulting US (Haftungsbeschränkt), Am Maibusch 108-110, 45883, Gelsenkirchen, Germany, DE</p> <p>Modellnummer: BH6-CDW</p> <p>Allgemeine Produktparameter:</p> <table border="1"> <thead> <tr> <th>Parameter</th> <th>Wert</th> <th>Parameter</th> <th>Wert</th> </tr> </thead> <tbody> <tr> <td>Nennkapazität<sup>1)</sup> [ps]</td> <td>4</td> <td>Abmessungen in cm</td> <td>Höhe: 50 Breite: 36 Tiefe: 36</td> </tr> <tr> <td>EEH<sup>2)</sup></td> <td>53,0</td> <td>Energoeffizienzklasse<sup>3)</sup></td> <td>E</td> </tr> <tr> <td>Frühlingsleistungsfähigkeit<sup>4)</sup></td> <td>1,131</td> <td>Trüchwanneleistungsfähigkeit<sup>5)</sup></td> <td>1,015</td> </tr> <tr> <td>Energieverbrauch in kWh pro Betriebszyklus im eco-Programm bei kaltem Wasseranschluss. Der tatsächliche Energieverbrauch hängt von der jeweiligen Nutzung des Geräts ab.</td> <td>0,439</td> <td>Wasserverbrauch in Litern pro Betriebszyklus im eco-Programm. Der tatsächliche Wasserverbrauch hängt von der jeweiligen Nutzung des Geräts und vom Härtegrad des Wassers ab.</td> <td>5,4</td> </tr> <tr> <td>Programmdauer<sup>6)</sup> [min]</td> <td>2,36</td> <td>Art</td> <td>Freistehend</td> </tr> <tr> <td>Luftschallemissionswert<sup>7)</sup> [dB(A) bei 1 m]</td> <td>58</td> <td>Luftschallemissionsklasse<sup>8)</sup></td> <td>D</td> </tr> <tr> <td>Aus-Zustand (AV) (dabei zu erfassen)</td> <td>0,40</td> <td>Bereitschaftszustand (AV) (dabei zu erfassen)</td> <td>0,00</td> </tr> <tr> <td>Zemherwert (W) (dabei zu erfassen)</td> <td>0,00</td> <td>Verstärker - Bereitschaftszustand (W) (dabei zu erfassen)</td> <td>0,00</td> </tr> </tbody> </table> <p>Mindestlaufzeit der vom Lieferanten angebotenen Garantie: 12 Monate</p> <p>Weitere Angaben:</p> <p>Verweise zur Website des Lieferanten, auf der die Informationen gemäß Anhang II Nummer 6 der Verordnung (EU) 2019/2022 der Kommission zu finden sind: N/A</p> <p><sup>1)</sup> Nicht ein Programm.</p>				Parameter	Wert	Parameter	Wert	Nennkapazität <sup>1)</sup> [ps]	4	Abmessungen in cm	Höhe: 50 Breite: 36 Tiefe: 36	EEH <sup>2)</sup>	53,0	Energoeffizienzklasse <sup>3)</sup>	E	Frühlingsleistungsfähigkeit <sup>4)</sup>	1,131	Trüchwanneleistungsfähigkeit <sup>5)</sup>	1,015	Energieverbrauch in kWh pro Betriebszyklus im eco-Programm bei kaltem Wasseranschluss. Der tatsächliche Energieverbrauch hängt von der jeweiligen Nutzung des Geräts ab.	0,439	Wasserverbrauch in Litern pro Betriebszyklus im eco-Programm. Der tatsächliche Wasserverbrauch hängt von der jeweiligen Nutzung des Geräts und vom Härtegrad des Wassers ab.	5,4	Programmdauer <sup>6)</sup> [min]	2,36	Art	Freistehend	Luftschallemissionswert <sup>7)</sup> [dB(A) bei 1 m]	58	Luftschallemissionsklasse <sup>8)</sup>	D	Aus-Zustand (AV) (dabei zu erfassen)	0,40	Bereitschaftszustand (AV) (dabei zu erfassen)	0,00	Zemherwert (W) (dabei zu erfassen)	0,00	Verstärker - Bereitschaftszustand (W) (dabei zu erfassen)	0,00
Parameter	Wert	Parameter	Wert																																				
Nennkapazität <sup>1)</sup> [ps]	4	Abmessungen in cm	Höhe: 50 Breite: 36 Tiefe: 36																																				
EEH <sup>2)</sup>	53,0	Energoeffizienzklasse <sup>3)</sup>	E																																				
Frühlingsleistungsfähigkeit <sup>4)</sup>	1,131	Trüchwanneleistungsfähigkeit <sup>5)</sup>	1,015																																				
Energieverbrauch in kWh pro Betriebszyklus im eco-Programm bei kaltem Wasseranschluss. Der tatsächliche Energieverbrauch hängt von der jeweiligen Nutzung des Geräts ab.	0,439	Wasserverbrauch in Litern pro Betriebszyklus im eco-Programm. Der tatsächliche Wasserverbrauch hängt von der jeweiligen Nutzung des Geräts und vom Härtegrad des Wassers ab.	5,4																																				
Programmdauer <sup>6)</sup> [min]	2,36	Art	Freistehend																																				
Luftschallemissionswert <sup>7)</sup> [dB(A) bei 1 m]	58	Luftschallemissionsklasse <sup>8)</sup>	D																																				
Aus-Zustand (AV) (dabei zu erfassen)	0,40	Bereitschaftszustand (AV) (dabei zu erfassen)	0,00																																				
Zemherwert (W) (dabei zu erfassen)	0,00	Verstärker - Bereitschaftszustand (W) (dabei zu erfassen)	0,00																																				

[pdf]

Produktdatenblatt OTTO Modellkennung BH 6 CDW Allgemeine Produktparameter Parameter Wert Höhe 50 Breite 36 Tiefe 36 Nennkapazität a ps 4 Abmessungen in cm Tiefe 221138e3 e9a1 41a1 8ef8 5ba02ed2a83b d otto de files |||

Produktdatenblatt DELEGIERTE VERORDNUNG EU 2019/2017 DER KOMMISSION zur Energieverbrauchskennzeich ... ng UG haftungsbeschaeränt , Am Maibusch 108 - 110,45883, Gelsenkirchen, Germany, DE Modellkennung: **BH-6-CDW** Allgemeine Produktparameter: Parameter Wert Parameter Nennkapazitt a ps 4 Abmessu... lang:de score:32 filesize: 58.13 K page\_count: 2 document date: 2025-01-14