

[Manuals.plus](#) /

› [LAUDLIFE](#) /

› LAUDLIFE Cordless Electric Knife User Manual

LAUDLIFE Laudlife

LAUDLIFE Cordless Electric Knife User Manual

Model: Laudlife | ASIN: B0DDP3S8VR

1. INTRODUCTION

Thank you for choosing the LAUDLIFE Cordless Electric Knife. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new electric knife. Please read all instructions carefully before first use and retain this manual for future reference.



Image 1.1: The LAUDLIFE Cordless Electric Knife, including the main unit, two interchangeable blades, a carving fork, and its product packaging.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- **Read all instructions.**
- To protect against electrical hazards, do not immerse the knife handle, cord, or magnetic charging port in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from blades during operation to prevent injury and/or damage to the knife.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact customer support for assistance.

- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Blades are extremely sharp. Handle with care. Always hold blades by the plastic guard.
- Always ensure blades are properly locked into place before operation.
- This appliance is intended for household use only.

3. PACKAGE CONTENTS

Please check the package contents to ensure all items are present and in good condition:

- 1 x LAUDLIFE Cordless Electric Knife Handle
- 1 x 8-inch Stainless Steel Carving Blade
- 1 x 6-inch Stainless Steel Bread Blade
- 1 x Carving Fork
- 1 x Magnetic Charging Cable
- 1 x User Manual



Image 3.1: All components included in the LAUDLIFE Cordless Electric Knife package.

4. SETUP AND ASSEMBLY

4.1 Initial Charging

Before first use, fully charge the electric knife. Connect the magnetic charging cable to the charging port on the knife handle and plug the USB end into a suitable power adapter (not included). The charging indicator light will illuminate. A full charge typically takes several hours.

Magnetic Charging

Convenience and Water Resistance




**Lost Your Charging Cable?
Contact us for a Free**

Image 4.1: The magnetic charging connection for the LAUDLIFE Cordless Electric Knife.

4.2 Attaching the Blades

Select the appropriate blade set for your task (8-inch for carving meats, 6-inch for bread and softer foods). Hold the blades by the plastic guard. Align the blade bottom with the knife's insertion slot and push firmly until it clicks into place. Ensure the blade lock tab snaps into the groove on the blade for secure installation.

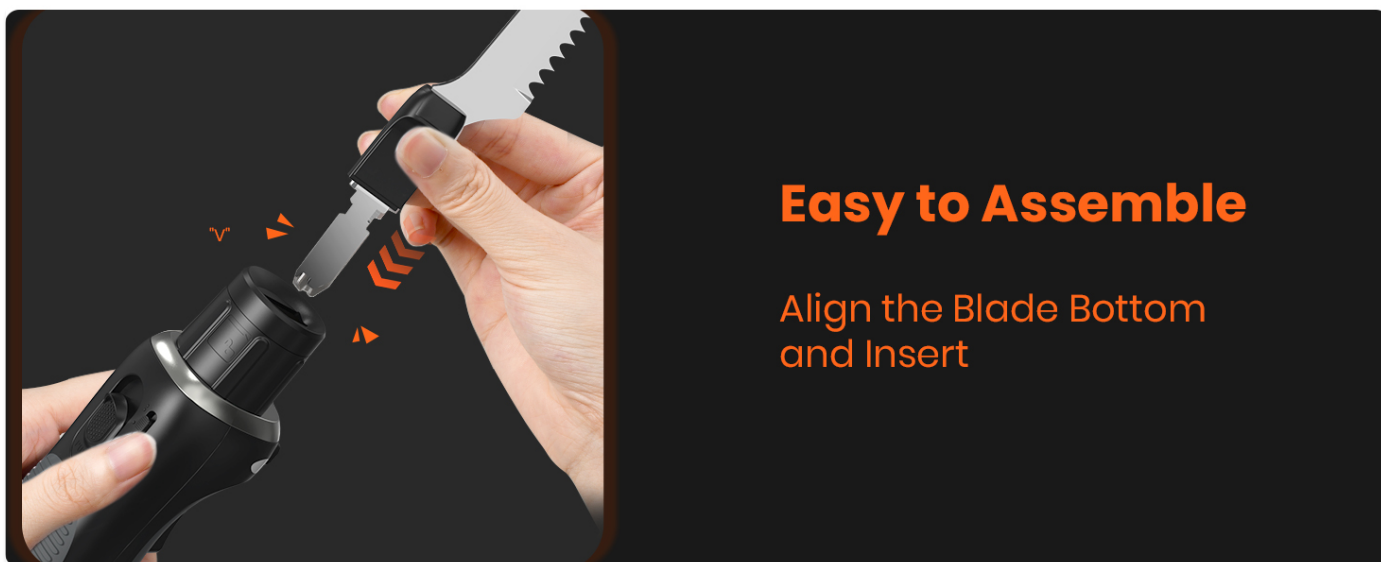

Easy to Assemble

Align the Blade Bottom
and Insert

Image 4.2: Step-by-step illustration of blade assembly.

Safer Blade Lock

Childproof for Safer Use and Peace of Mind



Image 4.3: The safer blade lock ensures blades are securely fastened and childproof.

5. OPERATING INSTRUCTIONS

5.1 Powering On and Off

To operate the knife, first push the child safety lock button, then pull the trigger. Release the trigger to turn off the knife.



Image 5.1: The dual safety trigger protects against accidental activation.

5.2 Speed Settings

The LAUDLIFE Electric Knife features two speed settings for versatile cutting:

- **High Speed:** Ideal for tougher meats, poultry, fish, and hardy vegetables.
- **Low Speed:** Perfect for precise cutting of bread and soft foods.

Two Speed Settings

Meet Your More Versatile Cutting



1



Low Speed

Precise Cutting of
Bread and Soft Foods



High Speed

Tougher Meats, Poultry,
Fish, and
Hardy Vegetables



2



Image 5.2: The two-speed setting switch on the knife handle.

5.3 Slicing Techniques

For optimal results, hold the knife firmly with the ergonomic handle. Use the carving fork to stabilize the food. Allow the reciprocating serrated blades to do the work, guiding the knife with minimal pressure. For bread, use a gentle sawing motion. For meats, slice against the grain for tender cuts.

Fast and Evenly Slicing

With Reciprocating Serrated Edge Blades



Image 5.3: Demonstrating fast and even slicing of bread.

Effortless Slicing, Guest-Approved

Perfect for Carves
Ham, Turkey, Roasts and Other Meats



Image 5.4: Effortless slicing of a turkey for a family meal.

6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your electric knife.

6.1 Removing Blades

After use, ensure the knife is powered off. To remove the blades, rotate the safety lock and pull the blades straight out from the handle. Always handle blades by their plastic guard.



Image 6.1: Easy blade release mechanism.

6.2 Cleaning

Product Care Instructions: Hand Wash Only.

- **Blades:** The stainless steel blades are food grade and can be hand washed with warm, soapy water. Rinse thoroughly and dry immediately to prevent rust. While the blades are indicated as dishwasher safe, hand washing is recommended for optimal care and longevity.
- **Knife Handle:** Wipe the knife handle with a damp cloth. Do NOT immerse the handle in water or any other liquid.
- **Carving Fork:** Hand wash with warm, soapy water, rinse, and dry.

6.3 Storage

Store the electric knife and its components in a dry place, away from children. It is recommended to store the blades with their protective plastic guards.

7. TROUBLESHOOTING

If you encounter any issues with your LAUDLIFE Cordless Electric Knife, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Knife does not turn on.	Battery is low or depleted. Safety lock not engaged correctly.	Charge the knife fully. Ensure the child safety lock is pushed before pulling the trigger.
Blades do not cut effectively.	Blades are not inserted correctly. Incorrect speed setting for the food type.	Ensure blades are fully inserted and locked. Select the appropriate speed setting (High for tough, Low for soft).
Blades feel loose or detach during use.	Blades not properly locked into the handle.	Remove blades and re-insert, ensuring the blade lock tab snaps securely into the groove. Do not use if blades do not lock firmly.

Problem	Possible Cause	Solution
Knife stops during cutting.	Battery is low. Overload protection activated.	Recharge the knife. Reduce pressure and allow the knife to cool down if it feels warm.

If the problem persists after trying these solutions, please contact LAUDLIFE customer support.

8. SPECIFICATIONS

Feature	Detail
Model Name	Laudlife
Blade Material	Stainless Steel
Item Weight	2.42 pounds
Package Dimensions	14.25 x 5.24 x 2.76 inches
Product Care Instructions	Hand Wash Only
Reusability	Reusable
Style	Modern

9. WARRANTY AND SUPPORT

LAUDLIFE is committed to providing high-quality products. For any questions, concerns, or assistance with your electric knife, please contact LAUDLIFE customer support. If you have lost your charging cable, you may also contact us for a free replacement.

Please refer to the product packaging or the LAUDLIFE official website for the most current contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question