

## G10S Pro BT

# Generic G10S Pro BT Smart Voice Remote with Wireless Air Mouse User Manual

## INTRODUCTION

---

This manual provides comprehensive instructions for the Generic G10S Pro BT Smart Voice Remote with Wireless Air Mouse. It covers essential information regarding setup, operation, maintenance, and troubleshooting to ensure you can effectively use your device. Please read this manual thoroughly before using the remote control.



This image displays a side view of the Generic G10S Pro BT Smart Voice Remote, highlighting its ergonomic design and button layout.

## PRODUCT OVERVIEW AND FEATURES

The G10S Pro BT is a versatile remote control designed for seamless interaction with smart TVs, set-top boxes, and computers. It combines the functionality of a traditional remote with advanced features for enhanced user experience.

- **Durable Construction:** Made from wear-resistant material for long-lasting use.
- **Easy to Use:** Designed for straightforward operation, requiring only battery insertion to begin.
- **Long Standby Time:** Features low power consumption technology for extended battery life.
- **Wireless Air Mouse:** Enables intuitive cursor control by moving the remote in the air.
- **Voice Control:** Allows for voice commands and searches.
- **Backlit Buttons:** Provides illumination for clear visibility in low-light environments.



This image shows the G10S Pro BT remote being held, with a smart TV interface in the background. It highlights key features such as white backlighting, built-in 6-axis gyroscope, 2.4GHz wireless connectivity, and voice search capability.

## SETUP

### 1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Open the battery compartment cover.
3. Insert two (2) AAA batteries, ensuring the correct positive (+) and negative (-) polarity as indicated inside the compartment.
4. Close the battery compartment cover securely.

### 2. Device Connection

The G10S Pro BT remote supports both 2.4GHz wireless (via USB Nano Receiver) and Bluetooth 5.0 connectivity.

- **2.4GHz Wireless Connection:**

- a. Insert the USB Nano Receiver into an available USB port on your target device (e.g., Smart TV, set-top box, computer).


b. The remote control should automatically connect to the receiver. No additional pairing is typically required for 2.4GHz mode.

- **Bluetooth 5.0 Connection:**

- a. Ensure Bluetooth is enabled on your target device.
- b. The remote control will appear as 'G10S Pro BT' in the list of available Bluetooth devices.
- c. Select 'G10S Pro BT' on your device to initiate pairing. Follow any on-screen prompts to complete the connection.

## OPERATING INSTRUCTIONS

### 1. Button Functions

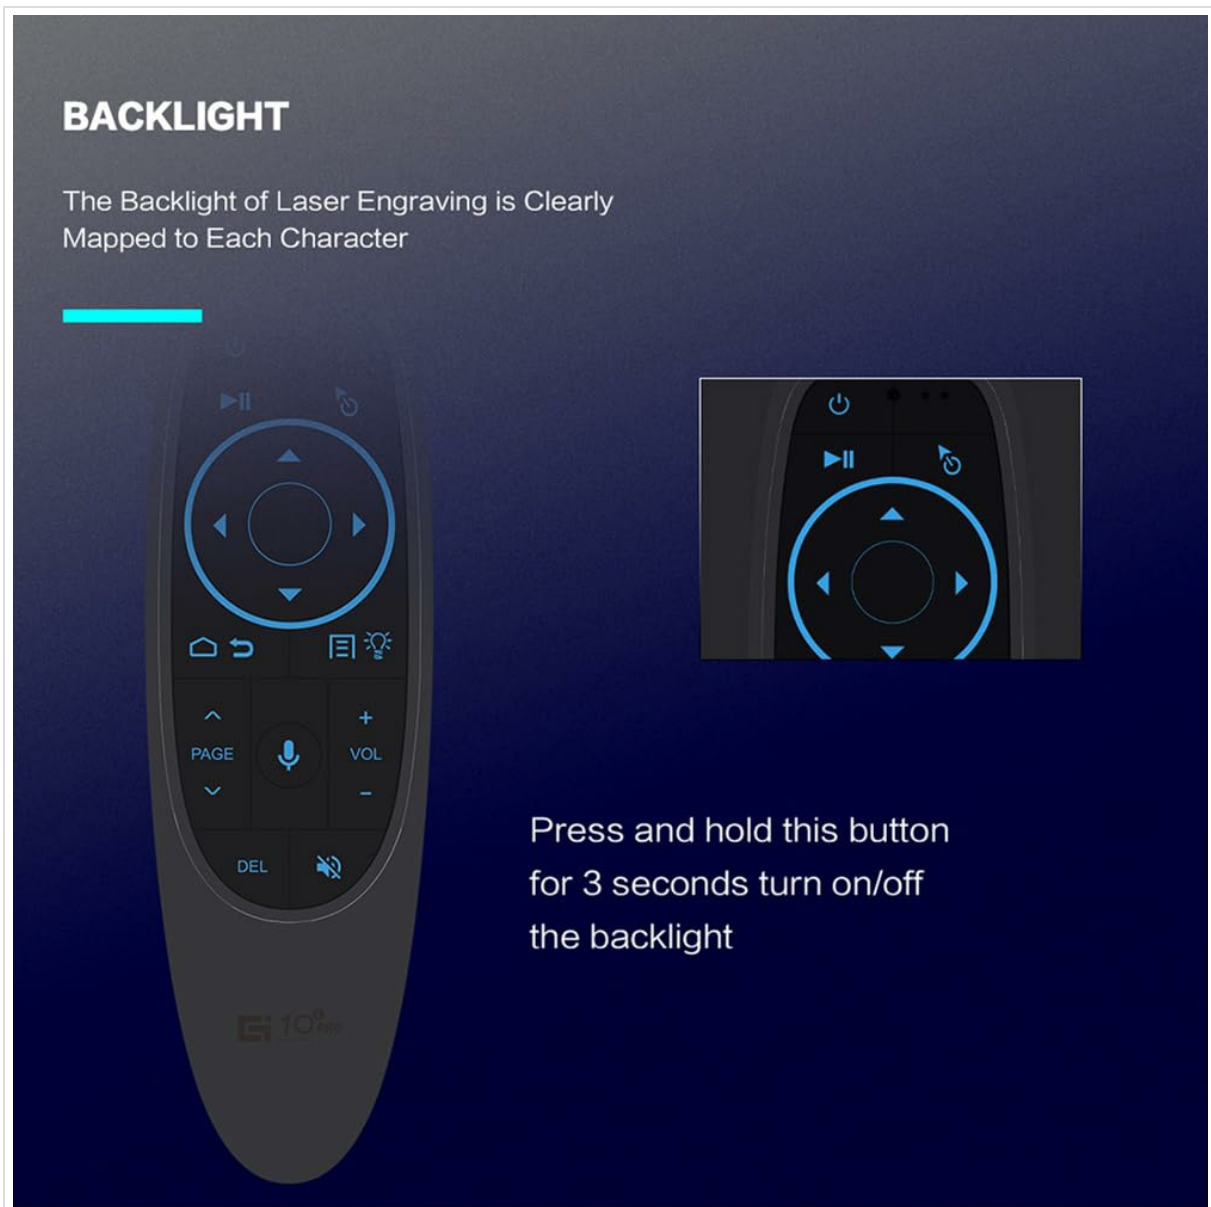

This image displays the layout of the G10S Pro BT remote control, labeling each button with its corresponding function, such as Power, Play/Pause, Navigation (Up, Down, Left, Right, OK/Enter), Volume, Voice Switch, and Mute.

Button	Function
Power	Turns the device on/off.

Button	Function
IR Learning Key	Used for infrared learning functions (refer to advanced settings if applicable).
Play/Pause	Plays or pauses media playback.
Mouse On/Off	Activates or deactivates the air mouse function.
Up / Down / Left / Right	Navigation controls for menus and content.
OK/Enter	Confirms selections or acts as a left mouse click.
Home	Returns to the home screen or main menu.
Return	Goes back to the previous screen or menu.
Menu	Opens the menu options.
Backlit On/Off	Toggles the button backlight (press and hold for 3 seconds).
Page Up / Page Down	Scrolls pages up or down.
Volume + / Volume -	Adjusts the volume level.
Voice Switch	Activates the voice control feature.
Mute	Mutes or unmutes audio.
BackSpace / DEL	Deletes characters or acts as a backspace function.

## 2. Air Mouse Function

To use the air mouse, press the 'Mouse On/Off' button. A cursor will appear on your screen. Move the remote in the air to control the cursor's movement. Press the 'Mouse On/Off' button again to deactivate the air mouse and use the directional pad.

## 3. Voice Control

Activate the voice control feature by pressing the 'Voice Switch' button. Speak clearly into the remote's built-in microphone. Ensure your connected device supports voice input and is configured correctly for this function.

## 4. Backlight Operation

The remote features a backlight for improved visibility in dark environments. To turn the backlight on or off, press and hold the 'Backlit On/Off' button for approximately 3 seconds.

## PRODUCT DESCRIPTION



This image illustrates the backlight feature of the G10S Pro BT remote. It shows the remote with its buttons illuminated and provides instructions on how to activate or deactivate the backlight by pressing and holding the designated button for 3 seconds.

## MAINTENANCE

### 1. Battery Replacement

When the low battery indicator flashes (typically at 10% battery level), it is time to replace the batteries. Open the battery compartment, remove the old AAA batteries, and insert new ones, observing correct polarity. Dispose of used batteries responsibly.

# Smart and Energy Saving Environmental Protection

Power supply by AAA battery, automatically sleep in idle state  
Work current is less than 15mA, Standby state is kind of microampere power consumption



10%

## Low Battery Indicator Shall Flash Slowing as Reminder



This image shows the low battery indicator on the G10S Pro BT remote, which flashes when the battery level is at 10% or lower, reminding the user to replace the batteries.

## 2. Cleaning

To clean the remote control, use a soft, dry, lint-free cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these can damage the remote's surface or internal components.

## TROUBLESHOOTING

- **Remote not responding:**


- Ensure batteries are correctly installed and have sufficient charge. Replace if necessary.
- For 2.4GHz mode, verify the USB Nano Receiver is securely plugged into the device's USB port.
- For Bluetooth mode, confirm the remote is successfully paired with your device in its Bluetooth settings.

- **Air mouse erratic or not moving smoothly:**

- Place the remote on a flat, stable surface for a few seconds to allow it to recalibrate its gyroscope.

- Ensure there are no obstructions between the remote and the connected device/receiver.
- **Voice control not working:**
  - Check that the remote's microphone is clear and not obstructed.
  - Verify that your connected device supports voice input and that its settings are configured to receive voice commands from the remote.

## SPECIFICATIONS

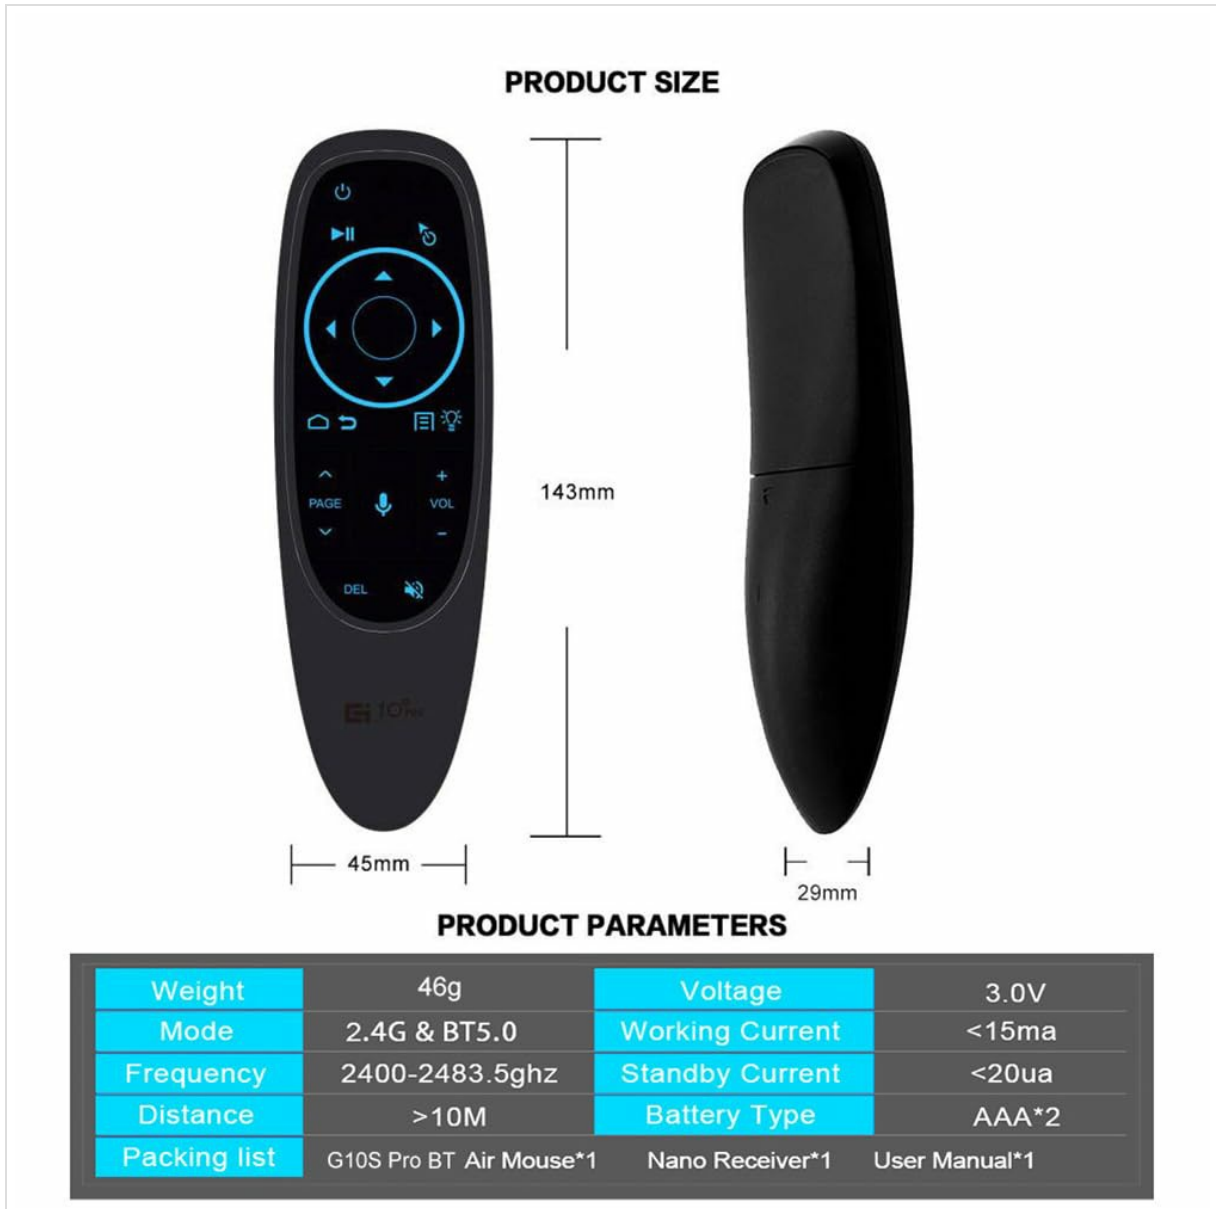

This image provides the physical dimensions of the G10S Pro BT remote control and a table detailing its technical specifications, including weight, operating modes, frequency, distance, voltage, current, battery type, and package contents.

Parameter	Value
Weight	46g
Operating Mode	2.4G & BT5.0
Frequency	2400-2483.5GHz

Parameter	Value
Operating Distance	>10 Meters
Voltage	3.0V
Working Current	<15mA
Standby Current	<20uA
Battery Type	AAA*2
Max Number of Supported Devices	1
Dimensions (L x W x H)	14.5 x 4.7 x 3 cm (approximate)

## WARRANTY AND SUPPORT

---

No specific warranty or detailed support information is provided within this product manual. For warranty claims, technical assistance, or further inquiries, please refer to the product packaging, the retailer from whom you purchased the device, or the manufacturer's official website if available.