

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [EWKYLSEM](#) /

> [EWKYLSEM Cordless Hair Clipper Trimmer User Manual \(Model EWKYLSEM\)](#)

EWKYLSEM EWKYLSEM

EWKYLSEM Cordless Hair Clipper Trimmer User Manual

Model: EWKYLSEM

INTRODUCTION

Thank you for purchasing the EWKYLSEM Cordless Hair Clipper Trimmer. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your device. Please read it thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INFORMATION

- Keep the appliance dry. Do not use it near water or in wet conditions.
- Do not immerse the appliance in water or other liquids.
- Keep out of reach of children.
- Always unplug the appliance before cleaning.
- Use only the provided USB charger.
- Do not use if the appliance or cord is damaged.
- Avoid contact with moving parts.
- This appliance is intended for household use only.
- Due to air transportation restrictions, lubricating oil is not included in the package.

PACKAGE CONTENTS

Upon unpacking, please ensure all items listed below are present and in good condition:

- 1x Hair Trimmer
- 1x Cleaning Brush
- 4x Limit Combs (1.5mm, 2mm, 3mm, 4mm)
- 1x USB Charger Cable

PRODUCT OVERVIEW

The EWKYLSEM Cordless Hair Clipper Trimmer is designed for precise hair cutting and styling. It features a powerful rotary motor and stainless steel blades for efficient performance.



Image: The EWKYLSEM Cordless Hair Clipper Trimmer in the Dragonb design, showcasing its compact and ergonomic build.



Image: A display of two hair clippers (gold and black designs) alongside an image of a person using the clipper to trim hair, highlighting its use for precise styling.



Potencia de 5W, motor de núcleo de
cobre de gran potencia de 7000 rpm

Potencia fuerte/ajuste suave m ing

Image: An X-ray view of the hair clipper, illustrating the internal 5W copper core motor with 7000 rpm, indicating powerful and smooth operation.

Tentáculos redondeados en forma de R 360 ° evitar daños en la piel

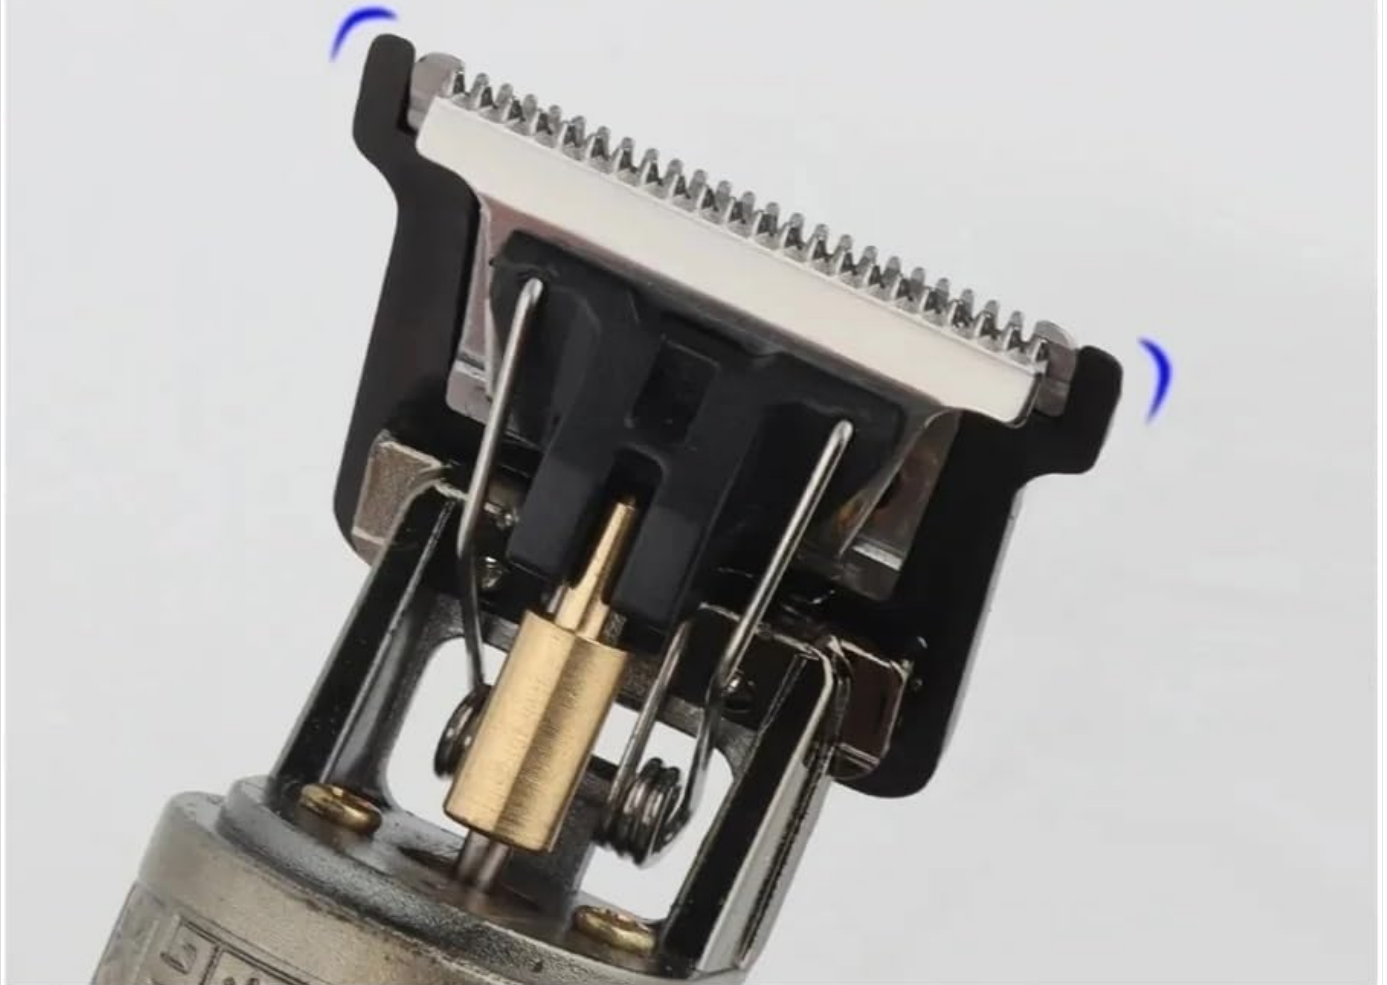


Image: A close-up of the clipper's blade, showing the R-shaped rounded tentacles designed for 360° skin protection to prevent damage during use.

Products Real Shot



Positive real shot

Back real shot



Image: Multiple views of the hair clipper, showing both the front and back designs of the product.

Key Features:

- **Cordless Design:** Offers flexibility and ease of use without being tethered to an outlet.
- **Powerful Rotary Motor:** Equipped with a 5W copper core motor (7000 rpm) for quick and efficient haircuts.
- **Stainless Steel Blades:** Ensures accurate cutting and durability.
- **Adjustable Trimming Length:** Handles various hair types and styles with ease.
- **Compact and Portable:** Lightweight and small size, ideal for travel.
- **USB Rechargeable:** Convenient charging via USB.

SETUP

Charging the Device:

1. Ensure the clipper is turned off before charging.

2. Insert the USB charger cable into the charging port located at the bottom of the clipper.
3. Connect the other end of the USB cable to a compatible USB power source (e.g., computer, wall adapter).
4. The charging indicator light will illuminate. A full charge takes approximately 2 hours.
5. Once fully charged, the device provides approximately 120 minutes of usage time.



Image: A detailed view of the USB charging port on the hair clipper, showing where the charging cable connects.

Attaching Limit Combs:

Select the desired limit comb (1.5mm, 2mm, 3mm, or 4mm) for your preferred hair length. Align the comb with the clipper blade and push it firmly until it clicks into place.

OPERATING INSTRUCTIONS

1. Ensure the clipper is fully charged.
2. Attach the appropriate limit comb if you desire a specific hair length. For close trimming or detailing, the clipper can

be used without a comb.

3. Press the power button to turn on the clipper.
4. Hold the clipper at a comfortable angle and gently move it against the direction of hair growth.
5. For best results, use slow, steady strokes.
6. After use, press the power button to turn off the clipper.



Image: A person using the EWKYLSEM hair clipper to create a stylish haircut, demonstrating its precision for detailing and shaping.

MAINTENANCE

Cleaning the Blades:

1. Turn off and unplug the clipper before cleaning.
2. Remove any attached limit comb.
3. Use the provided cleaning brush to remove loose hairs from the blades.

4. The knife head can be washed under running water. Ensure the main body of the clipper does not get wet.
5. Allow the blade to air dry completely before reattaching or storing.

Note: Lubricating oil is not included. Regular oiling of the blades (with suitable clipper oil, purchased separately) is recommended to maintain performance and extend blade life.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper does not turn on.	Battery is low or depleted.	Charge the clipper for at least 2 hours.
Clipper runs slowly or pulls hair.	Blades are dirty or not oiled.	Clean the blades and apply clipper oil.
Clipper makes unusual noise.	Blades may be misaligned or damaged.	Turn off the clipper, check blade alignment. If problem persists, contact support.
Charging indicator not working.	Faulty USB cable or power source.	Try a different USB cable or power adapter. Ensure connections are secure.

SPECIFICATIONS

Feature	Detail
Model Name	EWKYLSEM
Input Voltage	AC 110-240V, 50/60Hz
Charging Time	Approximately 2 hours
Usage Time	Approximately 120 minutes
Blade Material	Stainless Steel
Motor Type	Rotary Motor (5W, 7000 rpm copper core)
Weight	50 Grams
Dimensions (Package)	1.18 x 0.79 x 0.39 inches

WARRANTY INFORMATION

This product comes with a standard manufacturer's warranty against defects in materials and workmanship. Please refer to your purchase documentation for specific warranty terms and duration. Keep your proof of purchase for warranty claims.

Protection plans are available for purchase separately:

- 2-Year Protection Plan
- 3-Year Protection Plan
- Complete Protect (monthly subscription)

For details on these plans, please consult the retailer where the product was purchased.

CUSTOMER SUPPORT

If you have any questions, concerns, or require assistance with your EWKYLSEM Cordless Hair Clipper Trimmer, please contact your retailer or the manufacturer's customer service. For the fastest service, please have your model number (EWKYLSEM) and purchase date available.

Manufacturer: EWKYLSEM