

## Wancle K8003

# Wancle K8003 Vacuum Sealer Machine Instruction Manual

Model: K8003

## IMPORTANT SAFETY INSTRUCTIONS

---

Please read all instructions carefully before using the Wancle K8003 Vacuum Sealer Machine. Keep this manual for future reference.

- Do not operate the appliance with a damaged cord or plug.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep out of reach of children. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities.
- Use only Wancle approved vacuum sealer bags or rolls.
- Do not attempt to repair the appliance yourself. Contact customer support for assistance.
- Always unplug the appliance before cleaning or when not in use.

## PRODUCT OVERVIEW

---

The Wancle K8003 Vacuum Sealer Machine is designed to preserve food by removing air from specially designed bags and then sealing them. This process helps to extend the freshness of various food types.



Figure 1: Wancle K8003 Vacuum Sealer Machine with control panel and a vacuum-sealed bag of meat.

## Key Features:

- **4 Vacuum Sealing Modes:** NORMAL VAC, GENTLE VAC, SEAL, and MANUAL for various food types.
- **Powerful Vacuum System:** Designed for efficient air removal.
- **Easy to Clean:** Simple and safe cleaning process.
- **Compact Design:** Easy to store and move.
- **LED Indicator:** Touch button with LED indicators for operational status.

## SETUP AND FIRST USE

1. **Unpack:** Carefully remove the vacuum sealer from its packaging. Retain packaging for storage or future transport.
2. **Inspect:** Check the appliance for any signs of damage. Do not use if damaged.
3. **Placement:** Place the vacuum sealer on a flat, stable, and dry surface. Ensure there is enough space around the unit for operation.
4. **Power Connection:** Plug the power cord into a suitable electrical outlet (220 Volts AC).

5. **Prepare Bag:** Ensure the vacuum sealer bag is clean and dry. For best results, leave at least 3 inches of space between the food and the top of the bag.

## OPERATING INSTRUCTIONS

---

### General Vacuum Sealing Steps:

1. **Open the Lid:** Press the release buttons on both sides of the machine to open the lid.
2. **Position the Bag:** Place the open end of the vacuum bag into the vacuum chamber, ensuring it lies flat and smooth across the sealing strip. The open end of the bag should be fully inside the vacuum chamber but not extend past the sealing strip.
3. **Close the Lid:** Close the lid firmly until you hear a "pop" sound on both sides, indicating it is securely latched.
4. **Select Mode:** Choose the appropriate vacuum sealing mode based on your food type:
  - **NORMAL VAC:** For dry foods. This mode performs full vacuum and seal.
  - **GENTLE VAC:** For moist or delicate foods. This mode performs a gentler vacuum before sealing.
  - **SEAL:** Only seals the bag without vacuuming. Useful for creating custom-sized bags from a roll or sealing bags that do not require vacuuming.
  - **MANUAL:** Allows you to manually control the vacuuming time. Press and hold to vacuum, release to stop, then press SEAL to seal.
5. **Start Process:** Press the button for your selected mode (NORMAL VAC or GENTLE VAC). The machine will automatically vacuum and then seal the bag. For MANUAL mode, follow the instructions above.
6. **Monitor Indicators:** The LED indicators will show the progress. The SEAL light will turn blue when sealing is complete. The STOP light will turn red if the process is interrupted or completed.
7. **Release and Remove:** Once the process is complete and the lights indicate, press the release buttons on both sides to open the lid and remove the sealed bag.

# Enjoy Fresh Food **8X Longer**



Figure 2: Control panel with different vacuum and seal modes.

## Video Demonstration:

Your browser does not support the video tag.

Video 1: Demonstration of the Wancle K8003 Vacuum Sealer in operation, showing how to place a bag, close the lid, select a mode, and complete the vacuum and seal process.

## Food Types and Bag Compatibility:

The Wancle K8003 is suitable for various food types, including dried goods, wet foods, flour, and items with oil. Use appropriate bags for vacuum sealing.



## Easy to Store, Lightweight Design

Weight: 2.4lb



Figure 3: Examples of food types suitable for vacuum sealing.

The machine is compatible with standard vacuum sealing bags, bags with folded sides, and seal-only bags without folded sides.

# Food Types Suitable for Vacuuming Machine



Figure 4: Types of bags compatible with the vacuum sealer.

## MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your Wancle K8003 Vacuum Sealer.

1. **Unplug:** Always unplug the appliance from the power outlet before cleaning.
2. **Wipe Surfaces:** Use a soft, damp cloth to wipe down the exterior of the machine. Avoid abrasive cleaners or scouring pads.
3. **Clean Vacuum Chamber:** Carefully wipe the vacuum chamber and sealing strip with a damp cloth. Ensure no food particles or moisture remain.
4. **Dry Thoroughly:** Allow all parts to dry completely before closing the lid or storing the appliance.
5. **Storage:** Store the vacuum sealer in a dry, cool place. Its compact size allows for easy storage.



Figure 5: Cleaning the vacuum sealer machine.

## TROUBLESHOOTING

If you encounter issues with your Wancle K8003 Vacuum Sealer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outlet issue.	Ensure the power cord is securely plugged into a working outlet.
Vacuum pump runs but does not seal.	Lid not properly closed; bag not correctly positioned; sealing strip dirty.	Press down firmly on both sides of the lid until it clicks. Reposition the bag, ensuring it is flat and within the vacuum chamber. Clean the sealing strip.
Bag does not vacuum completely.	Bag leakage; food too close to the opening; moist food in NORMAL VAC mode.	Check the bag for holes or tears. Ensure at least 3 inches of space from food to bag opening. Use GENTLE VAC mode for moist foods.
Seal is incomplete or uneven.	Sealing strip dirty or wet; bag wrinkled.	Clean and dry the sealing strip. Ensure the bag is smooth and flat across the sealing strip.

If the problem persists, please contact Wancle customer support.

## SPECIFICATIONS

Feature	Detail
Brand	Wancle
Model Number	K8003

Feature	Detail
Material	Plastic
Color	Deep Black
Item Weight	3.08 pounds (1.4 Kilograms)
Power Source	Electric
Operation Mode	Automatic
Wattage	110 watts
Voltage	220 Volts (AC)
Product Dimensions	16.73 x 6.69 x 4.53 inches
ASIN	B0DDPPM8MB
Date First Available	January 11, 2023

## WARRANTY AND CUSTOMER SUPPORT

---

Wancle provides reliable quality products. If you have any questions or require assistance with your Wancle K8003 Vacuum Sealer Machine, please do not hesitate to contact our customer support team. For support, please refer to the contact information provided with your purchase or visit the official Wancle website.

The product includes: 1 Wancle Vacuum Sealer Machine, 10 Food Vacuum Sealer Bags, and 1 Wancle Vacuum Sealer User Manual.