

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Leankle](#) /

› [Leankle Voice Remote Controller RMF-TX310U for Sony Smart TVs User Manual](#)

Leankle RMF-TX310U

Leankle Voice Remote Controller RMF-TX310U User Manual

Model: RMF-TX310U

INTRODUCTION

This manual provides instructions for the Leankle RMF-TX310U Voice Remote Controller, designed for Sony LED and OLED Android Smart TVs from 2016 to 2019. This remote offers both infrared (IR) and voice control functionalities, enhancing your television viewing experience. Please read this manual carefully before use.

SETUP

1. Battery Installation

The remote requires two AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks.





Figure 1: Battery compartment with AAA batteries.

2. Initial Use (Infrared Mode)

The remote control functions immediately in infrared (IR) mode without any setup. Simply point the remote directly at your TV's IR sensor to control basic functions like power, volume, and channel changes.







Figure 2: Front view of the remote control.

3. Pairing for Voice Control (Bluetooth Mode)

For full functionality, including voice search and other advanced features, pair the remote control with your Sony Smart TV via Bluetooth. This enables Google Assistant integration.

1. Ensure your TV is powered on.
2. On the remote, press and hold both the **Vol – (Volume Down)** button and the **Voice** button simultaneously for approximately 3 seconds.
3. The TV screen will display a "Connecting..." message.
4. Once the message "The new remote has been connected" appears, select **OK** on your TV screen to confirm.
5. If your TV was previously paired with a lost or broken remote, it is recommended to unpair the old remote first through your TV's settings before attempting to pair the new one.

OPERATING INSTRUCTIONS

Basic Functions (IR Mode)

- **Power Button:** Turns the TV on or off.
- **Number Buttons (0-9):** Selects channels directly.
- **Volume Up/Down:** Adjusts the TV volume.
- **Channel Up/Down:** Changes TV channels sequentially.
- **Muting Button:** Mutes or unmutes the TV audio.
- **Input Button:** Cycles through available input sources.

Voice Control (Bluetooth Mode)

Once paired, the voice control feature allows you to use Google Assistant for various commands.

- **Voice Button:** Press and hold this button to activate voice commands. Speak clearly into the remote's microphone.
- **Voice Hints:** For more operation tips, press the Voice button and say "voice hints".

Navigation and Special Buttons

- **Directional Pad (Up/Down/Left/Right) and Enter Button:** Navigates menus and confirms selections.
- **HOME Button:** Accesses the TV's home screen or smart hub.
- **BACK Button:** Returns to the previous screen or menu.
- **APPS Button:** Provides quick access to installed applications.
- **GUIDE Button:** Displays the electronic program guide.
- **ACTION MENU Button:** Opens a context-sensitive menu for current content.
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies by application or TV menu.
- **Media Playback Controls (Play, Pause, Stop, Prev, Next, Rewind, Fast Forward):** Controls media playback.

MAINTENANCE

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage

the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries or different types of batteries.

TROUBLESHOOTING

- **Remote not responding in IR mode:**
 - Ensure batteries are correctly installed and not depleted.
 - Point the remote directly at the TV's IR sensor.
 - Remove any obstructions between the remote and the TV.
- **Voice control not working:**
 - Confirm the remote is successfully paired with your TV via Bluetooth (refer to "Pairing for Voice Control" section).
 - Ensure the TV's Bluetooth is enabled.
 - Speak clearly and hold the Voice button while speaking.
 - Check TV settings for voice control permissions.
- **Buttons feel stiff or unresponsive:**
 - This can be normal for new remotes and may improve with use.
 - Ensure the remote is clean and free of debris around the buttons.
- **Remote functions are incorrect or unexpected:**
 - If using in IR mode, some advanced buttons may not function as expected if they require Bluetooth pairing.
 - If paired, try unpairing and re-pairing the remote with the TV.

SPECIFICATIONS

Model Name	Voice-TX310U (RMF-TX310U)
Brand	Leankle
Connectivity Technology	Infrared (IR), Bluetooth
Compatible Devices	Sony LED/OLED Android Smart TVs (2016-2019 models)
Special Features	Voice Search (Google Assistant)
Power Source	2 x AAA Batteries (not included)
Maximum Range	10 Meters (Bluetooth)
Item Weight	0.1 Kilograms
Dimensions (L x W x H)	9.06" x 1.97" x 0.79"

WARRANTY AND SUPPORT

Leankle offers a 30-day money-back guarantee and a 12-month warranty from the purchase date for this product. For any inquiries or support needs, please contact Leankle customer service. All inquiries will receive a reply within 24 hours.



© 2024 Leankle. All rights reserved.