

YXYKODM VI365

Light Bulb Security Camera User Manual

Model: VI365 | Brand: YXYKODM

INTRODUCTION

This user manual provides comprehensive instructions for the YXYKODM Light Bulb Security Camera, Model VI365. This innovative device combines a high-definition security camera with the convenience of a standard light bulb, offering versatile surveillance for both indoor and outdoor environments.

Key features include 1080P HD resolution, 360° panoramic view, full-color day and night vision, smart motion detection with instant notifications, and two-way audio communication. Its design allows for easy installation into existing household lamp sockets, making it a practical solution for home security.

WHAT'S IN THE BOX

- Light bulb camera
- Base
- Product instruction manual
- Collection box

SPECIFICATIONS

Feature	Detail
Product	Light bulb camera
TF card support	Up to 128G TF card (not included)
Supported mobile system	Android/IOS
Night Vision	Built-in IR-CUT for day and night mode switching
Audio	Excellent two-way audio quality

Video Capture Resolution	1080p (up to 1600*1200 pixels)
Connectivity Protocol	Wi-Fi (2.4GHz)
Controller Type	APP
Mounting Type	Ceiling Mount (standard lamp socket)
Dimensions (L x W x H)	2.7 x 2.7 x 6 inches
Item Weight	267 pounds <i>(Note: This weight seems incorrect for a light bulb camera, please verify actual product weight.)</i>
Alert Type	Motion Only

SETUP AND INSTALLATION

- The YXYKODM Light Bulb Security Camera is designed for easy installation, fitting into a standard household lamp socket. No complex wiring is required.
- Unpack the Camera:** Carefully remove the light bulb camera and its base from the packaging.
 - Choose Installation Location:** Select a suitable lamp socket (E27/E26 standard) where you desire surveillance. This can be indoors or outdoors, ensuring the location is within Wi-Fi range.
 - Install the Camera:** Screw the light bulb camera into the lamp socket just like a regular light bulb. Ensure it is securely fastened.
 - Power On:** Turn on the power to the lamp socket. The camera will power on and initiate its startup sequence.
 - Download the App:** Download the compatible mobile application (Android/IOS) from your device's app store. Refer to the included product instruction manual for the specific app name or QR code.
 - Connect to Wi-Fi:** Follow the in-app instructions to connect the camera to your 2.4GHz Wi-Fi network. This typically involves scanning a QR code displayed on your phone with the camera.
 - Adjust Angle:** Once connected, you can remotely adjust the camera's free rotation angle (355° horizontal, 90° vertical) via the app to achieve the desired viewing area.

Easily installation standard base



Figure 1: Easy installation into a standard lamp base.

Replacement of ordinary household lamp sockets



Figure 2: Replacement of ordinary household lamp sockets.

Flexible installation where you want to install

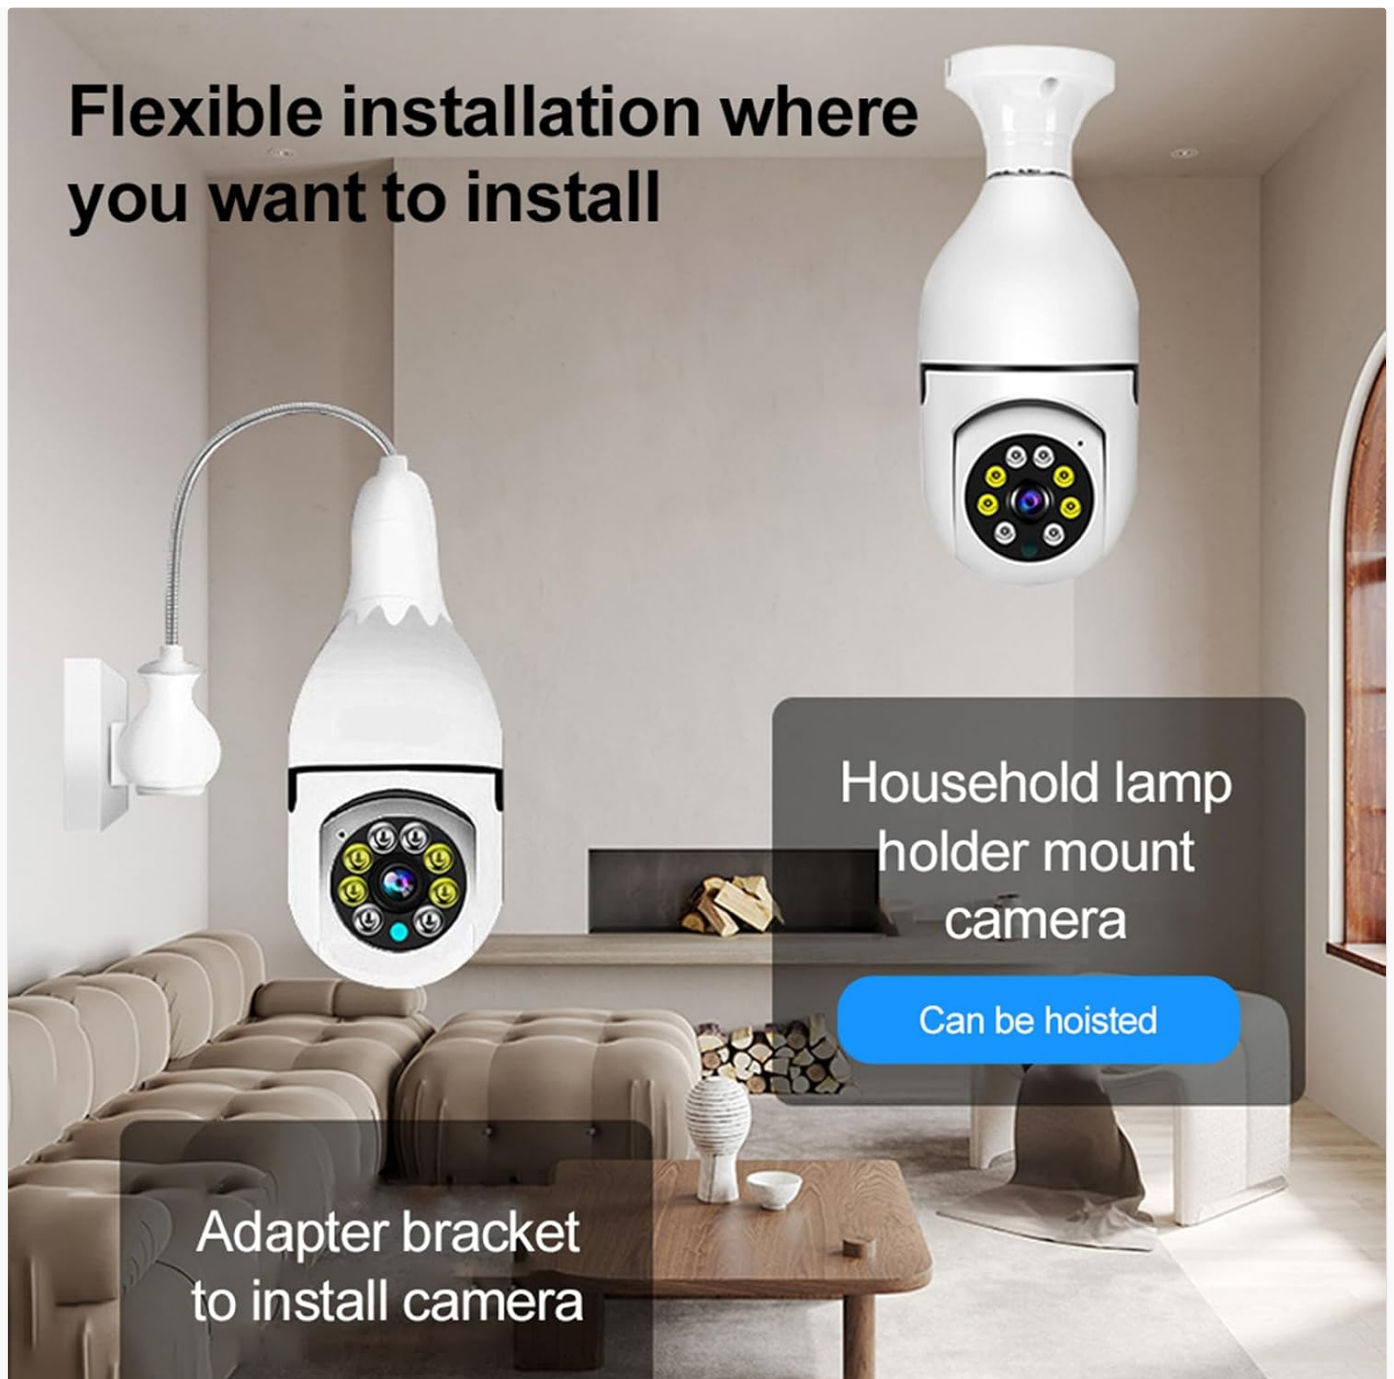


Figure 3: Flexible installation options for the light bulb camera.

OPERATING INSTRUCTIONS

Remote Viewing and Control

Access the live video feed from anywhere using the mobile application. The camera connects via your home's 2.4GHz Wi-Fi network. You can view real-time footage, adjust camera angles, and manage settings directly from your smartphone.

HD WiFi Home Camera

When traveling, you can check the children, the elderly, and cute pets at home at any time



Mega HD Pixels



Free rotation angle



Dual light night vision



Motion Detection



Voice intercom



Memory expansion

Figure 4: The camera offers a wide range of motion with 355° horizontal and 90° vertical rotation.

Motion Detection and Alerts

The camera is equipped with smart motion detection technology. When movement is detected, the camera will send instant notifications to your smartphone, keeping you informed of any activity. You can customize motion detection sensitivity and alert settings within the app.

Two-Way Audio Intercom

Utilize the built-in microphone and speaker for two-way voice intercom. This feature allows you to communicate remotely with individuals near the camera, whether it's to greet visitors or deter intruders.

Night Vision and Lighting

The camera provides full-color day and night monitoring. It features built-in IR-CUT for automatic mode switching and can also function as a light bulb, providing illumination when needed.



Figure 5: The camera can be used as a light bulb, offering home care, night illumination, and all-day guarding capabilities.

Your browser does not support the video tag.

Video 1: Demonstration of the light bulb camera's pan/tilt functionality and integrated lighting.

Storage

The camera supports up to a 128GB TF (microSD) card for local storage of recordings. Ensure the card is inserted correctly into the designated slot on the camera.

MAINTENANCE

- **Cleaning:** Gently wipe the camera lens and body with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials that could damage the surface or lens.
- **Firmware Updates:** Regularly check the mobile application for available firmware updates. Keeping the firmware updated ensures optimal performance, security, and access to new features.
- **Network Stability:** Ensure your 2.4GHz Wi-Fi network is stable and strong in the camera's location for uninterrupted operation and clear video streaming.
- **Storage Management:** If using a TF card, periodically review and manage stored footage to prevent the card from becoming full.

TROUBLESHOOTING

Common Problems and Solutions:

1. **APP cannot detect camera/Cannot configure network:**

A: Please confirm that the device connection is normal. Check whether the APP permission is restricted on your mobile device. Ensure the camera is powered on and within range of your 2.4GHz Wi-Fi network.

2. **Camera always asks for username and password, or reports incorrect user:**

A: The default password of the camera is **6666**. If you forget the username or password, you can restore the camera to factory settings to revert to the default user name and password.

3. **How to restore camera to factory settings:**

A: Please press the reset button of the camera for about 5 seconds until the camera restarts. The location of the reset button is typically near the TF card slot or on the camera body.

4. **Image is blurred:**

A: First, remove any protective film from the lens. If the image is still not clear, please rotate the camera lens to focus. A clear image can be obtained after proper focusing.

WARRANTY AND SUPPORT

This product is typically covered by a 30-day easy returns policy. For any product-related inquiries, technical assistance, or support, please refer to the customer support information provided by your retailer or the manufacturer, YXYKODM.

You can also visit the [YXYKODM Store on Amazon](#) for more information and support resources.

© 2024 YXYKODM. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question