

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Hisense](#) /
- › [Hisense HW-K55B 5.5kg Washing Machine User Manual](#)

## Hisense HW-K55B

# Hisense HW-K55B 5.5kg Washing Machine User Manual

Model: HW-K55B | Capacity: 5.5kg

## INTRODUCTION

---

This user manual provides essential information for the safe and efficient operation of your Hisense HW-K55B 5.5kg washing machine. Please read this manual thoroughly before using the appliance and retain it for future reference.

## SAFETY INFORMATION

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly grounded.
- Do not operate the washing machine if it is damaged.
- Keep children and pets away from the appliance during operation.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not wash items that are soiled with flammable substances.

## SETUP AND INSTALLATION

---

### Unpacking

Carefully remove the washing machine from its packaging. Inspect for any damage during transit. Retain packaging materials for potential future transport.

### Location Requirements

Select a stable, level surface for installation. Ensure adequate clearance around the unit for proper ventilation and operation.

- **Minimum Clearances:** Allow at least 10cm for width, depth, and height around the appliance.
- **Wall Clearance:** Maintain a minimum of 1cm from left/right walls and 1cm from the rear wall.
- **Top Door Clearance:** Ensure 10-15cm of space above the machine for the top-loading door to open fully.
- **Drain Hose:** The drain hose connection point should be at least 9cm above the floor.

- **Waterproof Pan:** Verify the presence and inner dimensions of a waterproof pan if applicable.

# 商品寸法+10cm以上の幅が必要です。

## 《搬入における確認項目》


※段差やコーナー箇所があり、直線ではない場合、+10cm以上の幅が必要となります。  
 ※手すり・照明・装飾物などがある場合、そちらから+10cmの幅が必要となります。

### 《商品の寸法》




### 《玄関の高さ》

商品寸法 +10cm

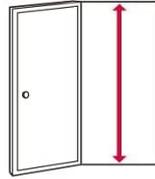


### 《玄関の幅》

商品寸法 +10cm

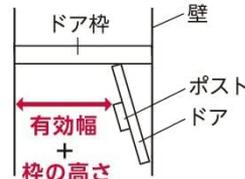


### 《廊下の幅》

商品寸法 +10cm

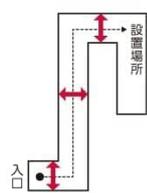


### 《エレベータの幅》

商品寸法 +10cm

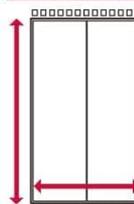


### 《階段の幅》

商品寸法 +10cm

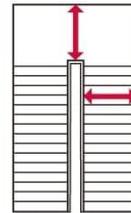


## 《設置における確認項目》

・必要なスペースは商品によって異なるため、詳細はメーカーページなどでご確認ください。  
 ・洗濯機の設置時にはドアを開閉するため上部のスペース確保が必要となります。

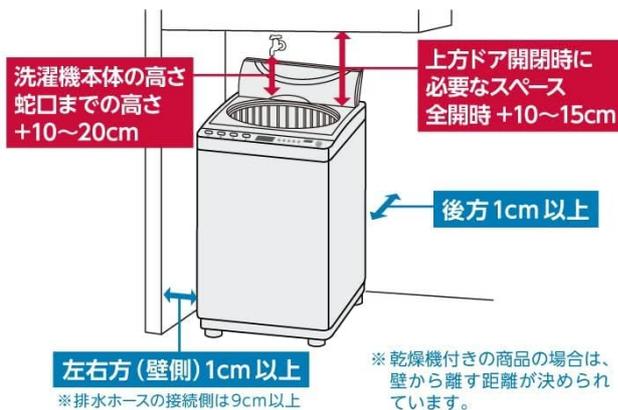

## 防水パンの有無と内側サイズをチェック

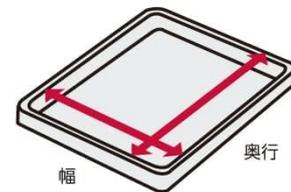

※排水エルボ・足台の有無と排水口位置によって、  
追加費用がかかることがあります。

Figure 1: Installation dimensions and required clearances. This diagram illustrates the necessary space around the washing machine for proper setup, including clearances from walls and for the top-loading door.

# スペック・サイズ

(単位：mm)

洗濯・脱水容量

5.5kg

風乾燥 毛布洗い  
2.0kg 3.0kg

多彩な洗濯コース

標準

つけおき

おいそぎ  
(最短約14分)

念入り

自分流

毛布

ドライ

風乾燥

槽洗浄

洗濯コース  
+  
風乾燥



※画像はイメージです。

Figure 2: Detailed dimensional drawing. This image provides precise measurements of the washing machine, including width (500mm), depth (520mm), and height (910mm), crucial for installation planning.

## Connecting Water and Drain Hoses

Connect the water supply hose to a cold water tap and the washing machine's inlet. Securely attach the drain hose to a suitable drain point, ensuring it is not kinked or obstructed.

- **Included Accessories:** Drain sleeve, lint filter, water supply joint, water supply hose.

## OPERATING INSTRUCTIONS

### Control Panel Overview

The control panel features easy-to-understand buttons and a large digital display for selecting wash courses and monitoring progress.



Figure 3: Control Panel. This image shows the top view of the washing machine, highlighting the control panel with its various buttons and digital display for program selection.

## Loading Laundry

Open the foldable lid and load laundry into the tub. Do not overload the machine. The 5.5kg capacity is suitable for 1-2 people's laundry needs.

# ローダウン設計

ラクな姿勢で洗濯物を取り出せる



## 前面高さ約82cmのローダウン設計

Figure 4: Low-Down Design. This image demonstrates the ergonomic low-down design of the washing machine, with a front height of approximately 82cm, allowing for comfortable loading and unloading of laundry.

# 折りたたみ式ふた

## 洗濯機の上部にラックを設置しても開けやすい

※画像はイメージです。



Figure 5: Foldable Lid. This image shows the foldable lid feature, which allows for easy opening even when a rack is placed above the washing machine, optimizing space.

### Adding Detergent and Softener

Add liquid or powder detergent to the designated dispenser. The machine mixes detergent with water to create foam for effective cleaning.

# 洗剤投入ケース

洗剤を水と混ぜながら「泡状」にして投入



Figure 6: Detergent Dispenser. This image displays the detergent input case, designed to mix detergent with water to create foam for efficient washing.

## Selecting a Wash Course

Choose from various wash courses based on your laundry needs:

- **Standard:** For everyday laundry.
- **Soak:** For heavily soiled items.
- **Quick (14 min):** For lightly soiled items or when time is limited.
- **Thorough:** For a more intensive clean.
- **Self-wash:** Allows customization of wash, rinse, spin, and wind dry cycles.
- **Blanket:** For washing blankets and large items.
- **Dry:** For delicate items that require gentle drying.
- **Wind Dry:** Utilizes air circulation to reduce drying time.
- **Tub Clean:** For cleaning the washing machine tub.
- **Wash + Wind Dry:** Combines a wash cycle with the wind dry function.

# おすすめのポイント

暮らしの中に欠かせない機能を取り揃えている

## 洗浄力がアップ

### 1 独自の回転羽根

絡みにくくて強力汚れを  
しっかり掻き出す。



### 2 シャワー水流

強力循環水流が、頑固な  
汚れを浮かして落とす。



### 3 ステンレス槽

洗濯板のような「凹凸設  
計」が汚れを残さず落と  
す



## 安心機能がいっぱい

### 1 選べる好みボタン

「洗い」、「すすぎ」、  
「脱水」が個別に選べる。



### 2 便利な予約機能

1～24時間までの予約時  
間設定が可能です。



### 3 デジタル表示

お洗濯などの残り時間が  
バツとわかるデジタル表  
示。



Figure 7: Wash Course Options and Features. This image highlights the diverse wash courses available and key features like the unique pulsator, shower water flow, and stainless steel tub.

## Special Functions

- **Reservation Function:** Set the washing machine to complete a cycle at a desired time, from 1 to 24 hours in advance.

# 自分の生活スタイルに 合わせる予約機能



Figure 8: Reservation Function. This image illustrates how to use the reservation function, allowing users to schedule the wash completion time up to 24 hours in advance.

- **Wind Dry Function:** This feature uses air to remove moisture from clothes, significantly reducing drying time, especially useful for indoor drying.

# 風乾燥で乾燥時間を短くする

乾燥時間をもっと短くしたい時、非常に便利



Figure 9: Wind Dry Function. This image explains the wind dry function, which uses air to reduce moisture in clothes, thereby shortening drying time and making indoor drying more efficient.

## MAINTENANCE AND CARE

### Cleaning the Lint Filter

Regularly clean the lint filter to maintain optimal washing performance and prevent lint buildup on clothes. The machine is equipped with a large-capacity lint filter for easy maintenance.

# 糸くずフィルター

大容量でお手入れがラクな糸くずフィルターを配置



Figure 10: Lint Filter. This image shows the large-capacity lint filter, designed for easy removal and cleaning to ensure efficient operation and prevent lint transfer to clothes.

## Cleaning the Washing Tub

Use the "Tub Clean" course periodically to remove detergent residue and mold from the washing tub. The stainless steel tub with its uneven design helps prevent dirt accumulation.

# 頑固な汚れまで しっかり落とす洗浄力

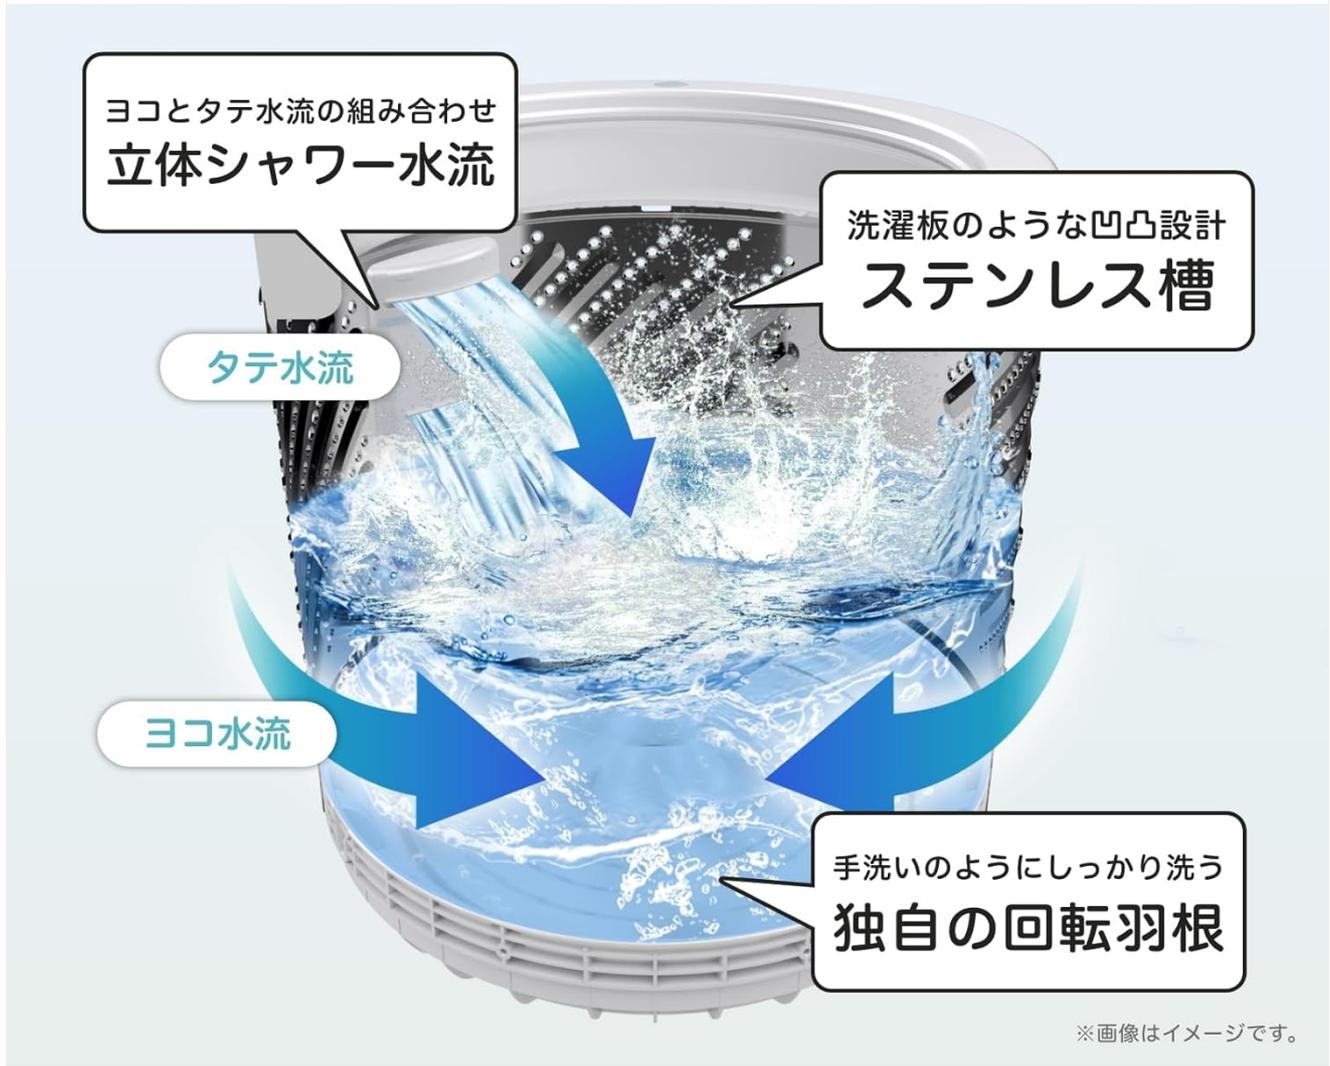


Figure 11: Washing Mechanism. This diagram illustrates the internal washing components, including the vertical and horizontal shower water flow, the unique pulsator, and the stainless steel tub with its uneven design, all contributing to effective dirt removal.

## Exterior Cleaning

Wipe the exterior of the washing machine with a soft, damp cloth. Avoid using abrasive cleaners or solvents.

## TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, door not closed properly, water supply off.	Check power connection, ensure door is securely latched, open water tap.
Excessive noise/vibration	Machine not level, transport bolts not removed, uneven load.	Adjust leveling feet, remove transport bolts (if applicable), redistribute laundry.

Problem	Possible Cause	Solution
Water leakage	Hoses loose or damaged, drain hose blocked.	Check hose connections, inspect for damage, clear drain hose.
Clothes not clean	Overloading, insufficient detergent, incorrect wash course.	Reduce load size, use appropriate amount of detergent, select suitable wash course.

## SPECIFICATIONS

Feature	Detail
Brand	Hisense
Model	HW-K55B
Capacity	5.5 kg
Operating Sound	47 dB
Installation Type	Freestanding
Special Features	Wind Dry, New Pulsator Design
Color	Black
Control Panel Type	Push Button
Door Position	Top
Voltage	100 Volts
Material	Stainless Steel
Included Accessories	Drain sleeve, lint filter, water supply joint, water supply hose
Product Weight	29 Kilograms
Product Dimensions (W x D x H)	50 cm x 52 cm x 91 cm

## WARRANTY AND SUPPORT

Your Hisense HW-K55B washing machine comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical support, service requests, or inquiries about your product, please contact Hisense customer service. Contact details can typically be found on the Hisense official website or in the documentation provided with your appliance.

**Online Resources:** For additional information and FAQs, visit the official Hisense website: [www.hisense.com](http://www.hisense.com)