

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Bulelink](#) /

› Bulelink Max 5 Vacuum Cleaner Battery User Manual

## Bulelink Max 5

# Bulelink Max 5 Vacuum Cleaner Battery User Manual

Model: Max 5

## 1. INTRODUCTION

---

Thank you for choosing the Bulelink Max 5 Vacuum Cleaner Battery. This manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your new battery. Please read this manual thoroughly before first use and keep it for future reference.

## 2. SAFETY INFORMATION

---

Always observe the following safety precautions to prevent damage to the battery or injury to yourself.

- Do not disassemble, open, or shred the battery pack.
- Do not expose the battery to heat or fire. Avoid storage in direct sunlight.
- Do not short-circuit a battery pack.
- Do not expose the battery to mechanical shock.
- In the event of a battery leaking, do not allow the liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- Keep the battery clean and dry.
- Only use the battery with the specified Bulelink Max 5 vacuum cleaner.
- Dispose of the battery properly according to local regulations.

## 3. PACKAGE CONTENTS

---

Your package should contain the following item:

- 1 x Bulelink Max 5 Vacuum Cleaner Battery



Image showing the Bulelink Max 5 replacement battery (left) and the Bulelink Max 5 stick vacuum cleaner (right) for which the battery is designed. The battery is dark grey with red accents on the top and front, indicating connection points. The vacuum cleaner is purple and grey.

## 4. SETUP

### 4.1 Initial Charging

Before first use, it is recommended to fully charge the battery. Connect the Bulelink Max 5 vacuum cleaner (with the battery

installed) to its charging adapter and plug it into a power outlet. The charging indicator on the vacuum cleaner will show the charging status.

## 4.2 Battery Installation/Replacement

1. Ensure the vacuum cleaner is turned off and unplugged from any power source.
2. Locate the battery compartment on your Bulelink Max 5 vacuum cleaner. This is typically on the main body of the vacuum.
3. If replacing an old battery, press the release button (usually red) and slide the old battery out.
4. Align the new Bulelink Max 5 battery with the slot in the vacuum cleaner.
5. Slide the battery firmly into place until you hear a click, indicating it is securely locked.

## 5. OPERATING

---

Once installed and charged, the battery powers your Bulelink Max 5 vacuum cleaner. The battery life will vary depending on the power mode used (e.g., Eco, Standard, Max) and the type of surface being cleaned.

- For optimal performance, avoid completely draining the battery before recharging.
- Recharge the battery when the vacuum cleaner's power indicator shows low battery.

## 6. MAINTENANCE

---

### 6.1 Charging Practices

- Always use the original charging adapter provided with your Bulelink Max 5 vacuum cleaner.
- Do not charge the battery in extreme temperatures (below 0°C or above 40°C).
- Unplug the charger once the battery is fully charged.

### 6.2 Storage

- If storing the battery for an extended period, charge it to approximately 50-60% before storage.
- Store the battery in a cool, dry place, away from direct sunlight and extreme temperatures.
- Recharge the battery every 3-6 months during long-term storage to prevent deep discharge.

### 6.3 Cleaning

- Wipe the battery surface with a soft, dry cloth.
- Do not use harsh chemicals or abrasive cleaners.
- Ensure the battery contacts are clean and free of dust or debris.

## 7. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Battery not charging	Charger not connected properly; Faulty charger/outlet; Battery contacts dirty; Battery too hot/cold.	Ensure charger is securely plugged in; Try a different outlet; Clean battery contacts; Allow battery to reach room temperature.
Short run time	Battery not fully charged; Battery degradation; Using Max power mode excessively.	Ensure full charge; Consider battery replacement if old; Use lower power modes when possible.

Problem	Possible Cause	Solution
Vacuum cleaner not turning on with new battery	Battery not installed correctly; Battery not charged.	Re-install battery, ensuring it clicks into place; Charge the battery fully.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Bulelink
Model Name	Max 5
Item Weight	570 g
Package Dimensions	19.8 x 12.2 x 6.7 cm
Power Source	Battery Powered
Special Feature	Portable

## 9. WARRANTY AND SUPPORT

Specific warranty information for this product is not available in the provided data. Please refer to the product packaging or the retailer's website for details regarding warranty coverage and terms.

For technical support or further inquiries, please contact Bulelink customer service through the contact information provided with your purchase or on the official Bulelink website.