

LOUTOC RC833

LOUTOC TCL Smart TV Voice Remote Control User Manual

Model: RC833

1. INTRODUCTION

This manual provides detailed instructions for the LOUTOC TCL Smart TV Voice Remote Control, designed for use with TCL Android/Google TV models. It covers setup, operation, maintenance, troubleshooting, and product specifications to ensure optimal performance and user experience.

The remote control features voice functionality and dedicated shortcut buttons for popular streaming services and TV functions.

2. COMPATIBILITY

This remote control is compatible with the following TCL TV series and models:

Compatible TV Series:

- C64, C74, C805, C84
- MQLED80, MQLED87
- P74, QLED770, QLED870, UHD870

Compatible TV Models:

43C645, 43QLED770, 50C645, 50C805, 50MQLED80, 50QLED770, 55C645, 55C745, 55C805, 55C845, 55MQLED80, 55MQLED87, 55MQLED770, 55QLED870, 65C645, 65C745, 65C805, 65C845, 65MQLED80, 65MQLED87, 65MQLED770, 65QLED870, 75C645, 75C745, 75C805, 75C845, 75MQLED80, 75MQLED87, 75QLED770, 75QLED870, 85C645, 85C805, 85C845, 85MQLED80, 85MQLED87, 85P745, 85QLED770, 85UHD870, 98C805, 98MQLED80, 98P745, 98UHD870.

Compatible for TCL Android / Google TV



Series: C64, C64K, C65, C65 PRO, C655, C65K
C74, C74K, C80, C805, C80K, C84, C84K, MQLED80
MQLED87, P63, P638, P655, P73, P74, P74K, P75
P755, QLED770, QLED870, QM8B, UHD870, V6B, V7A.

Image: The remote control is compatible with a wide range of TCL Android and Google TV models, including 4K UHD and QLED displays.

3. SETUP AND PAIRING

3.1. Battery Installation

The remote control requires 2 x AAA batteries (not included). To install:

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AAA batteries, ensuring correct polarity (+ and -).
3. Close the battery compartment cover securely.



Image: The back of the remote control indicating the battery compartment for two AAA batteries.

3.2. Voice Function Pairing Steps

To enable the voice control feature, the remote must be paired with your TCL Android/Google TV. Follow these steps:

1. Press the **Voice button** (microphone icon) on the remote control first.
2. Press and hold the **HOME** (house icon) and **OK** (center button) buttons on the remote control simultaneously.
3. Keep the remote control within one meter (approximately 3 feet) of the TV during the pairing process.
4. When your TV displays "Google Assistant" on the screen, the pairing process is complete, and the voice function is ready for use.

Pairing Steps :



1 Press the Voice button () firstly.

2 Press and hold the "  " and "  " buttons on the remote control at the same time.

3 Keep the remote within 3ft of the TV during the pairing process.

4 Finally, when the TV displays  Google Assistant everything is ready.

Image: Visual guide for pairing the remote control, illustrating the sequence of button presses and proximity requirement.

Note: This remote control is available only for selected models. The remote control type may be changed without notice. The App buttons may differ depending on the model. Follow the on-screen guide to pair the remote control with the TV when pressing the Google Assistant button for the first time. Google TV is the name of this device's software experience and a trademark of Google LLC. The Google Assistant is not available in certain languages and countries.

4. OPERATING INSTRUCTIONS

The LOUTOC remote control provides intuitive access to your TCL Smart TV's features. Below is a guide to its main functions:



 To switch the sound off and back on.

 Standby / quit standby.

Numeric buttons: To enter channel numbers or a digit.

 To select input source.

 To display the Quick Settings panel.

 **Colour buttons**

To select tasks or Teletext pages; to be used for HbbTV function.

 To access User Center.

 Press the Goonle Assistant button on your remote to talk to the **Google Assistant**. (Available only in Google TV mode and when the network connection is normal)

 To display the dashboard menu.

Navigation direction buttons

 To confirm an entry or selection. (Available to display the channel list in TV mode.)

 To return to the previous menu or quit an App.

 To access the Smart TV homepage.

 To access the Electronic Pronramme Guide (only available for digital channels). Or access to DTV EPG. (Available only in Google TV mode.)

VOL+/-: To control the volume.

CH+/-: To change channels.

 To access DTV channel list.

 To display programme information, if available.

Notes:

- This remote control is available only for selected models. The remote control type may be changed without notice.
- The App buttons may differ depending on the model. The App button is used for accessing the corresponding App.
- Follow the on-screen guide to pair the remote control with the TV when pressing the Google Assistant button for the first time.
- Google TV is the name of this device's software experience and a trademark of Google LLC.
- The Google Assistant is not available in certain languages and countries.

Image: An overview of the remote control's buttons and their corresponding functions.

Power Button (): To switch the TV on and off, or put it in standby.

Numeric Buttons (0-9): To enter channel numbers or digits.

Quick Settings Button (☰): To display the Quick Settings panel.

Colour Buttons (Red, Green, Yellow, Blue): Used for HbbTV functions or Teletext pages.

User Center Button (): To access the User Center.

Google Assistant Button (): Press to talk to Google Assistant. (Available only in Google TV mode and when network connection is normal).

Dashboard Menu Button (⊗): To display the dashboard menu.

Navigation Direction Buttons (◀, ▲, ▶, ▼): For navigating menus and options.

OK Button (OK): To confirm an entry or selection. (Available to display the channel list in TV mode).

Back Button (←): To return to the previous menu or exit an App.

Home Button (): To access the Smart TV homepage.

EPG/Guide Button (): To access the Electronic Program Guide (EPG) (only available for digital channels). Or access to DTV EPG. (Available only in Google TV mode).

Volume Buttons (VOL +/-): To control the volume.

Channel Buttons (CH +/-): To change channels.

List Button (LIST): To access DTV channel list.

Information Button (): To display program information, if available.

4.1. Shortcut Buttons

The remote control includes dedicated shortcut buttons for quick access to popular streaming services and functions:

- [Netflix](#)
- [Prime Video](#)
- [YouTube](#)
- [TCL Channel](#)
- [TCL Home](#)
- [Web](#)





Image: The remote control featuring six dedicated shortcut buttons for popular applications and functions.



6 Shortcut Buttons

Image: A visual representation of the remote control's six shortcut buttons, surrounded by the logos of the applications they access.

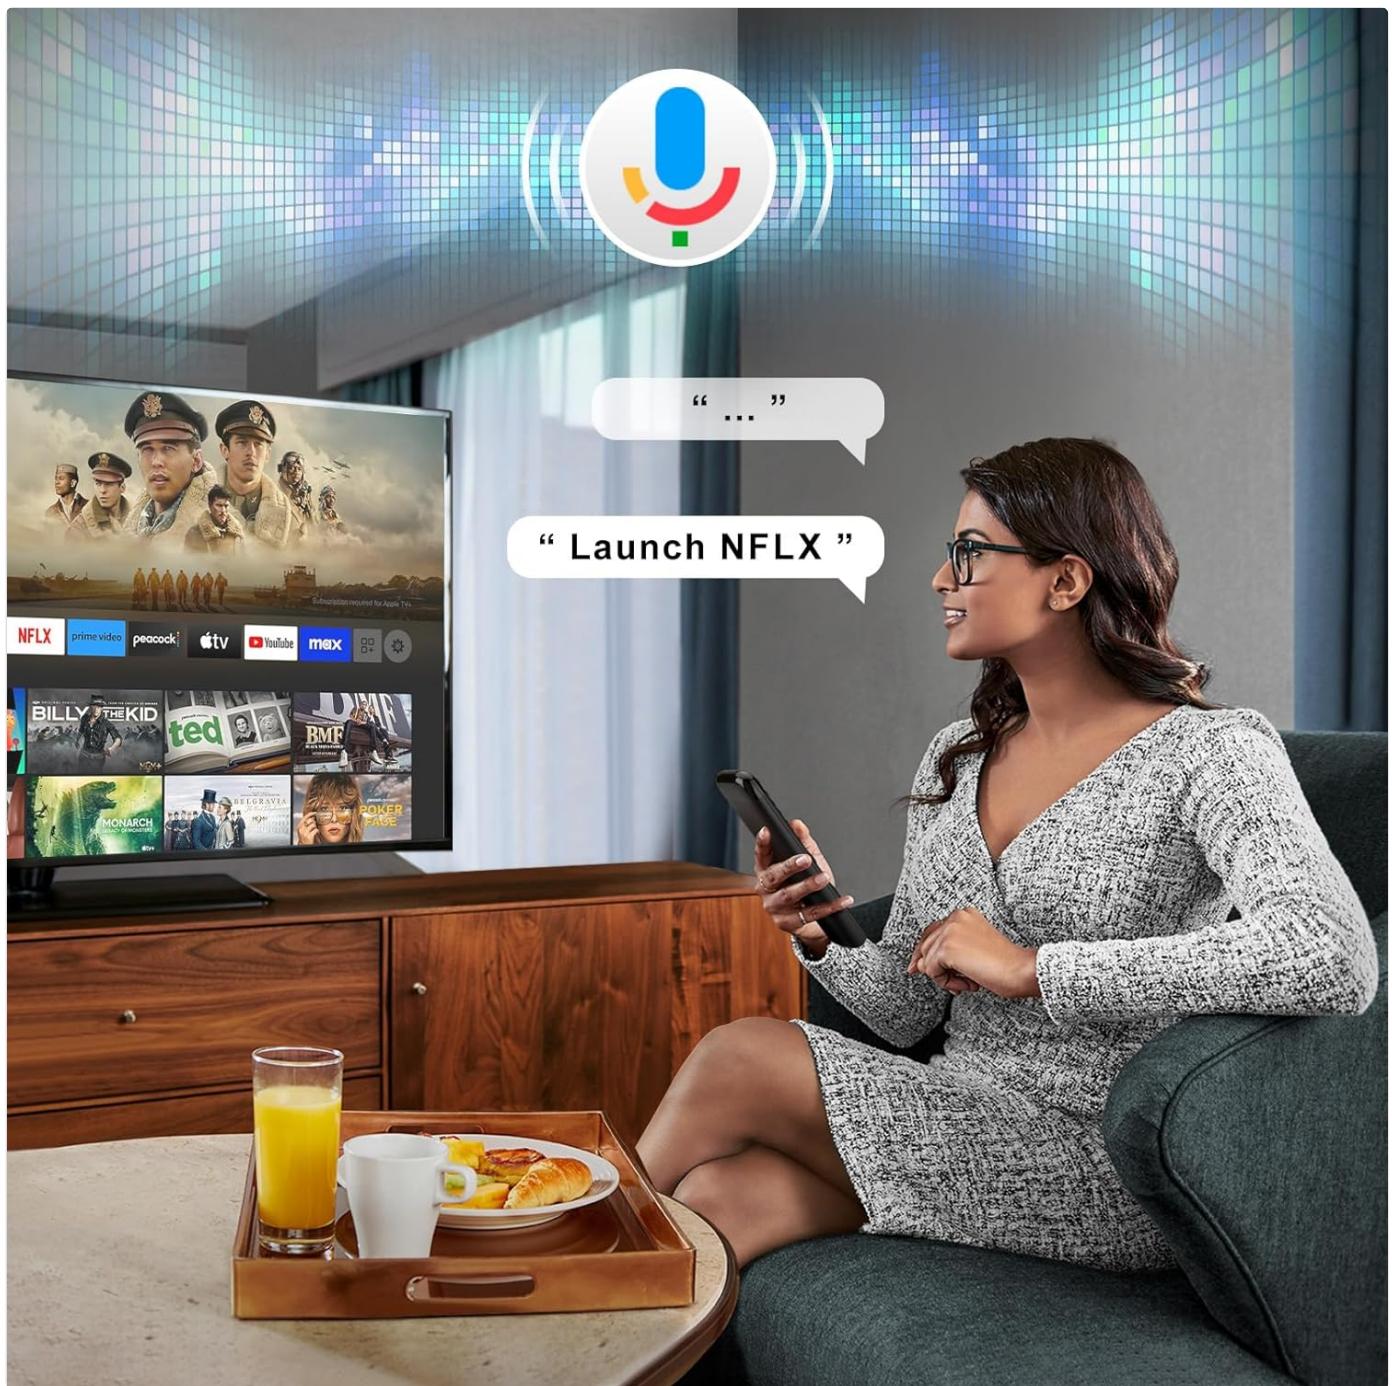


Image: A user demonstrating the voice search feature, speaking a command to the remote control which is then displayed on the TV screen.

5. MAINTENANCE

- Keep the remote control clean by wiping it with a soft, dry cloth.
- Avoid exposing the remote control to extreme temperatures, humidity, or direct sunlight.
- Do not drop the remote control or subject it to strong impacts.
- If the remote control will not be used for an extended period, remove the batteries to prevent leakage.

6. TROUBLESHOOTING

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
Remote control not responding.	<ul style="list-style-type: none"> Check if batteries are inserted correctly and have sufficient charge. Replace if necessary. Ensure there are no obstructions between the remote control and the TV's IR receiver. Re-pair the remote control with the TV if using voice or Bluetooth functions.
Voice function not working.	<ul style="list-style-type: none"> Ensure the remote is properly paired with the TV (refer to Section 3.2). Verify that the TV has a stable internet connection. Confirm that the TV is in Google TV mode. Check if Google Assistant is supported in your region and language.
Limited range or delayed response.	<ul style="list-style-type: none"> Replace batteries with new ones. Ensure you are within the effective transmission distance (up to 8 meters / 26 feet). Minimize interference from other electronic devices.

7. SPECIFICATIONS

Feature	Detail
Brand	LOUTOC
Model Number	RC833
Compatible Devices	TCL Android/Google TV (Specific series and models listed in Section 2)
Power Source	2 x AAA Batteries
Transmission Distance	Over 8 meters / 26 feet
Color	Black
Special Features	Digital Display, Ergonomic Design, Voice Search
Package Dimensions	21 x 5.1 x 2.2 cm
Item Weight	90 g



1.6 in(4.1cm)



0.7 in(1.8cm)



8.1 in
(20.5cm)



2 *AAA batteries

Image: Detailed dimensions of the remote control and its battery requirements.



Image: An infographic summarizing key performance features such as transmission distance, response time, battery type, and shortcut buttons.

8. SUPPORT AND WARRANTY

For any questions regarding your LOOUTOC remote control or your order, please contact customer support directly. We aim to respond to inquiries within 12 hours on working days.

Information regarding specific warranty terms may be provided at the point of purchase or within the product packaging. Please retain your proof of purchase for warranty claims.

