



[Manuals.plus](#) /

> [GROBELL](#) /

> GROBELL Steam Cleaner: Fast 50-Sec Heat-Up Refill Anytime-No Cooling-Detachable Hose Multi Portable Handheld Steamer Mop for Home Use Car Upholstery Bed Furniture Bathroom Tile Grout Floor Cleaning White

GROBELL GB-150STEAM

GROBELL Steam Cleaner User Manual

Model: GB-150STEAM | Brand: GROBELL

INTRODUCTION

Thank you for choosing the GROBELL Steam Cleaner. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new steam cleaner. Designed for chemical-free cleaning, this versatile appliance utilizes high-temperature steam to tackle dirt, grime, and stains on a wide range of surfaces, from floors and tiles to upholstery and windows. Please read this manual thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This appliance produces steam at temperatures between 230°F-260°F (110°C-126°C), which can cause severe burns. Exercise extreme caution.

- Do not direct steam at people, pets, or electrical appliances.
- Ensure the appliance is unplugged before filling or emptying the water tank, or performing any maintenance.
- Use only clean tap water. Do not add detergents, perfumes, or other chemicals to the water tank, as this can damage the appliance and void the warranty.
- To ensure the steam is dry enough, press the steam trigger to expel any condensed water left in the hose from the previous use before applying to surfaces.
- When using the steam cleaner on any fabric surface, car seats, car interiors, or wooden furniture, you must use the fiber cap to complete the task to prevent damage.
- Keep the appliance out of reach of children.
- Do not operate the appliance if the cord or plug is damaged.

PACKAGE CONTENTS

Verify that all items are present and in good condition upon unpacking. The GROBELL Steam Cleaner comes with a

comprehensive 21-piece accessory kit to address various cleaning needs.



Versatile & Multi-Purpose 21-Piece Professional Accessory Kit

Image: The 21-piece professional accessory kit.

- GROBELL Steam Cleaner Main Unit
- Detachable Hose with Handle
- Mop Head
- Extension Tubes (x2)
- Microfiber Pads (x3)
- Squeegee for windows and glass
- Triangular Brush (for wallpaper removal, etc.)
- Nylon & Brass Brushes (for floor tile, car, etc.)
- Nozzle
- Bonnet
- Microfiber Cloth

- Glove (to prevent scalding)
- Storage Bag

PRODUCT OVERVIEW


Familiarize yourself with the main components of your GROBELL Steam Cleaner.



Image: Main unit and accessories.

Hose Detachable

Cold Water

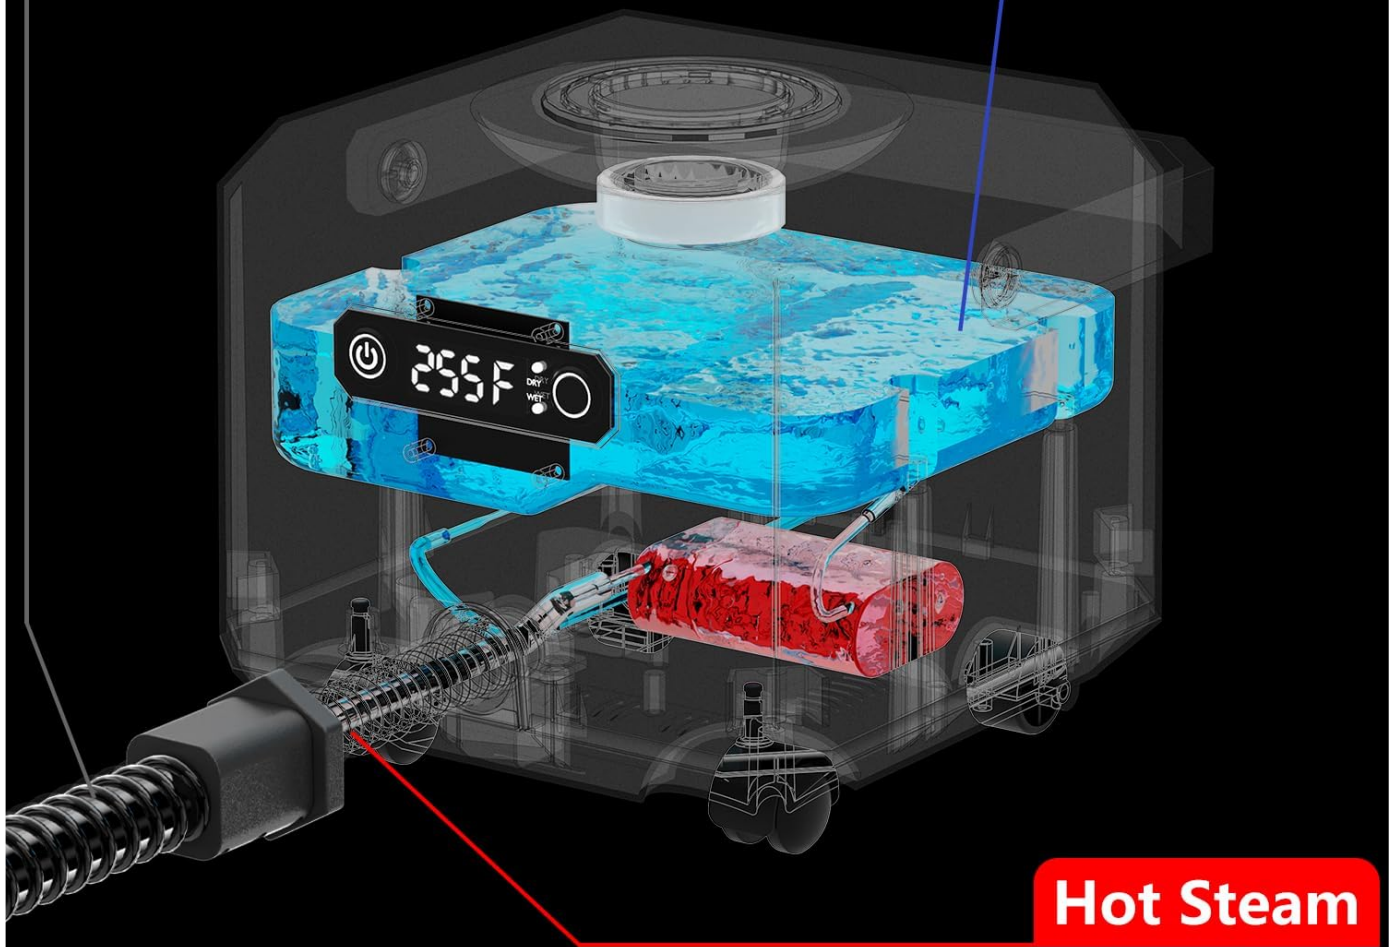

Safer & Fast 50-Sec Heat-Up

No Waiting for Water Refill - No Cooling

Image: Internal mechanism showing water flow and heating.

The main unit houses the water tank and heating element. The detachable hose connects to various cleaning attachments, allowing for flexible and targeted cleaning. The digital display on the main unit shows the current temperature.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Fill Water Tank:** Open the water tank lid on the main unit. Fill the 0.6-gallon (2.2-liter) water tank with clean tap water. Do not overfill. Close the lid securely.
3. **Attach Hose:** Connect the detachable hose to the main unit by aligning the connectors and pushing firmly until it clicks into place.
4. **Select and Attach Accessory:** Choose the appropriate cleaning attachment (e.g., mop head, nozzle, brush) for your task. Attach it to the end of the hose or to the extension tubes if needed.

5. **Plug In:** Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Getting Started

1. **Power On:** Press the power button on the main unit. The unit will begin heating up.
2. **Heat-Up Time:** The steam cleaner will produce steam in approximately 50 seconds, reaching optimal temperatures of 230°F-260°F (110°C-126°C). The display will indicate when it's ready.
3. **Expel Condensed Water:** Before applying steam to your desired surface, point the attachment away from yourself and others, and press the steam trigger to release any condensed water that may have accumulated in the hose. This ensures dry steam for effective cleaning.

Using the Steam Cleaner

The GROBELL Steam Cleaner offers both dry and wet steam modes. You can add water at any time during operation without closing the water tank lid or waiting for the unit to cool down.



Chemical-Free Sterilization

Wet/Dry Steam Mode Switchable (No Vacuum Function)

Image: Cleaning a wooden floor with the mop head.

General Cleaning:

- Hold the attachment close to the surface you wish to clean. The closer the attachment, the hotter and more effective the steam will be.
- Move the attachment slowly over the surface to allow the steam to penetrate and loosen dirt.
- Wipe away loosened dirt with a clean cloth or the microfiber pad.



Large 0.6 Gal Water Tank Portable and Compact Design

Image: Cleaning car upholstery.

Specific Applications:

- **Floors (Laminate, Tile, Hardwood):** Use the mop head with a microfiber pad. For stubborn spots, use a brush attachment.
- **Upholstery & Fabrics (Sofa, Car Seats, Mattresses, Curtains):** Always use the fiber cap over the nozzle or brush to protect delicate materials. Move quickly to avoid oversaturation.
- **Grout & Tile:** Use the nylon or brass brushes for effective cleaning of grout lines.
- **Windows & Glass:** Attach the squeegee tool. Steam the surface, then use the squeegee to wipe clean.
- **Kitchen & Bathroom Surfaces (Ovens, Grills, Showers, Toilets):** Use appropriate brushes or nozzles for targeted cleaning.
- **Wallpaper Removal:** The triangular brush can be used to loosen wallpaper for easier removal.



And More



Image: Versatile cleaning applications.



Window Cleaning

Image: Window cleaning with the squeegee attachment.

GROBELL
by awasky



Image: Diagram showing effective steam range.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your steam cleaner.

After Each Use:

- **Unplug and Cool Down:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning or storing.
- **Empty Water Tank:** Drain any remaining water from the tank.
- **Clean Accessories:** Wash microfiber pads and cloths with mild detergent and water. Allow them to air dry completely. Clean brushes and other attachments by rinsing them under water.
- **Wipe Down Unit:** Wipe the exterior of the main unit and hose with a damp cloth.

Storage:

Store the steam cleaner and its accessories in a cool, dry place, away from direct sunlight and extreme temperatures. The detachable hose makes storage easier.

TROUBLESHOOTING

If you encounter issues with your GROBELL Steam Cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam or low steam output	Water tank is empty or low. Unit not heated sufficiently. Condensed water in hose.	Refill water tank. Allow 50 seconds for heat-up. Press steam trigger away from surface to expel condensed water.
Water leaking from attachment	Attachment not securely connected. Too much condensed water.	Ensure attachment is firmly clicked into place. Expel condensed water before use.
Appliance not turning on	Not plugged in. Power outlet issue.	Check power cord connection. Try a different outlet.
Steam is not hot enough	Unit not fully heated.	Wait for the unit to reach full operating temperature (indicated on display).

SPECIFICATIONS

Feature	Detail
Model Name	GB-150STEAM
Item Weight	4 Pounds (approx. 1.8 kg)
Form Factor	Cannister
Wattage	1650 watts

Feature	Detail
Tank Volume	0.6 Gallons (approx. 2.2 Liters)
Heat-Up Time	Fast 50 seconds
Steam Temperature	230°F-260°F (110°C-126°C)
Hose Length	7.2 feet (approx. 2.2 meters)
Item Display Dimensions	23.1 x 23.1 x 20.6 Centimetres (approx. 9.2" x 9.2" x 8.4")

WARRANTY AND SUPPORT

Warranty Information:

This GROBELL Steam Cleaner is covered by a **1 Year Manufacturer Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accidents, unauthorized modifications, or failure to follow the instructions in this manual.

Customer Support:

Should you have any questions, require assistance, or need to claim warranty service, please contact our brand service team. Refer to the contact information provided on the product packaging or the official GROBELL website for the most up-to-date support details.