

Airzeen J10

Airzeen J10 Robot Vacuum and Mop Instruction Manual

MODEL: J10

Introduction

The Airzeen J10 Robot Vacuum and Mop is a versatile 3-in-1 cleaning solution designed to simplify your home maintenance. It combines sweeping, vacuuming, and mopping functionalities with powerful suction and intelligent navigation. This manual provides essential information for setting up, operating, and maintaining your device to ensure optimal performance.

Key Features:

- **3-in-1 Functionality:** Sweeps, vacuums, and mops for comprehensive cleaning.
- **Powerful Suction:** Up to 4000Pa for effective debris pickup on various surfaces.
- **Long Battery Life & Auto Charging:** 2600mAh battery provides up to 120 minutes of cleaning, with automatic return to dock.
- **Intelligent Obstacle Avoidance:** Advanced infrared anti-fall and collision sensors for uninterrupted cleaning.
- **Carpet Power Boost:** Automatically increases suction on carpets.
- **Smart Control:** Compatible with APP, Alexa, and remote control.

Setup

1. Unboxing and Initial Inspection:

Carefully remove all components from the packaging. Ensure all items listed in the 'What's Included' section are present.

What's in the box



- | | |
|-----------------------------------|---|
| 1 J10 Robot Vacuum Cleaner* 1 | 7 Mopping Cloth* 1 |
| 2 Charging Dock * 1 | 8 Main Brush * 1 |
| 3 2-in-1 Dustbin & Water Tank * 1 | 9 High-efficiency Filter* 1 |
| 4 Mopping Cloth Holder* 1 | 10 Cleaning Brush * 1 |
| 5 Remote Control*1 | 11 Adapter*1 |
| 6 Side Brush* 2 | 12 2m Magnetic Stripe*+
Magnetic Strip Double-sided Tape*1 |

Figure 1: A visual guide to all items included in the J10 Robot Vacuum Cleaner package, such as the robot, charging dock, dustbin, mop cloth, remote, and brushes.

2. Charging Dock Placement:

Place the charging dock against a wall in an open area, ensuring there are no obstacles within 1 meter (3 feet) to the front and 0.5 meters (1.5 feet) to the sides. Plug the adapter into the charging dock and a power outlet.

3. Initial Charging:

Place the J10 robot vacuum onto the charging dock. Ensure the charging contacts on the robot align with

those on the dock. The indicator lights will illuminate to show charging status. Fully charge the robot before its first use (approximately 4-5 hours).

4. Attaching Side Brushes:

Turn the robot over. Press the side brushes onto their respective posts until they click into place.

5. Installing Mop Cloth and Filling Water Tank:

Attach the mop cloth to the mop cloth holder using the Velcro strips. Open the water tank cap on the 2-in-1 dustbin & water tank, fill it with clean water (or a compatible cleaning solution), and securely close the cap. Insert the filled tank back into the robot.

6. Connecting to the App:

For smart control features, download the 'HonySmart' app from your app store. Follow the in-app instructions to connect your J10 robot vacuum to your 2.4 GHz Wi-Fi network and Bluetooth.

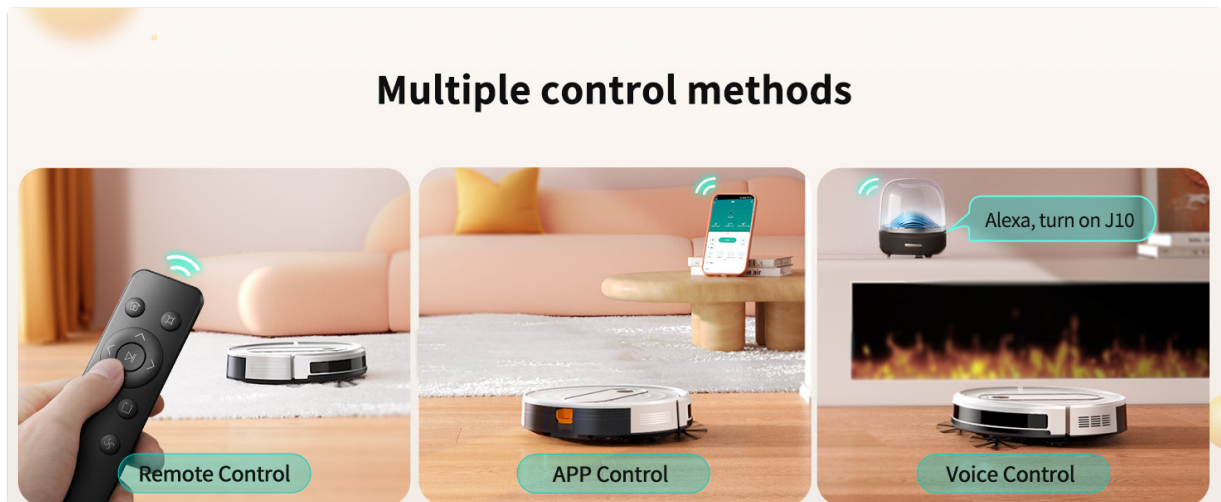


Figure 2: A step-by-step guide on how to connect the J10 robot vacuum to the 'HonySmart' app via Wi-Fi and Bluetooth.

Operating Instructions

1. Cleaning Modes:

The J10 offers various cleaning modes to suit different needs:

- **Zig-Zag Cleaning:** Efficient, systematic cleaning pattern.
- **Spot Cleaning:** Concentrates on a specific dirty area.
- **Random Cleaning:** Covers the area randomly.
- **Edge Cleaning:** Cleans along walls and furniture edges.

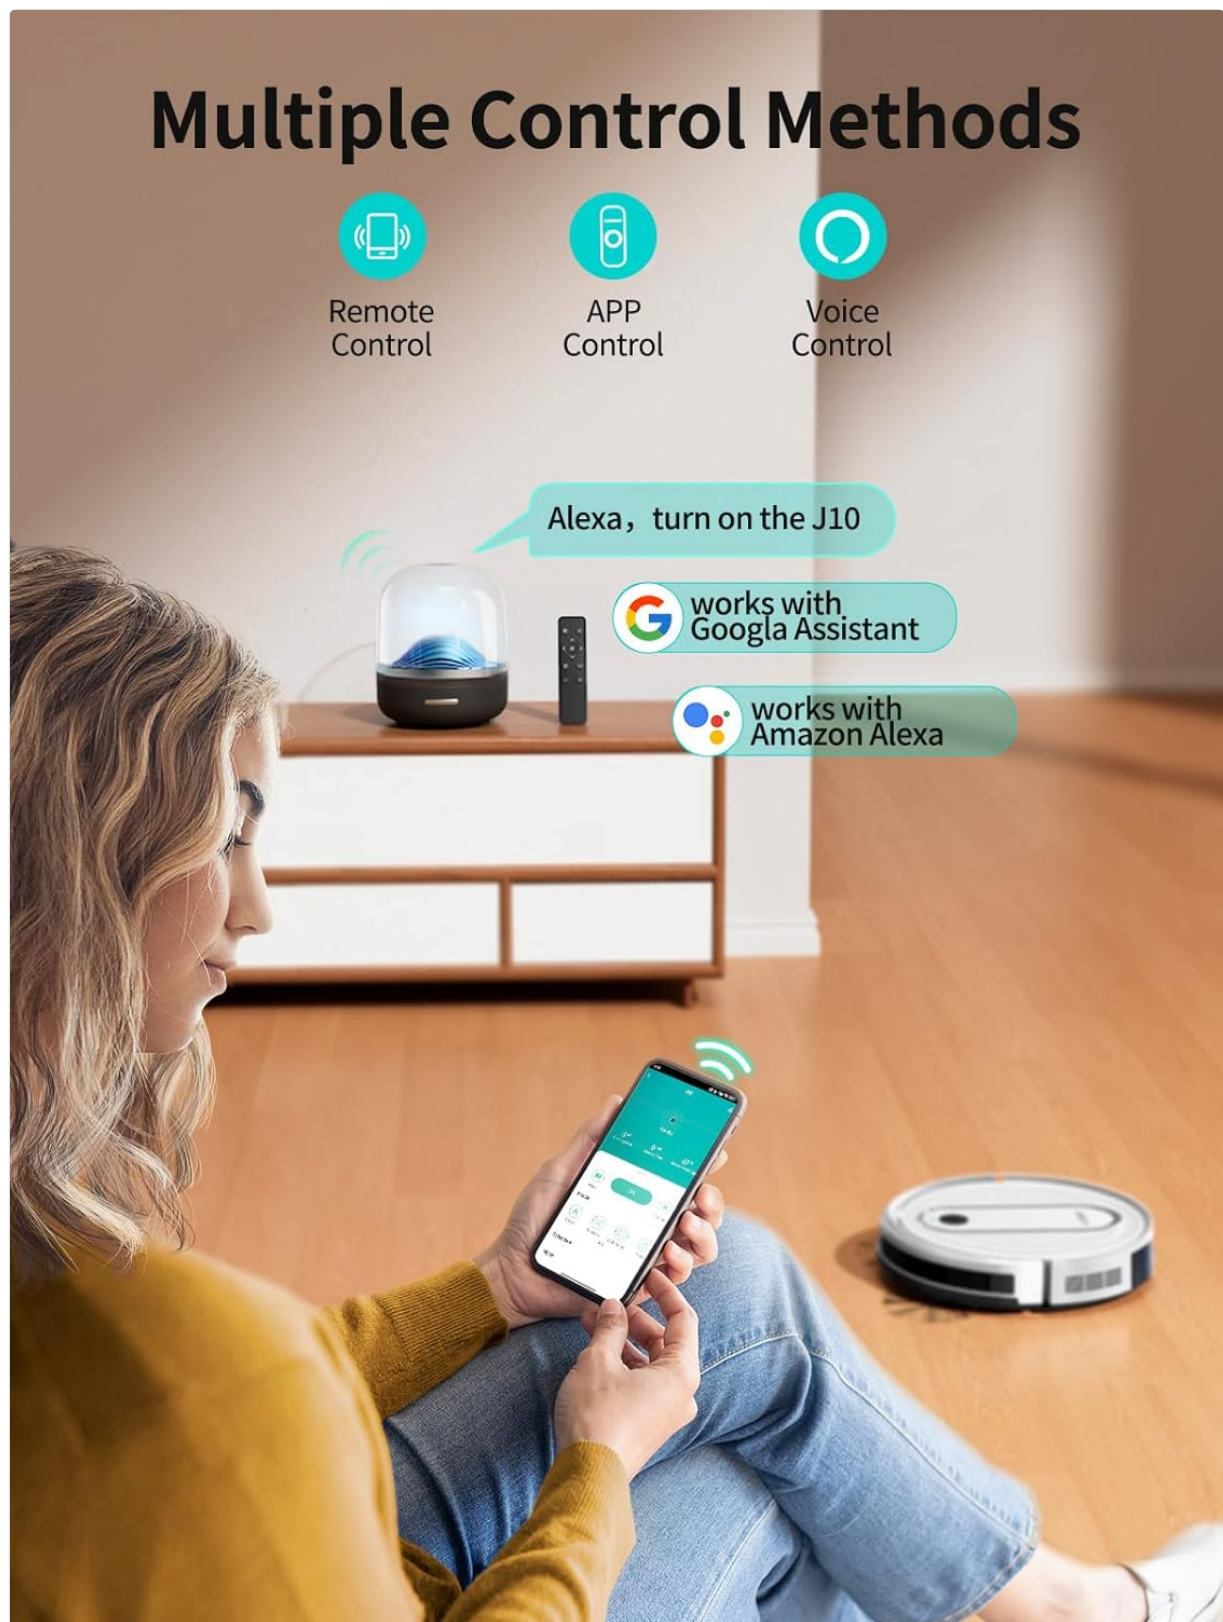


Figure 3: An overhead view illustrating the J10's various cleaning modes: Zig-Zag, Spot, Random, and Edge Cleaning.

2. Control Methods:

Control your J10 using the following methods:

- **Remote Control:** Use the included remote for basic commands and mode selection.
- **Smartphone App:** The 'HonySmart' app allows for scheduled cleanings, mode switching, suction power adjustment, and water flow control.
- **Voice Control:** Integrate with Alexa for convenient voice commands.

Multiple Control Methods

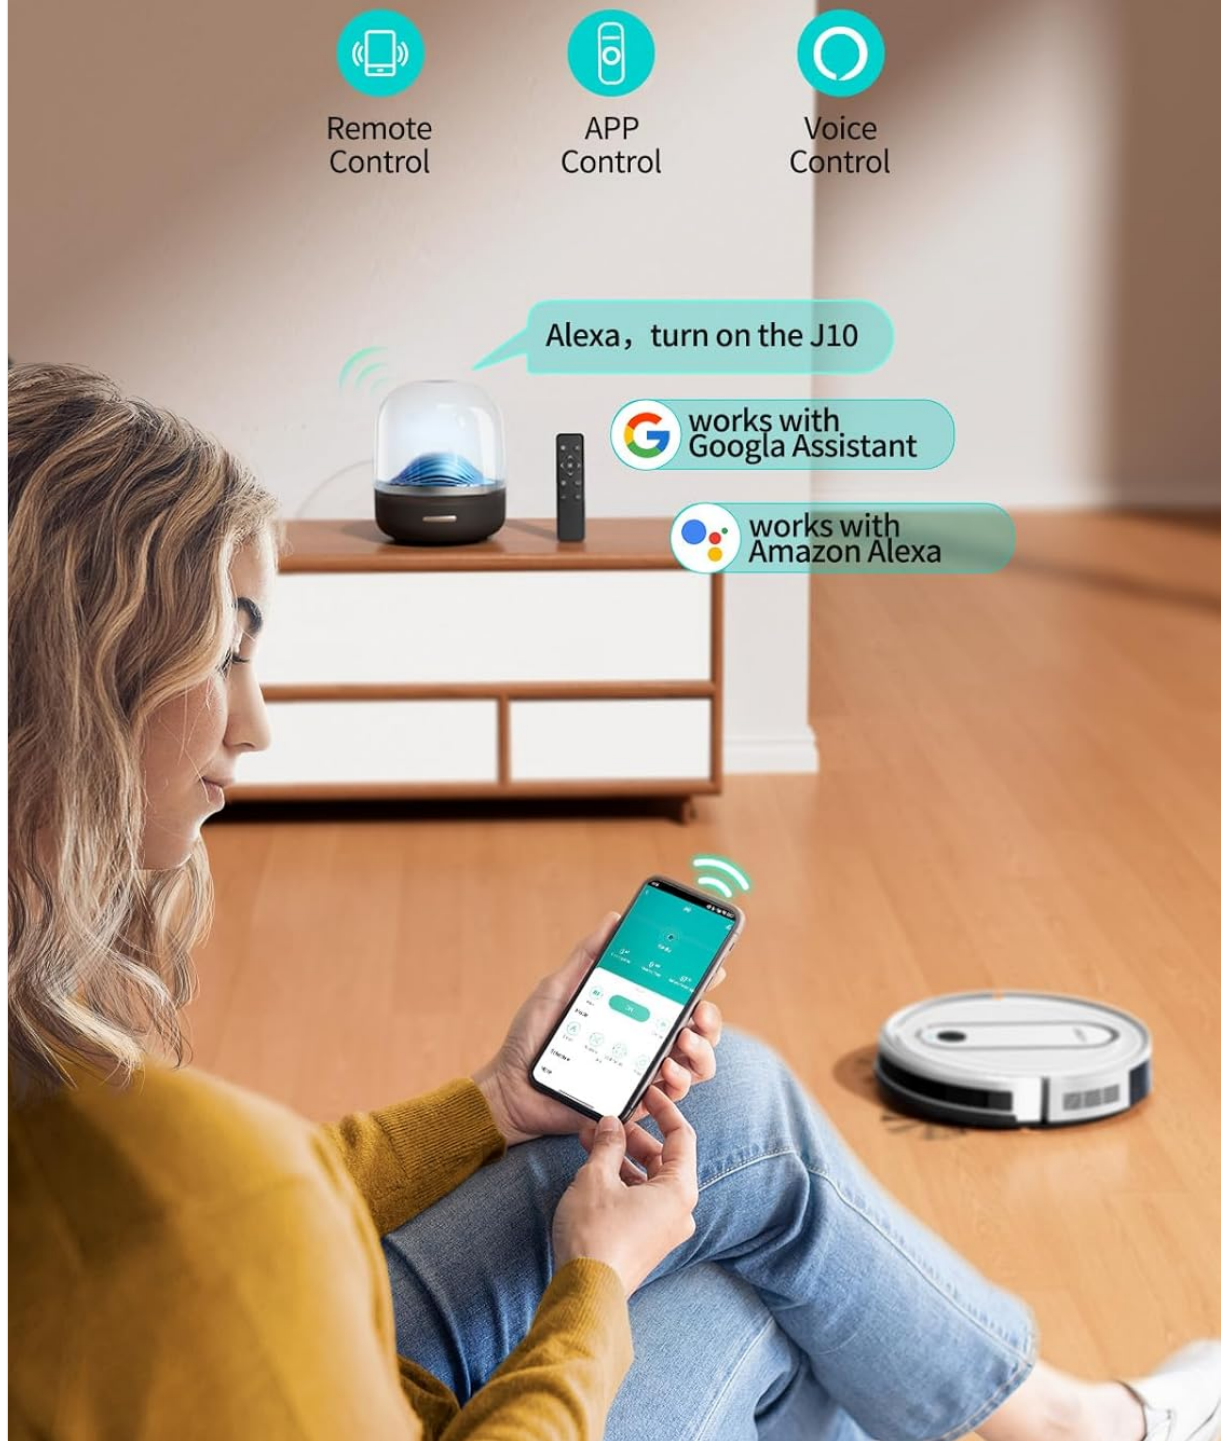


Figure 4: A user controlling the J10 robot vacuum via remote control, smartphone app, and voice commands through Alexa.

3. Carpet Power Boost:

The J10 automatically detects carpets and increases its suction power for deeper cleaning. This feature ensures effective cleaning across different floor types.

Abundant Cleaning Modes

Improve cleaning efficiency by adopting the most suitable cleaning path in different areas and under different circumstances.

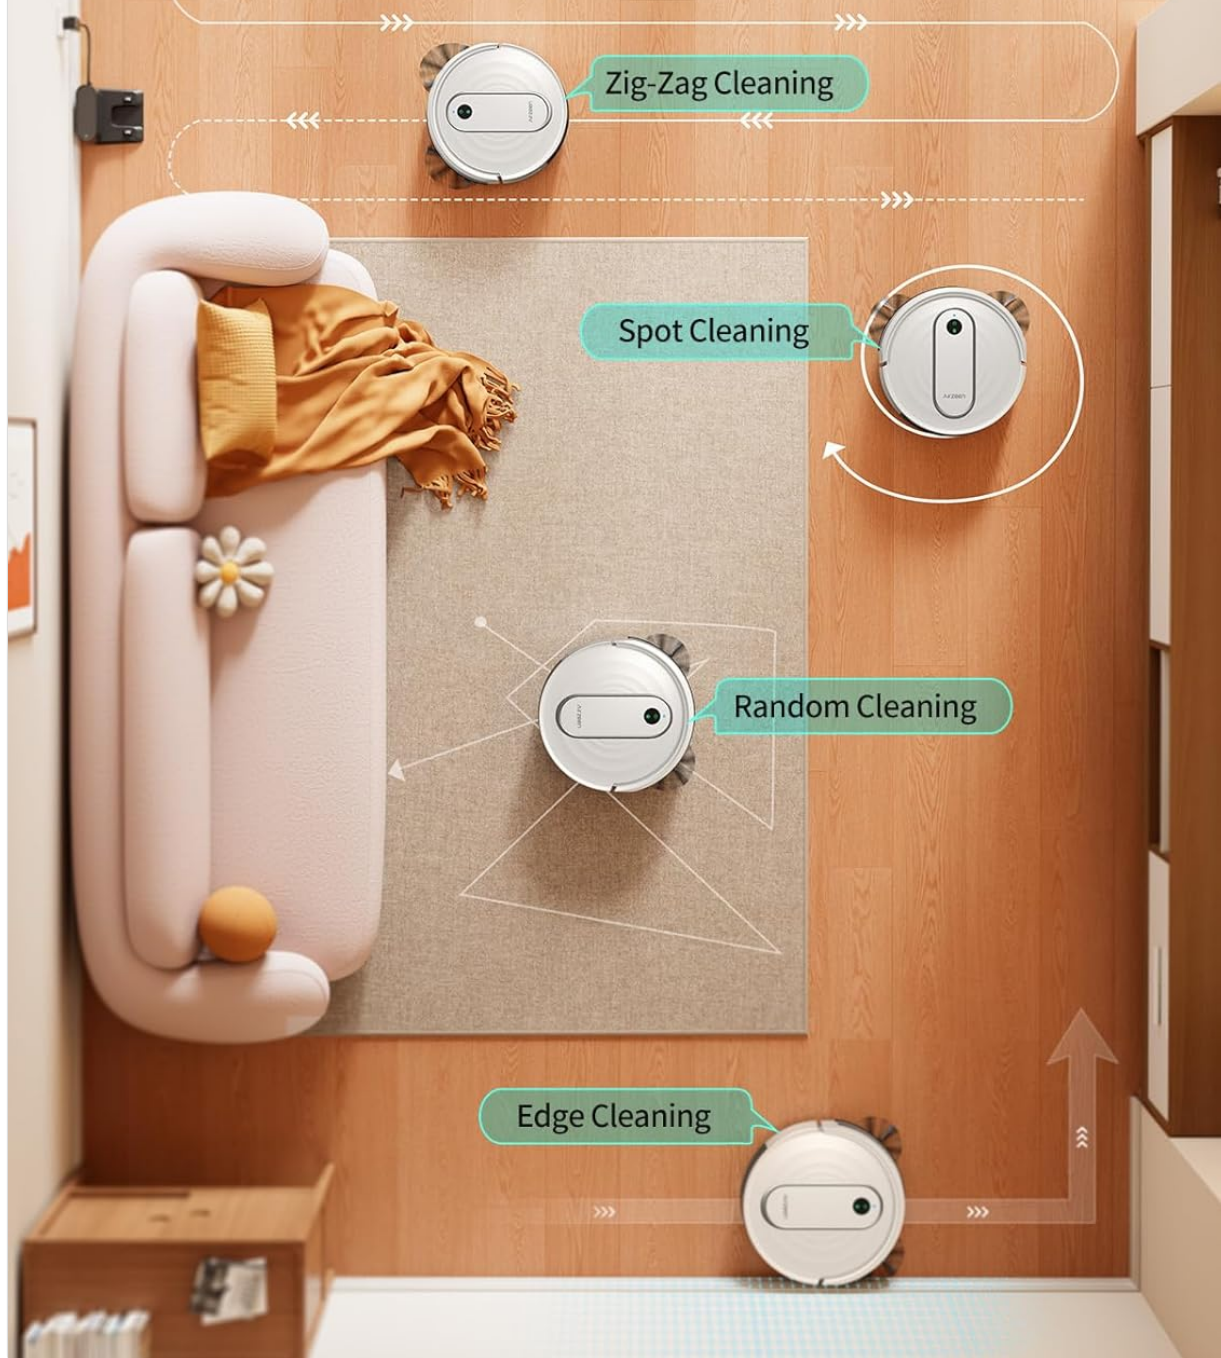


Figure 5: The J10 robot vacuum transitioning from hard floor to carpet, automatically boosting suction power for deep cleaning.

4. Intelligent Obstacle Avoidance:

Equipped with infrared anti-fall and collision sensors, the J10 navigates around furniture, avoids stairs, and prevents falls.



Figure 6: The J10 robot vacuum demonstrating its anti-drop, ultra-thin design for under furniture, and anti-collision capabilities.

5. Setting No-Go Zones:

Use the included 2-meter magnetic strip to create virtual boundaries, preventing the robot from entering specific areas.

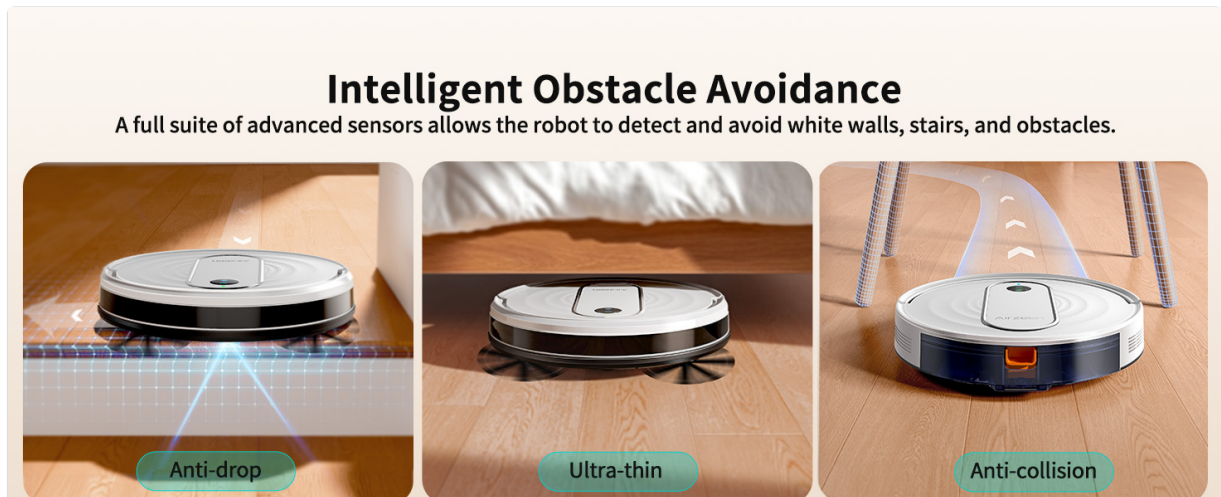


Figure 7: An illustration of how to use 2m boundary strips to set 'No-Go Zones' for the J10 robot vacuum.

6. Scheduled Cleaning:

Schedule cleaning times in advance using the smartphone app to maintain a tidy home effortlessly.



Figure 8: A smartphone app showing the scheduling feature for the J10 robot vacuum, allowing users to set cleaning times

in advance.

Maintenance

1. Emptying Dustbin and Water Tank:

Regularly empty the 2-in-1 dustbin and water tank. Press the blue button on the side of the robot to remove the tank. Open the tank to dispose of collected debris and refill water as needed.

Video 1: This video demonstrates the installation and use of the mopping feature, including how to attach the mop pad and fill the water tank. It also shows the robot in action, highlighting its mopping capabilities.

2. Cleaning Mop Cloth:

The mop cloth is attached with Velcro and is washable. Remove it after each mopping session and clean it thoroughly. Replace if worn.

3. Cleaning Main Brush and Side Brushes:

Periodically remove and clean the main brush and side brushes to prevent hair entanglement and maintain cleaning efficiency. Use the provided cleaning brush for this task.

4. Cleaning High-Efficiency Filter:

The high-efficiency filter should be cleaned regularly. Tap it gently to remove dust or rinse it with water if necessary (ensure it's completely dry before reinstallation).

Troubleshooting

Robot Getting Stuck:

- Remove the 3 anti-collision protection cottons as instructed before first use.
- If not mopping or in a carpeted area, remove the mop cloth holder to prevent it from getting stuck.
- Clear the floor of narrow areas, wires, shoes, socks, and large garbage.

Main Wheels Smooth Operation:

- Keep the floor clear of wires, shoes, clean socks, plastic bags, and other large debris.
- Regularly clean the machine and rotating parts to prevent hair entanglement and foreign objects.

Avoiding Cabinets and Furniture:

- The robot has a height of 7.8 cm. If cabinet bottom height is exactly 7.8 cm, there is a risk of getting stuck.
- Set No-Go Zones using the magnetic strip for furniture under 7.8 cm or carpets/mats over 25mm to prevent the vacuum from entering these areas.

Specifications

Brand	Airzeen
Model Name	J10
Special Feature	360-Degree Swivel, Advanced Custom Cleaning, Anti-Collision, Anti-Fall

Color	White
Product Dimensions	12"L x 12"W x 3"H
Included Components	Docking Station, Instruction Guide, Remote Control, Water Tank
Filter Type	Cloth
Battery Life	120 minutes
Power Source	Battery Powered
Control Method	App
Compatible Devices	Google Home
Form Factor	Robotic
Item Weight	8.71 pounds
Surface Recommendation	Hard Floors, Carpets

Warranty and Support

The Airzeen J10 Robot Vacuum Cleaner comes with a**24-Month Warranty**. For any inquiries or assistance, please contact our **24/7 Professional Customer Service**.