

[Manuals.plus](#) /

> [TFA Dostmann](#) /

> TFA Dostmann Mini Digital Alarm Clock with Temperature (Model 60.2044.02) User Manual

TFA Dostmann 60.2044.02

TFA Dostmann Mini Digital Alarm Clock with Temperature (Model 60.2044.02) User Manual

Model: 60.2044.02

1. INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your TFA Dostmann Mini Digital Alarm Clock with Temperature. Please read this manual thoroughly before using the device to ensure proper function and longevity.

2. SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping the device or subjecting it to strong impacts.
- Do not attempt to disassemble or repair the device yourself. Contact qualified personnel for service.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Dispose of used batteries according to local regulations.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- TFA Dostmann Mini Digital Alarm Clock (Model 60.2044.02)
- Instruction Manual (this document)

Note: 2 x 1.5V AAA batteries are required and are not included in the package.

4. PRODUCT OVERVIEW

The TFA Dostmann Mini Digital Alarm Clock is a compact, battery-operated device designed to display time, date, alarm settings, and indoor temperature. Its small size makes it suitable for bedside tables or



Figure 1: Front view of the alarm clock. The digital display shows the current time (e.g., 13:54), alarm time (e.g., 7:00), and indoor temperature (e.g., 22.6 °C).



Figure 2: Back view of the alarm clock. This image highlights the control buttons: 'M' (Mode), '^' (Up/Adjust), and 'v' (Down/Adjust).

5. SETUP

5.1 Battery Installation

1. Locate the battery compartment cover on the back of the alarm clock.
2. Slide or gently pry open the cover.
3. Insert two (2) 1.5V AAA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover securely.

The clock will power on and display default settings or the current time if previously set.

5.2 Initial Settings (Time and Date)

1. Press and hold the **M** (Mode) button for approximately 3 seconds to enter time setting mode. The hour digits will flash.
2. Use the '^' (Up) or 'v' (Down) buttons to adjust the hour.
3. Press **M** again to confirm the hour and move to minute setting. The minute digits will flash.
4. Use the '^' or 'v' buttons to adjust the minutes.
5. Continue pressing **M** to cycle through and set the year, month, and day using the '^' or 'v' buttons for each value.
6. After setting the day, press **M** one last time to exit setting mode.

6. OPERATING INSTRUCTIONS

6.1 Setting the Alarm

1. From the normal time display, press the **M** button once to switch to alarm time display mode. The alarm time will be shown.
2. Press and hold the **M** button for approximately 3 seconds. The alarm hour digits will flash.
3. Use the **^** or **v** buttons to adjust the alarm hour.
4. Press **M** again to confirm the alarm hour and move to alarm minute setting. The alarm minute digits will flash.
5. Use the **^** or **v** buttons to adjust the alarm minutes.
6. Press **M** one last time to exit alarm setting mode.

6.2 Activating/Deactivating the Alarm

In normal time display mode, press the **^** button once to toggle the alarm ON or OFF. An alarm icon (e.g., a bell) will appear on the display when the alarm is active.

6.3 Snooze Function

When the alarm sounds, press any button (except the alarm OFF button, if present) to activate the snooze function. The alarm will temporarily stop and sound again after a few minutes (typically 5-10 minutes, refer to specific model behavior if different).

6.4 Display Modes (Time, Date, Temperature)

The clock automatically displays the current time and indoor temperature. You can switch between displaying the date and the alarm time in the secondary display area by pressing the **v** button in normal time display mode.

The integrated thermometer measures indoor temperature within a range of -10 °C to +50 °C.

7. MAINTENANCE

7.1 Cleaning

Wipe the device with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the display or casing.

7.2 Battery Replacement

When the display becomes dim or the clock functions erratically, it is time to replace the batteries. Follow the battery installation steps in Section 5.1. Always replace both batteries at the same time with new 1.5V AAA batteries.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Batteries are depleted or incorrectly installed.	Replace batteries with new 1.5V AAA batteries, ensuring correct polarity.

Problem	Possible Cause	Solution
Alarm does not sound.	Alarm is not activated or alarm time is incorrect.	Ensure the alarm is activated (check for alarm icon). Verify the alarm time is set correctly.
Incorrect time/date.	Time/date was not set correctly or batteries were removed.	Reset the time and date following the instructions in Section 5.2.
Temperature reading seems inaccurate.	Device is placed near a heat source, cold draft, or in direct sunlight.	Relocate the clock to a stable indoor environment away from direct temperature influences.

9. SPECIFICATIONS

Brand:	TFA Dostmann
Model Number:	60.2044.02
Display Type:	Digital
Movement Type:	Quartz
Special Features:	Alarm, Calendar Display, Temperature Display
Power Source:	Battery Powered (2 x 1.5V AAA, not included)
Material:	Plastic
Dimensions (L x W x H):	72 x 25 x 56 mm
Weight:	51 grams
Indoor Temperature Range:	-10 °C to +50 °C
Color:	White

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official TFA Dostmann website. Keep your proof of purchase for any warranty claims.

Manufacturer: TFA Dostmann GmbH, Wertheim am Main, Germany.