

Joie Cinnamon 2-in-1 Glider and Rocker

Joie Cinnamon 2-in-1 Glider and Rocker Instruction Manual

Model: Cinnamon 2-in-1 Glider and Rocker

Brand: Joie

1. INTRODUCTION

Thank you for choosing the Joie Cinnamon 2-in-1 Glider and Rocker. This versatile product is designed to provide comfort and soothing motion for your baby, functioning as both a multi-motion glider and a portable rocker. Please read this manual thoroughly before assembly and use to ensure safe operation and proper maintenance.

2. SAFETY INFORMATION

WARNING: NEVER leave your child unattended in the glider or rocker. Always use the restraint system.

- Always secure your child with the SoftTouch harness system.
- Do not use this product if your child can sit up unaided or weighs more than 20 pounds (9 kg).
- Ensure the product is placed on a flat, stable surface.
- Keep children away from the product during assembly and disassembly.
- Do not use accessories or replacement parts other than those approved by the manufacturer.
- Always check that the seat is securely attached to the base when used as a glider.

3. PACKAGE CONTENTS

Verify that all parts are present before assembly:

- Glider/Rocker Seat with SoftTouch Harness
- Glider Base
- Overhead Toy Bar with 2 Soft Toys
- Power Adapter
- Instruction Manual

4. SETUP AND ASSEMBLY

Assembly of the Joie Cinnamon 2-in-1 Glider and Rocker is designed to be straightforward, utilizing a clip-in locking

system that requires no additional tools. Follow these steps:

1. **Assemble the Glider Base:** Ensure all base components are securely connected.
2. **Attach the Seat:** Align the glider/rocker seat with the glider base and firmly press down until it clicks into place. Verify it is securely locked.
3. **Install the Toy Bar:** Attach the overhead toy bar to the designated slots on the seat.
4. **Connect Power:** Plug the power adapter into the glider base and then into a wall outlet.



Image: The fully assembled Joie Cinnamon 2-in-1 Glider and Rocker, ready for use.



Image: The glider seat being lifted off its base, demonstrating its conversion to a portable rocker.

Your browser does not support the video tag.

Video: An overview of the Joie Cinnamon Glider and Rocker, showcasing its features and dual functionality. This video demonstrates the glider's various motions, sound options, and the easy transition to a portable rocker.

5. OPERATING INSTRUCTIONS

5.1 Glider Mode

When the seat is attached to the base, the product functions as a multi-motion glider. Use the controls on the base to customize the experience:

- **Motion Settings:** The glider offers side-to-side swaying, front-to-back gliding, or a combination of both. Adjust the motion speed using the dedicated knob.
- **Soothing Sounds:** Select from five nature sounds or five soothing songs. Adjust the volume as needed.
- **Gentle Vibrations:** The seat features two gentle vibration settings to further soothe your baby.

- **Recline Positions:** The seat offers multiple recline positions for optimal comfort. Adjust the recline by pressing the buttons on the side of the seat.



Image: A diagram highlighting the key features of the Joie Cinnamon Glider, including multi-motion, sounds, and vibrations.

5.2 Rocker Mode

To use the product as a portable rocker, simply lift the seat off the glider base. The seat's curved bottom allows for gentle rocking motion. A rocking stopper is integrated to stabilize the rocker when not in motion.



Image: A baby comfortably seated in the Joie Cinnamon Glider, with an adult nearby, demonstrating typical use.

5.3 Harness System

The SoftTouch harness ensures your baby's safety. Always secure your child properly:

- Place your child in the seat.
- Fasten the buckle.
- Adjust the straps to fit snugly around your child, ensuring they are not too tight or too loose.

get to
know

cinnamon™



Image: A close-up view of the SoftTouch harness system and the overhead toy bar with soft toys.

6. MAINTENANCE

Regular cleaning and maintenance will prolong the life of your Joie Cinnamon Glider and Rocker.

- **Fabric Care:** The seat inserts are removable for easy cleaning. Refer to the care labels on the fabric for specific washing instructions. Typically, machine wash cold on a gentle cycle and air dry.
- **Frame Care:** Wipe the frame and plastic parts with a damp cloth and mild soap. Do not use abrasive cleaners.
- **Storage:** When not in use, store the product in a clean, dry place away from direct sunlight.

7. TROUBLESHOOTING

If you encounter any issues, please refer to the following common solutions:

Problem	Possible Cause	Solution
Glider not turning on or no motion	Not plugged in; power adapter issue; loose connection	Ensure power adapter is securely plugged into both the unit and the wall outlet. Check for power at the outlet.
No sound or vibration	Volume too low; feature not activated	Increase volume using the controls. Ensure sound/vibration feature is turned on.
Seat not rocking smoothly in rocker mode	Rocking stopper engaged; uneven surface	Disengage the rocking stopper. Place the rocker on a flat, even surface.

If the issue persists, please contact Joie customer support.

8. SPECIFICATIONS

- **Brand:** Joie
- **Model:** Cinnamon 2-in-1 Glider and Rocker
- **Age Range:** Newborn
- **Maximum Weight Recommendation:** 20 Pounds
- **Assembly Required:** Yes

- **Item Dimensions (D x W x H):** 36"D x 32"W x 28.7"H
- **Color:** Walnut
- **Material Type:** Fabric
- **Portability:** Yes (Rocker seat is portable)



Image: The Joie Cinnamon Glider and Rocker with key dimensions indicated.

9. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official Joie website. If you require assistance with assembly, operation, or troubleshooting, please contact Joie customer support directly. Contact information can typically be found on the product packaging or the official Joie website.

Manufacturer: Joie

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question