

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER Crisp 'N Bake 6-Slice Digital Air Fry Toaster Oven Instruction Manual TO60D5-2BDC

BLACK+DECKER TO60D5-2BDC

BLACK+DECKER Crisp 'N Bake 6-Slice Digital Air Fry Toaster Oven Instruction Manual

Model: TO60D5-2BDC

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to OFF, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, drapes, walls, and the like, when in operation.
- Do not place any materials other than manufacturer's recommended accessories in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and similar items.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- Extreme caution must be used when removing tray or disposing of hot grease.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction

concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.

GETTING STARTED

Unpacking and Initial Setup

1. Remove all packing materials, any stickers, and the plastic band around the power plug.
2. Remove all accessories from the oven cavity.
3. Wash all removable parts as instructed in the "Cleaning and Maintenance" section.
4. Select a level, non-flammable surface where the unit will be used, ensuring at least 6 inches of space from the wall and any other objects.
5. Plug the power cord into an electrical outlet.

Components Identification

Familiarize yourself with the parts of your BLACK+DECKER Crisp 'N Bake Digital Air Fry Toaster Oven:

- Oven Housing
- Oven Door with Handle
- Digital Control Panel (with display, function buttons, and control knob)
- Air Fry Mesh Basket
- Baking Pan
- Wire Rack
- Removable Crumb Tray



Image: Front view of the toaster oven, highlighting the digital control panel and oven door.



Image: The air fry mesh basket, wire rack, and baking pan, which are included accessories.

Before First Use

It is recommended to operate the oven for approximately 10 minutes on the "Bake" setting at 400°F (205°C) before first use. This helps to burn off any manufacturing oils and ensures optimal performance. Ensure the room is well-ventilated during this process.

OPERATING INSTRUCTIONS

Digital Control Panel

The digital control panel features a display, function buttons, and a control knob for easy operation. The display shows selected function, temperature, and time.

- **Function Buttons:** Select desired cooking mode (Bake, Toast, Air Fry, Bagel, Broil, Pizza, Keep Warm, Reheat).
- **Control Knob:** Turn to adjust temperature, time, or toast shade. Press to confirm selection or start/stop cooking.
- **Start/Stop Button:** Initiates or pauses the cooking cycle.

Cooking Functions

This appliance offers 8 versatile cooking functions:

1. Bake: Ideal for casseroles, cakes, and general oven cooking.

- Place food on the baking pan or oven-safe dish on the wire rack.
- Select BAKE, adjust temperature and time using the control knob.
- Press Start/Stop to begin.

2. Toast: For bread, frozen waffles, and pastries.

- Place items directly on the wire rack.
- Select TOAST, adjust desired shade level (1-7) using the control knob.
- Press Start/Stop to begin.

3. Air Fry: For crispy results with little to no oil, such as fries, chicken wings, or vegetables.



Image: The toaster oven interior showing the air fry basket filled with curly fries, demonstrating its use.

- Place food in the air fry mesh basket, positioned on top of the baking pan to catch drips.
- Select AIR FRY, adjust temperature and time.
- Press Start/Stop to begin.

4. Bagel: To toast bagels, toasting the cut side while warming the other.

- Place bagel halves cut-side up on the wire rack.
- Select BAGEL, adjust desired shade level.
- Press Start/Stop to begin.

5. Broil: For browning, melting cheese, or cooking thin cuts of meat.

- Place food on the baking pan on the wire rack, typically on the top rack position.
- Select BROIL, adjust time. Temperature is usually fixed for broiling.
- Press Start/Stop to begin. Monitor food closely to prevent burning.

6. Pizza: Optimized for cooking pizzas up to 12 inches.

- Place pizza directly on the wire rack or on a pizza pan.
- Select PIZZA, adjust temperature and time.
- Press Start/Stop to begin.

7. Keep Warm: Maintains food at a serving temperature.

- Place cooked food in an oven-safe dish on the wire rack.
- Select KEEP WARM, adjust time. Temperature is preset.
- Press Start/Stop to begin.

8. Reheat: For warming up leftovers.

- Place food in an oven-safe dish on the wire rack.
- Select REHEAT, adjust temperature and time.
- Press Start/Stop to begin.



Image: The toaster oven with its door open, revealing the air fry basket placed above the baking pan, ready for use.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your appliance. Always unplug the oven and allow it to cool completely before cleaning.

Exterior Cleaning

- Wipe the exterior surfaces with a damp cloth or sponge and mild soap. Do not use abrasive cleaners or scouring pads.
- Dry thoroughly.

Interior Cleaning

- Remove the crumb tray, wire rack, baking pan, and air fry basket.
- Wipe the interior walls with a damp cloth or sponge. For stubborn stains, use a mild non-abrasive cleaner.
- Do not spray oven cleaner directly into the oven.
- Clean the glass door with a window cleaner or damp cloth.

Accessory Cleaning

- The air fry mesh basket, baking pan, wire rack, and crumb tray are dishwasher-safe for easy cleaning.
- Alternatively, wash them in warm, soapy water using a non-abrasive sponge. Rinse and dry thoroughly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; circuit breaker tripped.	Ensure plug is securely in outlet; check household power; reset circuit breaker.
Food is not cooking evenly.	Incorrect rack position; overcrowding; uneven food placement.	Refer to recommended rack positions; avoid overcrowding the oven; arrange food in a single layer for air frying.

Problem	Possible Cause	Solution
Excessive smoke during cooking.	Food residue or grease buildup; high-fat foods.	Clean the oven interior and accessories thoroughly; use the baking pan under the air fry basket to catch drips from high-fat foods.
Digital display is dim or unresponsive.	Temporary electrical glitch; unit needs reset.	Unplug the unit for 1 minute, then plug back in. If issue persists, contact customer service.

SPECIFICATIONS

- **Model Number:** TO60D5-2BDC
- **Brand:** BLACK+DECKER
- **Color:** Black
- **Product Dimensions:** 51.59 x 39.19 x 32.69 cm (20.31 x 15.43 x 12.87 inches)
- **Capacity:** Fits 6 slices of bread or a 12-inch pizza
- **Power/Wattage:** 750 watts
- **Item Weight:** 5.71 kg (12.59 lbs)
- **Special Features:** Adjustable Rack, LED Display, Large Capacity, Timer
- **Control Type:** Touch
- **Included Components:** Air Fry Mesh Basket, Baking Pan, Crumb Tray, Wire Rack, Toaster Oven

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the warranty card included with your purchase or visit the official BLACK+DECKER website. Keep your proof of purchase for warranty claims.

Online Support: www.blackanddecker.com/support