

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Joie](#) /

› [Joie Cinnamon 2-in-1 Glider and Rocker Instruction Manual](#)

Joie Cinnamon

Joie Cinnamon 2-in-1 Glider and Rocker Instruction Manual

Model: Cinnamon 2-in-1 Glider and Rocker

[Introduction](#) [Safety Information](#) [Package Contents](#) [Setup](#) [Operating Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the Joie Cinnamon 2-in-1 Glider and Rocker. This versatile product is designed to provide comfort and soothing for your baby, functioning as both a multi-motion baby swing and a portable rocker. Please read this manual carefully before assembly and use to ensure safe operation and optimal performance.



Image 1.1: The Joie Cinnamon 2-in-1 Glider and Rocker, showcasing its design and components.

2. IMPORTANT SAFETY INFORMATION

Always follow these safety guidelines to prevent serious injury or death.

- Never leave child unattended.
- Always use the restraint system.
- Do not use this product once your child can sit up unaided or weighs more than 20 lbs (9 kg).
- This product is not intended for prolonged periods of sleep.
- Never use this product on an elevated surface (e.g., a table).
- Always ensure the product is placed on a flat, level surface.
- Do not move or lift the product with the child in it, unless using the lift-off rocker feature as intended.
- Keep away from open flames and other sources of strong heat.
- Regularly check all parts for wear and tear. Discontinue use if any part is damaged or missing.

3. PACKAGE CONTENTS

Ensure all components are present before assembly:

- Glider Base Unit
- Rocker Seat Unit with 5-point harness
- Overhead Toy Bar with 2 soft toys
- Newborn Insert (removable)
- AC Power Adapter
- Instruction Manual

4. SETUP AND ASSEMBLY

Follow these steps to assemble your Joie Cinnamon 2-in-1 Glider and Rocker:

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Assemble Glider Base:** Connect the rocker frame to the glider base unit. Ensure all connections click securely into place.
3. **Attach Rocker Seat:** Align the rocker seat unit with the glider base and press down firmly until it locks into position. You should hear a click.
4. **Install Toy Bar:** Insert the overhead toy bar into the designated slots on the rocker seat.
5. **Connect Power:** Plug the AC power adapter into the glider base and then into a wall outlet.



Image 4.1: Front view of the fully assembled glider and rocker.

5. OPERATING INSTRUCTIONS

5.1 Glider Mode

The glider base offers multi-motion soothing. Use the control panel on the base to select your desired motion and settings.

- **Motion Settings:** Choose between front-to-back gliding, side-to-side swaying, or a combination of both.
- **Speed Adjustment:** Adjust the gliding/swaying speed using the speed control buttons.
- **Sounds & Music:** Select from 5 nature sounds or 5 soothing songs. Adjust volume as needed.
- **Vibration:** The rocker seat features two gentle vibration options. Activate and adjust using the dial on the side of the seat.



Image 5.1: Overview of key features including lift-off rocker, multi-motion glider, and sound/vibration controls.

Your browser does not support the video tag.

Video 5.1: Official product video demonstrating the multi-motion gliding, sound, and vibration features of the Joie Cinnamon Glider and Rocker.

5.2 Rocker Mode

The rocker seat can be detached from the glider base for portable use.

- Detaching the Seat:** Locate the release buttons on either side of the rocker seat where it connects to the glider base. Press these buttons and lift the seat upwards to detach.
- Using as a Rocker:** Place the detached seat on a flat, level floor. The curved base allows for gentle rocking.
- Stopping Rocking:** To stabilize the rocker, extend the rocking stopper located at the front of the rocker base.
- Recline Positions:** The rocker seat offers three recline positions for your baby's comfort. Adjust by pressing the recline buttons on the sides of the seat.
- Harness System:** Always secure your baby with the 5-point SoftTouch™ harness. Adjust straps for a snug fit.



Image 5.2: The rocker seat detached from the glider base, ready for portable use.

6. MAINTENANCE AND CARE

Regular cleaning and maintenance will prolong the life of your product.

- **Fabric Care:** The seat inserts are removable for easy cleaning. Refer to the care label for specific washing instructions (typically machine washable on a gentle cycle with cold water).
- **Frame Cleaning:** Wipe the plastic and metal parts of the frame with a damp cloth and mild soap. Do not use abrasive cleaners.
- **Storage:** When not in use, store the product in a clean, dry place away from direct sunlight.



Image 6.1: The plush fabrics and comfortable design of the rocker seat.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Product does not turn on or operate.	Power adapter not connected properly or power outlet issue.	Ensure the power adapter is securely plugged into both the unit and a working wall outlet. Check the power outlet with another device.
Gliding/Swaying motion is weak or inconsistent.	Weight limit exceeded or obstruction.	Ensure child's weight is within the 20 lbs limit. Check for any obstructions preventing smooth movement.
Vibration not working.	Vibration dial not activated or set too low.	Turn the vibration dial on the side of the seat to increase intensity.

Problem	Possible Cause	Solution
Rocker seat does not attach securely to the base.	Improper alignment or obstruction.	Ensure the seat is correctly aligned with the base and press firmly until it clicks into place. Check for any debris in the connection points.

8. SPECIFICATIONS

Model: Joie Cinnamon 2-in-1 Glider and Rocker

Maximum Weight Recommendation: 20 Pounds (9 kg)

Product Dimensions: 36"D x 32"W x 28.7"H (91.4 cm D x 81.3 cm W x 72.9 cm H)

Material Type: Fabric (Breathable mesh)

Age Range: Newborn

Features: Multi-motion gliding, portable rocker, 5 nature sounds, 5 soothing songs, 2 vibration options, 3 recline positions, 5-point harness, removable inserts.

9. WARRANTY AND SUPPORT

Joie products are manufactured to high-quality standards. For specific warranty information, please refer to the warranty card included with your purchase or visit the official Joie website. If you have any questions, require assistance, or need to order replacement parts, please contact Joie customer support.

Online Support: Visit the [Joie Store on Amazon](#) for product information and support resources.