

[Manuals.plus](#) /

› [BLU](#) /

› BLU Bold K10 Smartphone User Manual

BLU K0110WW

BLU Bold K10 Smartphone User Manual

Model: K0110WW | Brand: BLU

1. INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your BLU Bold K10 smartphone. Please read this guide thoroughly to ensure optimal performance and longevity of your device.



Figure 1: BLU Bold K10 Smartphone (Green variant)

2. What's in the Box

Upon unboxing your BLU Bold K10, verify that all the following items are included:

- BLU Bold K10 Smartphone
- USB Cable (Type-C)
- Wall Adapter (Charger)
- Headphones
- Clear Protective Case
- Tempered Glass Screen Protector
- SIM Key
- Quick Guide (Printed documentation)

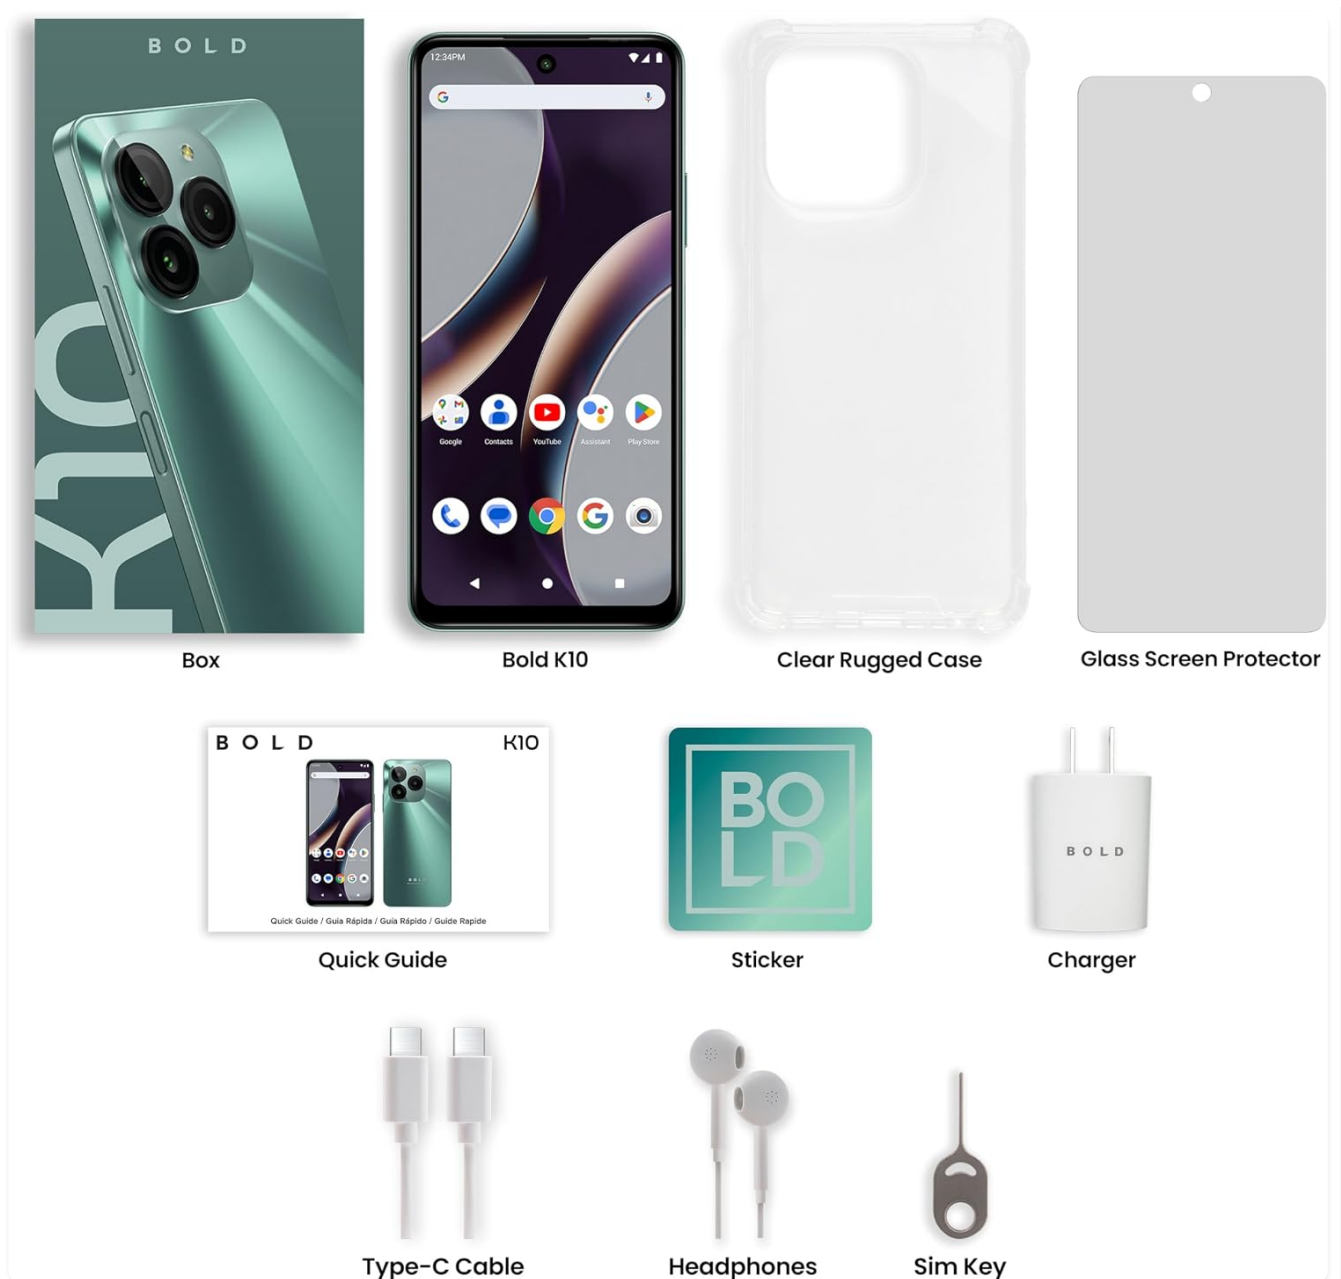


Figure 2: Included accessories with the BLU Bold K10

3. PRODUCT OVERVIEW

The BLU Bold K10 features a sleek design and powerful components for a smooth user experience.

3.1 Physical Features

- **Display:** 6.6-inch HD+ Infinity Dot Display.
- **Cameras:** Triple 50MP Main Camera with LED Flash, 13MP Selfie Camera.
- **Security:** Side-mounted Fingerprint Sensor.
- **Ports:** USB Type-C port for charging and data transfer, 3.5mm headphone jack.
- **Buttons:** Power/Lock button, Volume Up/Down buttons.



Figure 3: Front and Rear View of the BLU Bold K10







Figure 4: Side View of the BLU Bold K10

4. SETUP

4.1 Inserting SIM Card and MicroSD Card

1. Locate the SIM tray on the side of your phone.
2. Insert the provided SIM key into the small hole next to the tray and gently push until the tray ejects.
3. Place your Nano-SIM card(s) and/or microSD card into the designated slots on the tray. Ensure they are correctly oriented.
4. Carefully push the tray back into the phone until it clicks into place.

Note: This device is GSM unlocked and compatible with carriers like T-Mobile and Metro PCS. It is not compatible with AT&T/Cricket new activations or CDMA networks such as Verizon and Sprint.

4.2 Initial Power On and Setup

1. Press and hold the Power/Lock button on the side of the phone until the BLU logo appears.
2. Follow the on-screen prompts to select your language, connect to a Wi-Fi network, and set up your Google Account.
3. You may choose to set up offline initially, but connecting to Wi-Fi is recommended for software updates and data restoration.

4.3 Applying the Screen Protector

To protect your display, carefully apply the included tempered glass screen protector:

1. Clean the phone screen thoroughly with the provided cleaning cloth to remove dust and smudges.
2. Peel off the protective film from the adhesive side of the tempered glass.
3. Align the screen protector carefully with the edges and cutouts of your phone's screen.
4. Gently lay the protector onto the screen. It will adhere automatically. Press lightly on the center and smooth out any air bubbles towards the edges.

5. OPERATING YOUR DEVICE

5.1 Display and Navigation

The 6.6-inch HD+ Infinity Dot Display offers a clear visual experience. Navigate the Android 13 operating system using touch gestures:

- **Tap:** Select items or open applications.
- **Swipe:** Scroll through menus, home screens, or web pages.
- **Pinch-to-Zoom:** Zoom in or out on photos and web content.
- **Side-mounted Fingerprint Sensor:** Use for quick and secure unlocking of your device.



Figure 5: Visuals on the HD+ Infinity Dot Display

5.2 Camera Functions

Capture high-quality photos and videos with the BLU Bold K10's camera system.

- **Rear Camera:** The triple 50MP main camera allows for detailed photography. Access various modes like Portrait, Panorama, and Night Mode through the camera app.
- **Front Camera:** The 13MP selfie camera is ideal for self-portraits and video calls.
- **Video Recording:** Supports video capture at 1080p@30fps.

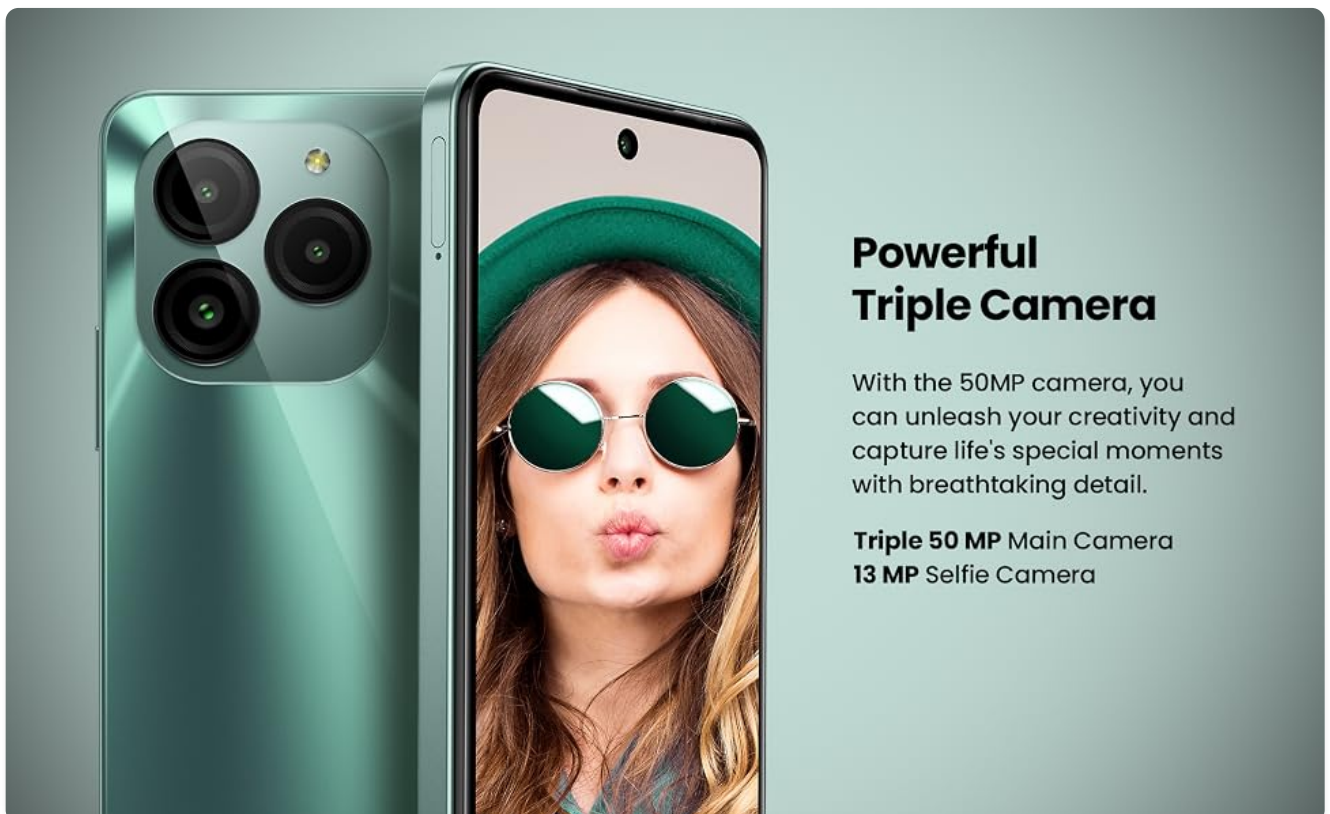


Figure 6: Powerful Triple Camera System

5.3 Storage and Performance

The BLU Bold K10 is equipped with ample storage and a capable processor.

- **Internal Storage:** 128GB for apps, photos, and files.
- **RAM:** 4GB RAM for smooth multitasking.
- **Expandable Storage:** Supports microSD cards up to 128GB for additional storage.
- **Processor:** Octa-Core 1.6GHz ARM Cortex-A75 processor for efficient performance.

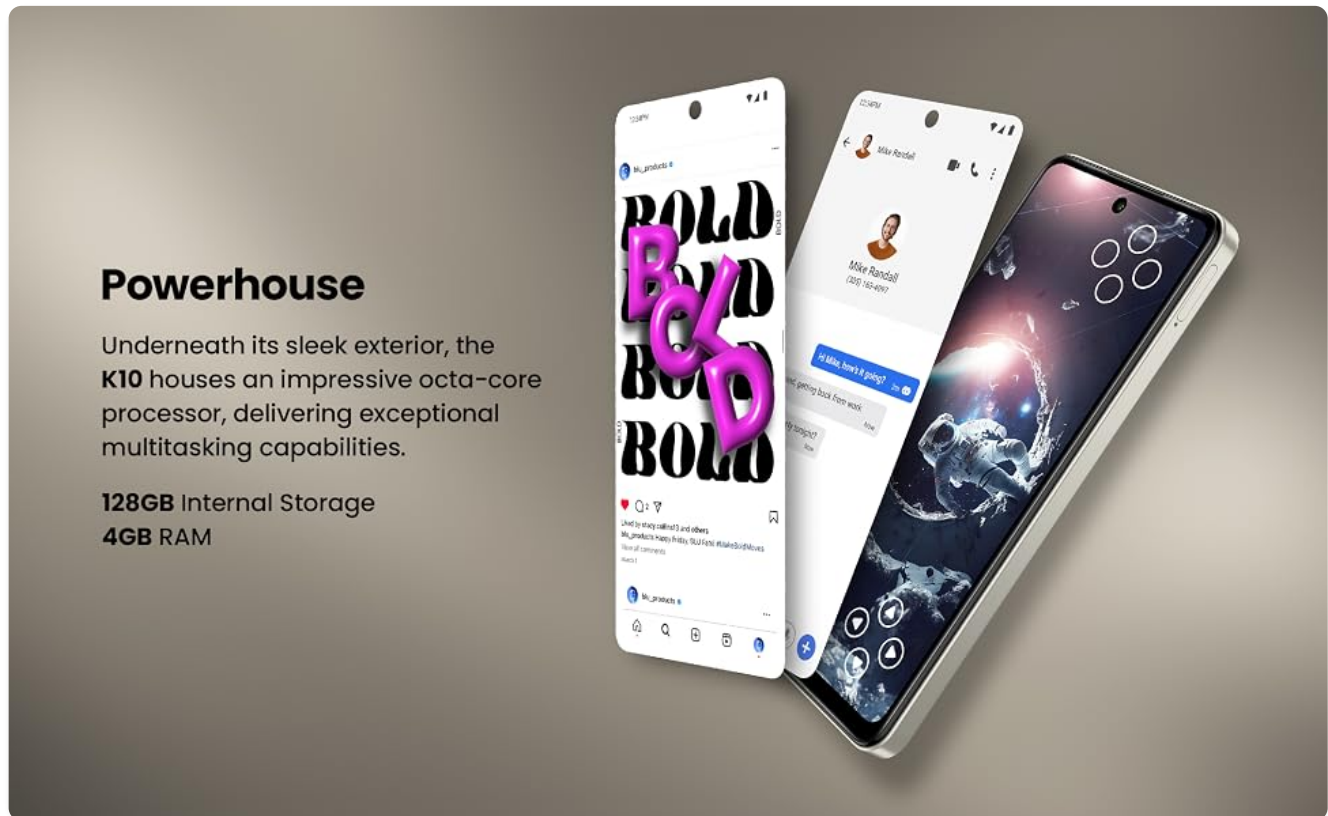


Figure 7: Internal Storage and RAM

5.4 Battery Life

The device features a large 5,000mAh battery designed for extended use.

- **Capacity:** 5,000 Milliamp Hours (mAh).
- **Usage:** Provides up to 3 days of typical use on a single charge.
- **Charging:** Use the provided USB Type-C cable and wall adapter for optimal charging.



Figure 8: Extended Battery Life

5.5 Android 13 Operating System

The BLU Bold K10 runs on Android 13, offering the latest features and security updates.

- Enjoy enhanced privacy controls, improved notification management, and a personalized user interface.
- Access the Google Play Store for a wide range of applications.



Figure 9: Powered by Android 13

6. MAINTENANCE

To keep your BLU Bold K10 in optimal condition:

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid harsh chemicals.
- **Protection:** Always use the provided protective case and screen protector to prevent scratches and damage.
- **Software Updates:** Regularly check for and install software updates to ensure your device has the latest security patches and features.
- **Battery Care:** Avoid extreme temperatures and do not fully discharge the battery frequently to prolong its lifespan.

7. TROUBLESHOOTING

If you encounter issues with your BLU Bold K10, try the following common solutions:

- **Device Unresponsive:** Press and hold the Power/Lock button for about 10-15 seconds to force a restart.
- **Network Issues:** Check if your SIM card is properly inserted. Toggle Airplane Mode on and off. Restart your device. Verify network compatibility with your carrier.
- **Wi-Fi/Bluetooth Connectivity:** Ensure Wi-Fi or Bluetooth is enabled. Forget the network/device and reconnect. Restart your router or the Bluetooth accessory.
- **App Crashes:** Clear the cache and data for the problematic app in Settings > Apps. If the issue persists, uninstall and reinstall the app.
- **Battery Drain:** Check battery usage in Settings to identify apps consuming excessive power. Adjust screen brightness and disable unnecessary features like GPS or always-on display.
- **Slow Performance:** Close unused apps. Clear cache regularly. Consider performing a factory reset if performance issues persist after other troubleshooting steps (back up your data first).

8. SPECIFICATIONS

Feature	Specification
Model Name	K10 (K0110WW)
Operating System	Android 13.0
Display	6.6 Inches HD+ Infinity Dot Display
Resolution	720 x 1612
Processor	Octa-Core 1.6GHz ARM Cortex-A75
RAM	4 GB
Internal Storage	128 GB
Expandable Storage	MicroSD up to 128 GB
Rear Camera	Triple 50MP with LED Flash
Front Camera	13MP Selfie Camera
Battery Capacity	5000 Milliamp Hours
Connectivity	Bluetooth, USB, Wi-Fi, 4G Cellular
Security	Side-Mounted Fingerprint Sensor
Product Dimensions	7.28 x 3.94 x 1.97 inches
Item Weight	1.06 pounds

9. WARRANTY AND SUPPORT

The BLU Bold K10 includes a US Warranty. For specific warranty terms, conditions, and support inquiries, please refer to the warranty card included in your product packaging or visit the official BLU Products website. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question