Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Amazon Basics /
- › Amazon Basics Instant Camping Tent with Rainfly, Weather-Resistant, Quick Setup 8 Person User Manual

Amazon Basics AMZ-140872

Amazon Basics Instant Camping Tent User Manual

Model: AMZ-140872

INTRODUCTION

Thank you for choosing the Amazon Basics Instant Camping Tent. This tent is designed for quick setup and provides a spacious, weather-resistant shelter for your outdoor adventures. This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your tent.



Image: The Amazon Basics Instant Camping Tent, a green and grey instant setup tent designed for camping.

SAFETY INFORMATION

- **Fire Safety:** Keep all flame and heat sources away from this tent fabric. The tent fabric will burn if left in continuous contact with any flame source.
- **Ventilation:** Ensure adequate ventilation to prevent suffocation. Do not use fuel-burning devices inside the tent.
- Site Selection: Choose a level campsite free of sharp objects and away from potential hazards like falling

rocks or trees.

- **Staking:** Always properly stake down your tent and use guy lines, especially in windy conditions, to ensure stability.
- Lightning: Do not set up or remain in the tent during a lightning storm. Seek appropriate shelter.

PACKAGE CONTENTS

Before setup, verify that all components are present:

- Tent body with pre-attached telescoping frame
- · Removable rainfly
- · Carrying bag
- · Steel stakes
- · Gear loft
- · Storage pocket
- · Electrical cord port

SETUP INSTRUCTIONS

The Amazon Basics Instant Camping Tent features a quick 60-second setup process thanks to its pre-attached telescoping frame.

- 1. Unpack the Tent: Remove the tent from its carrying bag and lay it flat on your chosen campsite.
- 2. **Extend the Poles:** Locate the pre-attached telescoping poles. Lift the center hub and extend each leg of the tent until it locks into place. Ensure all joints are fully extended and locked.
- 3. **Attach the Rainfly:** Drape the rainfly over the tent body, aligning the doors and windows. Secure the rainfly to the tent poles or base using the attached buckles or ties.
- 4. **Stake Down the Tent:** Use the provided steel stakes to secure the tent corners and all guy lines to the ground. This provides stability, especially in windy conditions.
- 5. Adjust Guy Lines: Tighten the pre-attached guy lines as needed to ensure the tent is taut and stable.

Built For Convenience

2-minutes easy assembly

Includes electrical cord port

Comes with gear loft storage and a carry bag



Image: Diagram showing the electrical cord port, gear loft, and telescoping pre-attached frame for easy assembly.

OPERATING THE TENT

Weather Protection

The tent features water-resistant construction with sealed seams and a removable rainfly to protect against rain and wind. Ensure the rainfly is properly secured for maximum protection.

Ventilation

Mesh windows and a mesh ceiling provide excellent airflow to reduce condensation and keep the interior comfortable. The adjustable ground vent allows for additional air circulation, and can accommodate a portable AC unit.



Image: Diagram highlighting rainfly seams, pre-attached stabilizing lines, mesh windows, and a ground vent for weather protection and airflow.

Interior Features

The tent includes a gear loft for overhead storage and a storage pocket to keep small items organized. An electrical cord port allows for convenient power access from outside the tent.



Image: Interior view of the tent showing the spacious area and mesh windows.



Image: Interior view of the tent with two sleeping bags laid out, demonstrating the ample space.

MAINTENANCE

- Cleaning: Clean the tent with a soft sponge, mild soap, and lukewarm water. Do not use harsh detergents or bleach.
- **Drying:** Always ensure the tent is completely dry before packing it away to prevent mildew and odor. Air dry in a shaded area.
- Storage: Store the tent in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Inspecting:** Periodically inspect the tent for any damage to the fabric, poles, or zippers. Repair small tears promptly to prevent them from worsening.

TROUBLESHOOTING

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Tent is unstable or sways in wind.	Not properly staked or guy lines are loose.	Ensure all stakes are fully inserted into the ground and guy lines are taut. Re-position stakes if necessary.
Water leakage inside the tent.	Rainfly not properly attached or sealed seams are compromised.	Verify the rainfly is correctly positioned and secured. Check for any tears or worn seams and apply seam sealer if needed.
Difficulty extending or collapsing poles.	Dirt or debris in pole joints, or mechanism is stiff.	Clean pole joints. Apply a silicone-based lubricant if poles are stiff. Ensure buttons are fully depressed when collapsing.
Condensation inside the tent.	Insufficient ventilation.	Open mesh windows and ground vent to increase airflow. Avoid cooking or using unvented heaters inside.

SPECIFICATIONS


Feature	Detail
Model Number	AMZ-140872
Occupancy	8 Person
Product Dimensions (L x W x H)	426.72 x 243.84 x 196.49 cm (168 x 96 x 77.36 inches)
Item Weight	13.89 kg (30.62 lbs)
Material	Polyester
Color	Green
Season Rating	3 Season
Water Resistance Technology	1500mm
Special Features	Quick Setup, Removable Rainfly, Mesh Windows, Electrical Cord Port, Gear Loft

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the Amazon Basics official website or contact Amazon customer service directly. Keep your purchase receipt for any warranty claims.

Online Support: Visit the Amazon Basics Store

© 2025 Amazon Basics. All rights reserved.

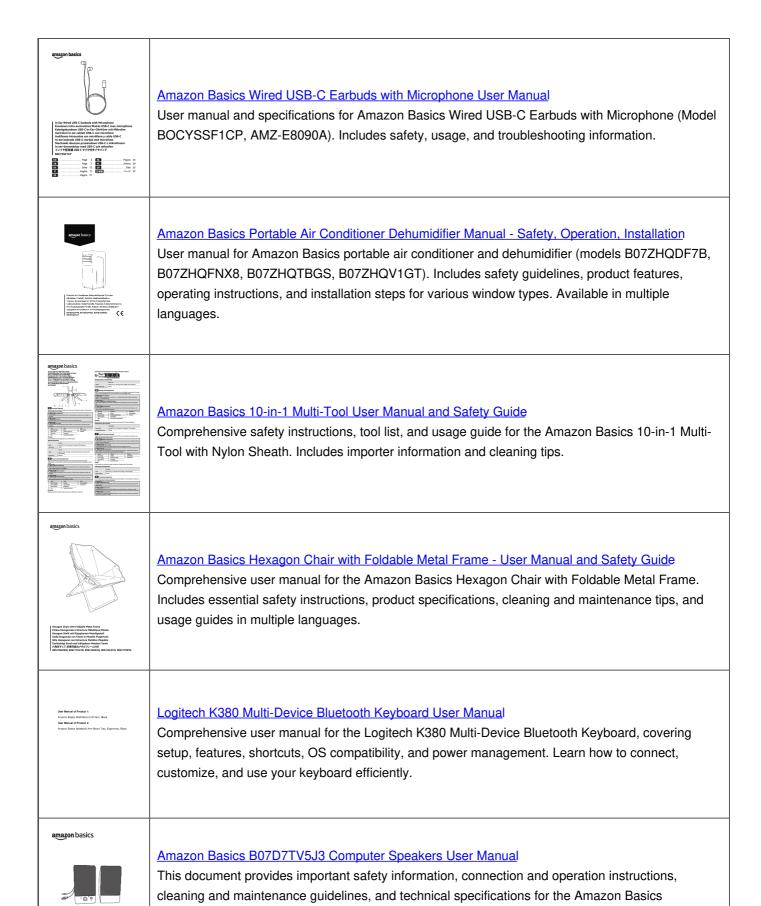

B07D7TV5J3 computer speakers.