

#thpart24055574

Kenmore Washer Water Drain Pump Replacement Part Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of the #US Replacement part for 11047532602 Kenmore Washer Water Drain Pump. Please read this manual thoroughly before attempting any installation or repair to ensure proper function and safety.

SAFETY INFORMATION

- **Always disconnect power** to the washer before attempting any repair or maintenance.
- Wear appropriate **personal protective equipment** (PPE), such as gloves and eye protection.
- If you are unsure about any step, consult a **qualified technician**.
- Ensure all connections are **secure and watertight** after installation.

PRODUCT OVERVIEW

This replacement drain pump is designed to fit specific Kenmore washer models, including 11047532602. It is a critical component for draining water from the washer tub during cycles.



Figure 1: Overview of the Kenmore Washer Water Drain Pump Replacement Part. The image shows the pump assembly from a side view, highlighting the motor housing on the left and the pump impeller housing on the right, with electrical connections visible.

SETUP: INSTALLATION GUIDE

The following steps outline the general procedure for replacing a washer drain pump. Specific steps may vary slightly depending on your washer model. Refer to your washer's service manual for detailed instructions.

1. **Disconnect Power:** Unplug the washer from the electrical outlet and turn off the water supply.
2. **Access the Pump:** Depending on your washer model, you may need to tilt the washer back, remove the front panel, or remove the back panel to access the drain pump.
3. **Drain Residual Water:** Place a shallow pan or towels under the pump area to catch any residual water in the hoses.
4. **Disconnect Hoses:** Loosen the clamps and carefully remove the drain hoses connected to the pump.
5. **Disconnect Wiring:** Disconnect the electrical wiring harness from the pump motor. Note the orientation of the wires if not clearly marked.
6. **Remove Old Pump:** Unmount the old pump from its housing or mounting brackets.
7. **Install New Pump:** Position the new replacement pump in place and secure it with the appropriate screws or clips.
8. **Reconnect Wiring:** Reconnect the electrical wiring harness to the new pump. Ensure a secure connection.
9. **Reconnect Hoses:** Reattach the drain hoses to the new pump and secure them with the clamps. Ensure no kinks or leaks.
10. **Test:** Restore water supply and electrical power. Run a short drain/spin cycle to check for proper operation and leaks.

OPERATING INSTRUCTIONS

The drain pump operates automatically as part of the washer's cycle. No manual operation is required for the pump itself. Ensure the washer is loaded correctly and the drain hose is not kinked or obstructed for optimal performance.

MAINTENANCE

Regular maintenance of the drain pump is not typically required. However, to prevent issues and prolong the life of your pump:

- **Check for Obstructions:** Periodically check the drain pump filter (if accessible on your washer model) for lint, coins, or other debris that could clog the pump. Refer to your washer's user manual for filter cleaning instructions.
- **Inspect Hoses:** Occasionally inspect the drain hoses for cracks, leaks, or blockages.
- **Listen for Unusual Noises:** If the pump starts making unusual noises (e.g., grinding, humming without draining), it may indicate an obstruction or a failing motor.

TROUBLESHOOTING COMMON ISSUES

Problem	Possible Cause	Solution
Washer not draining	Clogged drain pump filter or hose; Faulty drain pump; Kinked drain hose.	Clean drain pump filter; Check and clear drain hose for obstructions; Verify pump operation (may require professional diagnosis).
Loud noise during drain cycle	Debris in pump impeller; Worn pump bearings.	Disconnect power and inspect pump for foreign objects; If noise persists, pump may need replacement.
Water leaking from pump area	Loose hose clamps; Cracked pump housing; Damaged seals.	Tighten hose clamps; Inspect pump housing and seals for damage; Replace pump if damaged.

If troubleshooting steps do not resolve the issue, professional assistance may be required.

SPECIFICATIONS

Part Number: #thpart24055574 (Replacement for 11047532602)

Compatibility: Kenmore Washer models (verify with your specific model number)

Type: Water Drain Pump

Material: Durable plastic and metal components

Package Includes: 1 PC ONLY (as per product description)

WARRANTY AND SUPPORT

For warranty information regarding this replacement part, please contact the seller directly. For technical support or further assistance with installation, it is recommended to consult a qualified appliance repair technician or refer to the service manual for your specific Kenmore washer model.

Seller: [Thanhhaa](#)