



[Manuals.plus](#) /

› [Starfavor](#) /

› Starfavor 61 Key Kids Electric Keyboard Electronic Piano User Manual

## Starfavor SEK-361

# Starfavor 61 Key Kids Electric Keyboard Electronic Piano User Manual

Model: SEK-361

## INTRODUCTION

---

Thank you for choosing the Starfavor 61 Key Kids Electric Keyboard. This electronic piano is designed to provide a rich and engaging musical experience for beginners, especially children. With its versatile features, including various tones, rhythms, and teaching functions, it serves as an excellent tool for musical exploration and learning. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and enjoyment of your new instrument.

## SAFETY INFORMATION

---

Please read and understand all safety instructions before using this product. Keep this manual for future reference.

- Do not expose the keyboard to water or excessive moisture.
- Avoid placing the keyboard near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Use only the power supply provided or specified by the manufacturer.
- Unplug the keyboard during lightning storms or when unused for long periods.
- Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- Keep small parts and accessories away from young children to prevent choking hazards.
- Ensure proper ventilation around the keyboard during use.

## PACKAGE CONTENTS

---

Carefully unpack the box and ensure all items listed below are present and in good condition. If any items are missing or damaged, please contact your retailer.


# What's include



x1 Keyboard



x1 Keyboard

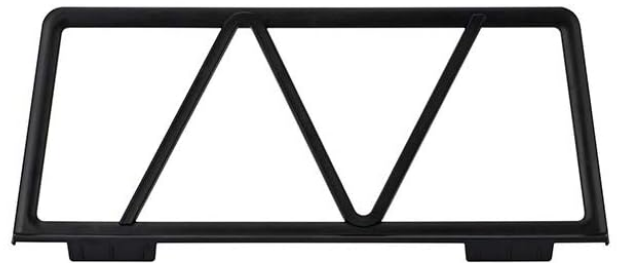

x1 Holder



x1 Microphone



x1 Power Adapter

Image: All components included in the Starfavor SEK-361 package.

- 1 x Starfavor 61 Key Electric Keyboard (SEK-361)
- 1 x Headphone
- 1 x Microphone
- 1 x Music Sheet Holder
- 1 x Power Adapter
- 1 x User Manual (this document)

## PRODUCT OVERVIEW

Familiarize yourself with the main components of your Starfavor Electric Keyboard.



Image: Front view of the Starfavor SEK-361 keyboard with accessories.

### Control Panel Features:

# !!! Rich Sound

Perfect for beginner kids of all skill levels.



**100**

Tones

**100**

Rhythms

**10**

Demos

**5**

Animal  
Sounds

**5**

Keys  
Drums

Image: Detailed view of the keyboard's control panel and LED display.

- **Power Button:** Turns the keyboard on or off.
- **Volume Control:** Adjusts the overall sound output.
- **LED Display:** Shows current tone, rhythm, and other settings.
- **Tone Selection:** Buttons/numbers to select from 100 different instrument tones.
- **Rhythm Selection:** Buttons/numbers to select from 100 different rhythms.
- **Demo Songs:** Buttons to play pre-recorded demo songs.
- **Teaching Functions:** Dedicated buttons for learning modes.
- **Drum Pad Keys:** Specific keys or pads for drum sounds.

## Rear Panel Connections:



## Support Different Devices

Image: Rear panel connections of the Starfavor SEK-361.

- **DC 9V Power In:** Connects the power adapter.
- **Audio Out (Headphone Jack):** For connecting headphones or external speakers.
- **Audio In:** For connecting external audio sources.
- **Microphone Out:** For connecting the included microphone.
- **USB Port:** (Note: This port is not functional for data transfer or connectivity on this model.)

### SETUP

---

#### 1. Power Connection:

The keyboard supports dual power supply options: the included power adapter or 4 x AA batteries (not included).



Image: Dual power supply options for the keyboard.

- **Using Power Adapter:** Insert the DC plug of the power adapter into the "DC 9V Power In" jack on the rear panel of the keyboard. Plug the other end into a standard wall outlet.
- **Using Batteries:** Open the battery compartment cover on the bottom of the keyboard. Insert 4 x AA batteries, ensuring correct polarity (+/-). Close the cover securely.

## 2. Music Sheet Holder Installation:

Insert the music sheet holder into the designated slots on the top rear of the keyboard. Ensure it is firmly seated.

## 3. Connecting Accessories:

- **Headphones:** Plug the headphones into the "Audio Out" (headphone) jack on the rear panel for private practice.
- **Microphone:** Plug the microphone into the "Microphone Out" jack on the rear panel.

# OPERATING INSTRUCTIONS

---

## 1. Power On/Off and Volume

- **Power On:** Press the **POWER** button located on the control panel. The LED display will light up.
- **Power Off:** Press the **POWER** button again to turn off the keyboard.
- **Volume Adjustment:** Use the **VOLUME** knob or buttons to increase or decrease the sound level.

## 2. Selecting Tones (Instruments)

The keyboard features 100 different tones. The default tone is usually Grand Piano.

- To select a tone, use the number buttons (0-9) to enter the two-digit tone number (e.g., 01 for Grand Piano, 02 for Bright Piano).
- Refer to the tone list printed on the keyboard or in the supplementary material for a complete list of tones and their corresponding numbers.
- The selected tone number will be displayed on the LED screen.

## 3. Selecting Rhythms

The keyboard includes 100 different rhythms to accompany your playing.

- To select a rhythm, use the number buttons (0-9) to enter the two-digit rhythm number.

- Press the **START/STOP** button to begin or end the rhythm playback.
- Use the **TEMPO** buttons to adjust the speed of the rhythm.

#### 4. Playing Demo Songs

The keyboard has 10 built-in demo songs for listening pleasure or learning.

- Press the **DEMO** button to cycle through the demo songs.
- Press **DEMO** again to stop the current song and play the next, or press **START/STOP** to stop playback.

#### 5. Teaching Functions

The keyboard offers various teaching modes to assist beginners.

## Keynotes stickers

Convenient for beginners to practice



Image: Keyboard keys with optional keynote stickers for learning.



Image: Small-sized keys designed for children's hands.

- Consult the specific teaching function buttons on your keyboard (e.g., **ONE KEY**, **FOLLOW**, **ENSEMBLE**) and refer to the on-screen instructions or supplementary guide for detailed usage.
- These functions typically guide you through playing demo songs by indicating which keys to press.

## 6. Using Microphone and Headphones

- **Microphone:** Once plugged into the "Microphone Out" jack, you can sing along while playing. Adjust the microphone volume if available on the keyboard or through external settings.
- **Headphones:** Plugging in headphones automatically mutes the built-in speakers, allowing for quiet practice.

## 7. LED Display

The LED display provides visual feedback on the keyboard's current status:

- Displays the selected tone number.
- Displays the selected rhythm number.
- Shows the current tempo setting.
- Indicates active teaching modes or other functions.

## MAINTENANCE

---

Proper care will extend the life of your Starfavor Electric Keyboard.

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the keyboard. For stubborn dirt, slightly dampen the cloth with water and a mild soap solution, then wipe dry immediately. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** When not in use, store the keyboard in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.
- **Handling:** Avoid dropping the keyboard or subjecting it to strong impacts. Do not place heavy objects on top of it.

## TROUBLESHOOTING

---

If you encounter any issues with your keyboard, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No sound from speakers.	Keyboard is off. Volume is too low. Headphones are plugged in. Power adapter or batteries are not connected/dead.	Press the POWER button to turn on. Increase the VOLUME. Unplug headphones. Check power adapter connection or replace batteries.
Keys are not responding.	Keyboard is off. Specific mode (e.g., teaching mode) is active.	Turn on the keyboard. Exit any active teaching modes.
Microphone not working.	Microphone not fully plugged in. Microphone volume is too low.	Ensure microphone is securely plugged into the "Microphone Out" jack. Check if there's a separate microphone volume control on the keyboard or adjust main volume.
LED display is blank.	Keyboard is off. Power issue.	Turn on the keyboard. Check power adapter or replace batteries.

If the problem persists after trying these solutions, please contact Starfavor customer support.

## SPECIFICATIONS



Image: Dimensions of the Starfavor SEK-361 keyboard.

Feature	Detail
Model	SEK-361
Number of Keys	61 Small-Sized Keys
Tones	100
Rhythms	100
Demo Songs	10

Feature	Detail
Speakers	Built-in Stereo Speakers (2 x 10W)
Display	LED Screen
Power Supply	DC 9V Power Adapter (included) or 4 x AA Batteries (not included)
Item Weight	5.19 pounds (approx. 2.35 kg)
Package Dimensions	33.75 x 10.25 x 4.25 inches (approx. 85.7 x 26 x 10.8 cm)
Connectivity	Audio Out (Headphone), Audio In, Microphone Out, USB (non-functional)

## WARRANTY AND SUPPORT

---

Starfavor products are manufactured to high-quality standards. For warranty information, technical support, or service inquiries, please contact Starfavor customer support through the retailer where you purchased the product or visit the official Starfavor website. Please have your model number (SEK-361) and purchase date ready when contacting support. For more information, visit the [Starfavor Store on Amazon](#).