

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Packard Bell](#) /

› [Packard Bell Silverstone T10 Tablet User Manual - Model SILVERSTONE-T10](#)

## Packard Bell Silverstone T10

# Packard Bell Silverstone T10 Tablet User Manual

Model: Silverstone T10

## INTRODUCTION

This manual provides essential instructions for setting up, operating, maintaining, and troubleshooting your Packard Bell Silverstone T10 tablet. Please read this manual thoroughly before using your device to ensure proper function and safety.

## SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Use only manufacturer-approved chargers and accessories.
- Keep the device away from water and other liquids.
- Do not attempt to disassemble or repair the device yourself. Refer to qualified service personnel.

## PACKAGE CONTENTS

Verify that all items are present in your product package:

- Packard Bell Silverstone T10 Tablet
- USB Type-C Cable
- Power Adapter
- Folio Cover
- Quick Start Guide (this manual)

## DEVICE LAYOUT


Familiarize yourself with the physical features of your tablet.



**Figure 1: Front View.** This image displays the front of the Packard Bell Silverstone T10 tablet, showing the 10.1-inch display and the front-facing camera located at the top center.



**Figure 2: Side View.** This image illustrates the side profile of the Packard Bell Silverstone T10 tablet, highlighting the power button, volume rocker, and USB Type-C port.

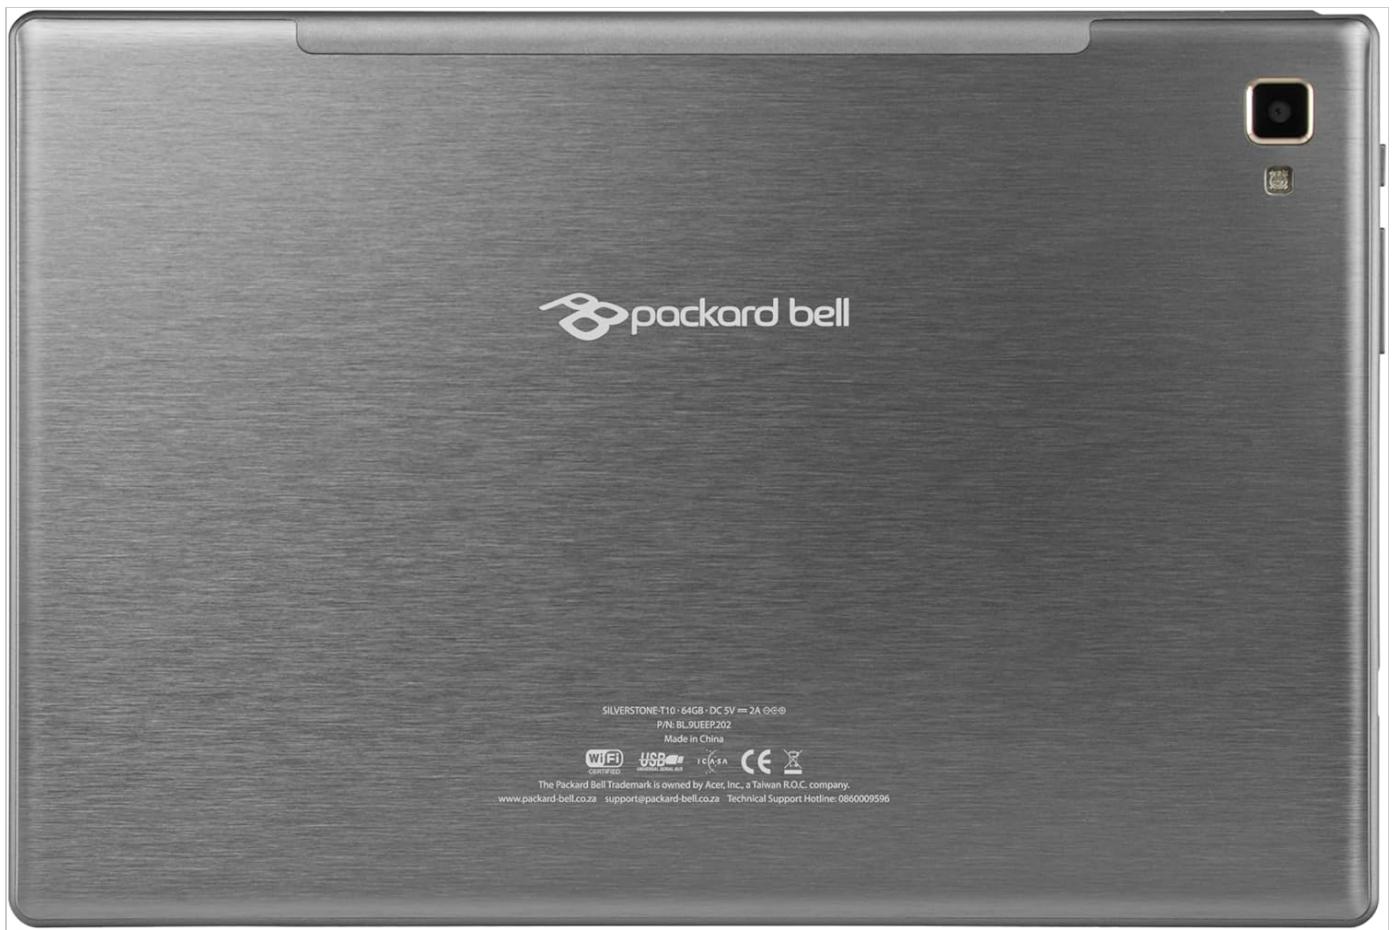

**Figure 3: Back View.** This image shows the rear of the Packard Bell Silverstone T10 tablet, featuring the main camera and the Packard Bell logo.

## SETUP

### 1. Charging the Tablet

Before first use, fully charge your tablet. Connect the USB Type-C cable to the tablet's charging port and the other end to the power adapter. Plug the adapter into a wall outlet. The battery indicator on the screen will show charging status.

### 2. Powering On/Off

- **To Power On:** Press and hold the Power button until the Packard Bell logo appears.
- **To Power Off:** Press and hold the Power button until the power options menu appears. Select "Power off".
- **To Restart:** Press and hold the Power button until the power options menu appears. Select "Restart".

### 3. Initial Setup

Upon first power-on, the tablet will guide you through the initial setup process. This includes selecting your language, connecting to a Wi-Fi network, and signing in with your Google account. Follow the on-screen prompts.

### 4. Inserting SIM and SD Card

The Silverstone T10 supports LTE connectivity and expandable storage via a microSD card. Locate the SIM/SD card tray on the side of the tablet. Use the provided SIM ejector tool to open the tray. Carefully place your Nano-SIM card and/or microSD card into the designated slots, ensuring correct orientation. Close the tray securely.

## OPERATING INSTRUCTIONS

## 1. Basic Navigation

- **Tap:** Touch the screen once to open an app, select an item, or press a button.
- **Touch and Hold:** Press and hold an item to access contextual menus or drag items.
- **Swipe:** Drag your finger across the screen to scroll through lists or switch between screens.
- **Pinch:** Use two fingers to zoom in or out on images and web pages.

## 2. Connecting to Wi-Fi

1. Go to *Settings > Network & internet > Wi-Fi*
2. Toggle Wi-Fi on.
3. Select your desired network from the list.
4. Enter the password if prompted and tap *Connect*.

## 3. Connecting to LTE (Mobile Data)

Ensure a valid SIM card is inserted. Go to *Settings > Network & internet > Mobile network*. Enable *Mobile data*. You may need to configure APN settings depending on your service provider.

## 4. Bluetooth Pairing

1. Go to *Settings > Connected devices > Bluetooth*.
2. Toggle Bluetooth on.
3. Ensure the device you want to pair is in pairing mode.
4. Select the device from the list and follow any on-screen prompts to complete pairing.

## 5. Camera Usage

Open the Camera app from the home screen or app drawer. Tap the shutter button to take photos. Switch between front and rear cameras using the camera switch icon. Tap on the screen to focus.

## MAINTENANCE

---

### 1. Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Do not use abrasive cleaners or solvents. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution designed for electronics.

### 2. Battery Care

- Avoid fully discharging the battery frequently.
- Do not leave the tablet charging for extended periods after it reaches 100%.
- Store the tablet in a cool, dry place if not used for a long time, with the battery charged to about 50%.

### 3. Software Updates

Regularly check for and install software updates to ensure optimal performance and security. Go to *Settings > System > System update*.

### 4. Storage Management

To free up storage space, regularly delete unnecessary files, uninstall unused apps, and clear app caches. You can also move large files to an inserted microSD card. Go to *Settings > Storage* to manage your device's storage.

## TROUBLESHOOTING

Problem	Possible Solution
Tablet does not power on.	Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again.
Wi-Fi connection issues.	Restart the tablet and your Wi-Fi router. Forget the network in Wi-Fi settings and reconnect. Ensure you are within range.
Slow performance.	Close unused apps. Clear app caches. Check for and install system updates. Consider a factory reset if issues persist (back up data first).
Battery drains quickly.	Reduce screen brightness. Disable unused features like Bluetooth or GPS. Close background apps. Check battery usage in settings to identify power-hungry apps.
Apps crashing or freezing.	Clear the app's cache and data in <i>Settings &gt; Apps</i> . Uninstall and reinstall the app. Ensure the app is updated to the latest version.

## SPECIFICATIONS

Feature	Detail
Brand	Packard Bell
Model Name	Silverstone T10
Screen Size	10.1 Inches
Display Resolution	1920 x 1200 Pixels (Full HD IPS)
Operating System	Android 14
Processor	SC9863A Octa-core
RAM	4 GB
Storage Capacity	64 GB
Primary Camera	8 MP
Front Camera	5 MP
Connectivity	LTE, Wi-Fi, Bluetooth
Hardware Interface	USB Type C

## WARRANTY AND SUPPORT

Your Packard Bell Silverstone T10 tablet comes with a **1 Year Warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical support or warranty inquiries, please visit the official Packard Bell support website or contact their customer service. The technical support hotline is 0860009596.

Official website: [www.packard-bell.co.za](http://www.packard-bell.co.za)

