

Clikon CK2684

Clikon 3-in-1 Juice Blender CK2684 Instruction Manual

Model: CK2684 | Brand: Clikon

INTRODUCTION

Thank you for choosing the Clikon 3-in-1 Juice Blender, Model CK2684. This versatile appliance is designed to simplify your blending, grinding, and juicing tasks with its powerful 600W copper motor and durable stainless steel blades. To ensure safe and efficient operation, please read this instruction manual thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the blender.
- Do not immerse the motor unit, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts. Blades are sharp. Handle with care.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always operate the blender on a dry, stable, and level surface.
- Never blend hot liquids in the large blender jar as pressure buildup can cause the lid to eject and result in scalding.
- Do not operate the blender when empty.

PRODUCT COMPONENTS

Your Clikon 3-in-1 Juice Blender comes with the following parts:

- **Motor Unit:** The main power base with controls.
- **Large Blender Jar (1.8L):** For blending larger quantities of liquids and soft foods.
- **Grinding Cup (80g):** Ideal for grinding dry ingredients like coffee beans, spices, or nuts.
- **Juice Cup (500ml):** Suitable for smaller blending tasks or making individual servings of juice/smoothies.
- **Blade Assemblies:** Detachable blades for each jar/cup.
- **Lids:** Secure lids for each jar/cup to prevent spills during operation.



Front view of the Clikon 3-in-1 Juice Blender with the large jar attached.



Side view of the Clikon 3-in-1 Juice Blender with the large jar.



Clikon 3-in-1 Juice Blender showing all included components: motor unit, large blender jar, grinding cup, and juice cup.



Bottom view of the Clikon blender motor unit, showing ventilation and feet.

SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wash all detachable parts (jars, blade assemblies, lids) in warm, soapy water. Rinse thoroughly and dry. Wipe the motor unit with a damp cloth.
3. **Assemble Jar/Cup:** Attach the desired blade assembly to the bottom of the large blender jar, grinding cup, or juice cup. Ensure it is securely tightened.
4. **Place on Motor Unit:** Place the assembled jar/cup onto the motor unit. Turn it clockwise until it locks securely into place. The blender will not operate if the jar/cup is not correctly seated and locked.
5. **Position:** Place the blender on a clean, dry, stable, and level surface.

OPERATING INSTRUCTIONS

1. **Prepare Ingredients:** Cut ingredients into small pieces (approximately 2-3 cm) before placing them into the jar/cup. Do not overfill. For liquids, ensure the level does not exceed the maximum fill line.
2. **Secure Lid:** Place the lid firmly onto the jar/cup. Ensure the lid is properly sealed.
3. **Plug In:** Connect the power cord to a suitable 220-240V AC, 50/60Hz electrical outlet.
4. **Select Speed:** Turn the control knob to your desired speed setting (Speed 1 or Speed 2). For short bursts of power, use the **Pulse** function by turning the knob to 'P' and holding it. Release to stop.
5. **Blend:** Allow the blender to operate until the desired consistency is achieved.
6. **Stop:** Turn the control knob back to the 'OFF' position.

7. **Unplug:** Always unplug the appliance from the power outlet after use and before removing the jar/cup.
8. **Remove Jar/Cup:** Turn the jar/cup counter-clockwise to unlock it from the motor unit, then lift it off.

Note: Do not operate the blender continuously for more than 1 minute. Allow a rest period of at least 2 minutes between cycles to prevent overheating.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your blender.

1. **Unplug:** Always ensure the blender is unplugged from the power outlet before cleaning.
2. **Disassemble:** Remove the jar/cup from the motor unit. Detach the blade assembly from the jar/cup. Remove the lid.
3. **Wash Jars/Cups and Lids:** Wash the large blender jar, grinding cup, juice cup, and lids in warm, soapy water. Rinse thoroughly. These parts are generally dishwasher safe (top rack recommended), but hand washing is preferred for longevity.
4. **Clean Blade Assemblies:** Exercise extreme caution when cleaning the blade assemblies as the blades are very sharp. Use a brush to remove food particles. Do not touch the blades directly with your hands. Rinse thoroughly.
5. **Clean Motor Unit:** Wipe the motor unit with a damp cloth. Never immerse the motor unit in water or any other liquid. Do not use abrasive cleaners or scouring pads.
6. **Dry and Store:** Ensure all parts are completely dry before reassembling or storing the blender. Store in a cool, dry place.

TROUBLESHOOTING

If you encounter any issues with your blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not start.	Not plugged in; Jar/cup not correctly assembled or locked; Power outage.	Ensure power cord is securely plugged in. Check if the jar/cup is properly seated and locked onto the motor unit. Check your power supply.
Motor stops during operation.	Overload; Overheating.	Unplug the blender. Remove some ingredients to reduce the load. Allow the motor to cool down for at least 15-20 minutes before restarting.
Ingredients not blending smoothly.	Too little liquid; Too many ingredients; Ingredients are too large.	Add more liquid. Reduce the quantity of ingredients. Cut ingredients into smaller pieces. Use the pulse function for stubborn ingredients.
Leakage from the bottom of the jar.	Blade assembly not tightened properly; Seal ring missing or damaged.	Ensure the blade assembly is securely tightened to the jar/cup. Check if the seal ring is correctly in place and undamaged.

SPECIFICATIONS

Model Number	CK2684
Brand	Clikon
Power	600W
Voltage	220-240V AC
Frequency	50/60Hz
Number of Speeds	2 + Pulse Function
Large Blender Jar Capacity	1.8 Liters
Grinding Cup Capacity	80 Grams
Juice Cup Capacity	500 Milliliters
Blade Material	Stainless Steel
Jar/Cup Material	Unbreakable Plastic (ABS)
Control Type	Knob / Manual
Special Features	Portable design, BPA Free, Dishwasher Safe (removable parts)
Color	Dark Blue/Silver
Country of Origin	China

WARRANTY AND SUPPORT

Your Clikon 3-in-1 Juice Blender, Model CK2684, comes with a **Two-Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal household use.

The warranty does not cover:

- Damage caused by misuse, abuse, neglect, or accident.
- Damage resulting from unauthorized repair or modification.
- Normal wear and tear, including cosmetic damage.
- Damage caused by failure to follow the operating instructions.

For warranty claims or technical support, please contact your retailer or the authorized Clikon service center with your proof of purchase. Please have your model number (CK2684) ready when contacting support.

