

[Manuals.plus](#) /

> [AEG](#) /

> AEG AP31CB18IW Cordless Vacuum Cleaner User Manual

AEG AP31CB18IW

AEG AP31CB18IW Cordless Vacuum Cleaner User Manual

Model: AP31CB18IW

INTRODUCTION

Thank you for choosing the AEG AP31CB18IW Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.





Image: The AEG AP31CB18IW Cordless Vacuum Cleaner, showcasing its sleek design and main components.

1. SETUP AND ASSEMBLY

1.1 Unpacking

Carefully remove all components from the packaging. Ensure all parts listed in the packing contents are present and undamaged. Retain packaging for future storage or transport.

1.2 Assembling the Vacuum Cleaner

1. **Attach the Extension Wand:** Insert the extension wand into the main motor unit until it clicks securely into place.
2. **Attach the Floor Nozzle:** Connect the floor nozzle to the other end of the extension wand, ensuring it locks firmly.
3. **Install the Battery:** Slide the 18V Lithium-ion battery into the designated slot on the main motor unit until it clicks.



Cepillo multiusos

Diseñado para diferentes tipos de suelo




Cepillo 2 en 1 (para espacios estrechos)

Para limpiar espacios estrechos y reducidos con efecto espolvoreador



Boquilla para tapicerías

Limpia superficies y tapicerías con minuciosidad

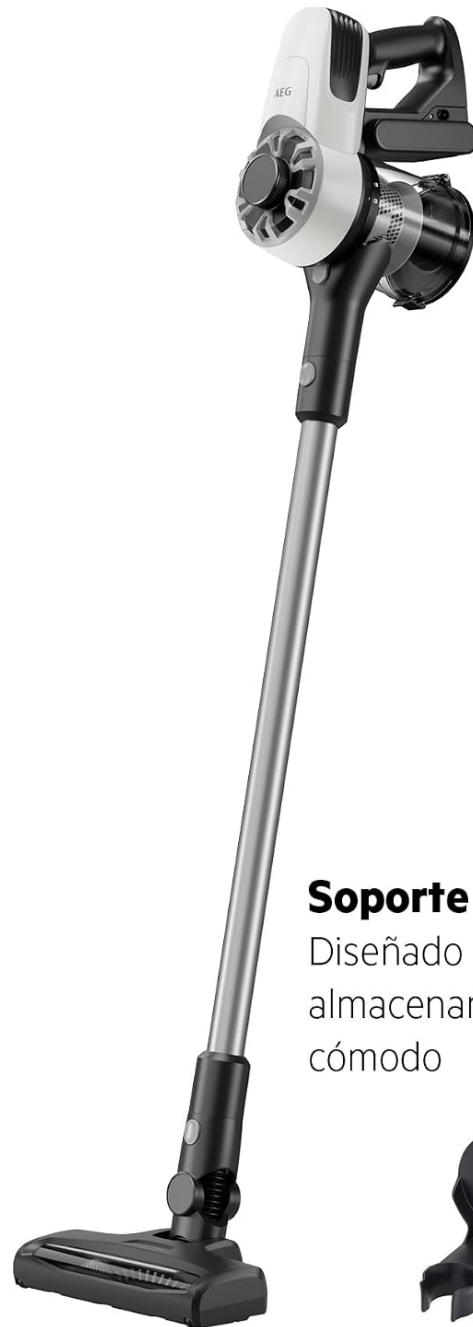

Soporte de pared

Diseñado para un almacenamiento cómodo



Image: The main vacuum unit, extension wand, floor nozzle, and various accessories laid out for assembly.

1.3 Charging the Battery

- Connect the charger to a power outlet.
- Attach the charger to the battery. The battery indicator lights will show the charging status.
- Allow approximately 5 hours for a full charge. A fully charged battery provides up to 30 minutes of runtime on low speed.



RECOGE HASTA UN 99% DEL POLVO

Recoge hasta un 99 %** del polvo en suelos duros, lo que garantiza una limpieza profunda y eficiente.

Image: A hand holding the removable battery pack, ready to be charged or inserted into the vacuum cleaner.

1.4 Attaching Accessories

The vacuum cleaner comes with three interchangeable accessories for versatile cleaning:

- **Multi-use Brush:** Designed for various floor types.
- **2-in-1 Crevice Tool:** Ideal for narrow spaces and dusting.
- **Upholstery Nozzle:** For cleaning fabric surfaces and upholstery.

To attach an accessory, simply push it onto the end of the main unit or the extension wand until it fits snugly.



ASPIRADO SIN INTERRUPCIONES

Aspira hasta 30 minutos gracias a la batería extraíble.

Image: A detailed view of the included accessories: multi-use brush, 2-in-1 crevice tool, upholstery nozzle, and the wall-mount bracket.

2. OPERATING INSTRUCTIONS

2.1 Powering On and Off

Press the power button located on the handle to turn the vacuum cleaner on. Press it again to turn it off. The vacuum cleaner may have different power modes; refer to the specific controls on your unit to adjust suction power if available.

2.2 General Cleaning

- For general floor cleaning, use the main floor nozzle with the extension wand.
- The lightweight and compact design allows for easy maneuverability around furniture and into tight spaces.



LIGERA Y FÁCIL DE MANEJAR

El diseño compacto y ligero permite un manejo muy sencillo y una limpieza muy cómoda.

Image: A user demonstrating the lightweight and easy-to-handle nature of the vacuum cleaner, making it comfortable for extended use.

2.3 Using Accessories for Specific Tasks

- **Crevice Tool:** Use for cleaning corners, edges, and other hard-to-reach areas.
- **Upholstery Nozzle:** Ideal for cleaning sofas, chairs, and car interiors.
- **Multi-use Brush:** Can be used for delicate surfaces or to dislodge stubborn dirt.



MANTENIMIENTO SENCILLO

El mantenimiento es muy sencillo gracias a los filtros lavables de dos pasos y el depósito para polvo fácil de limpiar de 0,5 l.

Image: The vacuum cleaner being used with an accessory to clean under furniture, demonstrating its versatility.



ASPIRACIÓN VERSÁTIL

Incluye accesorios para limpiar debajo de tus muebles, rincones y sofás.

Image: The vacuum cleaner head transitioning from a hard floor to a carpeted area, illustrating its effectiveness on various surfaces.

3. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

3.1 Emptying the Dustbin

- Press the dustbin release button to detach the dustbin from the main unit.
- Open the dustbin lid and empty the contents into a waste bin.
- Close the lid and reattach the dustbin to the main unit, ensuring it clicks into place.
- It is recommended to empty the 0.5L dustbin after each use or when it reaches the MAX fill line.



Image: The transparent dustbin being emptied, showing accumulated dust and debris, highlighting the easy-to-clean design.

3.2 Cleaning the Filters

The AEG AP31CB18IW features two-step washable filters for effective dust capture.

1. Remove the dustbin as described above.
2. Carefully remove the filters from the dustbin assembly.
3. Rinse the filters under cold running water until the water runs clear. Do not use detergents.
4. Allow the filters to air dry completely for at least 24 hours before reinserting them. Do not use a dryer or direct heat.
5. Reassemble the filters and dustbin, then reattach to the vacuum cleaner.



Image: A close-up view of the washable filter being removed from the dustbin, illustrating the two-step filtration system.

3.3 Battery Care

- Always use the original charger provided with the appliance.
- Do not expose the battery to extreme temperatures.
- If storing the vacuum for an extended period, ensure the battery is partially charged (around 50%) and store in a cool, dry place.

4. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly inserted.	Charge the battery fully. Ensure the battery is securely clicked into place.

Problem	Possible Cause	Solution
Reduced suction power.	Dustbin is full, filters are clogged, or an attachment is blocked.	Empty the dustbin. Clean or wash the filters. Check for blockages in the nozzle, wand, or accessories.
Short operating time.	Battery not fully charged or battery degradation.	Ensure battery is fully charged (5 hours). If issue persists, contact customer support for battery replacement options.

5. SPECIFICATIONS

Feature	Detail
Model Number	AP31CB18IW
Brand	AEG
Voltage	18 Volts
Power	18 Watts
Battery Type	Lithium-ion (1 included)
Runtime	Up to 30 minutes (on low speed)
Charge Time	Approximately 5 hours
Dustbin Capacity	0.5 Liters
Filter Type	Washable HEPA filter
Dimensions (L x W x H)	25 x 22.2 x 112.8 cm
Weight	2.36 Kilograms
Special Features	Washable filter, Lightweight, Portable, Cordless, Bagless
Included Components	3 interchangeable accessories

6. WARRANTY AND SUPPORT

For warranty information, technical support, or to purchase replacement parts, please refer to the warranty card included with your product or visit the official AEG website. You can also visit the [AEG Brand Store](#) for more product information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question