



Manuals.plus /

› **Simple Deluxe** /

› Simple Deluxe 40" Indoor Ceiling Fan with Lights and Remote Control User Manual

Simple Deluxe Ceiling Fan with Light & Remote Control

Simple Deluxe 40" Indoor Ceiling Fan with Lights and Remote Control User Manual

Model: Ceiling Fan with Light & Remote Control

1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before installing and operating the ceiling fan. Retain this manual for future reference.

- Ensure the power supply is disconnected at the circuit breaker before installation or maintenance.
- All electrical connections must comply with local codes and ordinances, and the National Electric Code (NEC). If you are unfamiliar with electrical wiring, consult a qualified electrician.
- The fan must be mounted to a structurally sound ceiling joist or outlet box capable of supporting a minimum of 35 lbs (15.9 kg).
- Maintain a minimum clearance of 7 feet (2.1 meters) from the floor to the fan blades.
- Do not insert objects into the path of the fan blades.
- This fan is designed for indoor use only.

2. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Fan Motor Assembly
- Fan Blades (3)
- LED Light Kit
- Remote Control and Receiver
- Mounting Bracket and Hardware
- Instruction Manual

3. SETUP AND INSTALLATION

Follow these steps for a hassle-free installation:

1. **Prepare for Installation:** Turn off power at the main circuit breaker. Secure the mounting bracket to the ceiling outlet box or joist.
2. **Wiring Connections:** Connect the fan's electrical wires to the household wiring according to the wiring diagram provided in the separate installation guide. Ensure all connections are secure.
3. **Mount the Fan:** Carefully lift the fan motor assembly and attach it to the mounting bracket.
4. **Attach Fan Blades:** Securely fasten the three wooden fan blades to the motor housing.
5. **Install Light Kit:** Connect the LED light kit wires and attach the light kit to the bottom of the fan motor assembly.

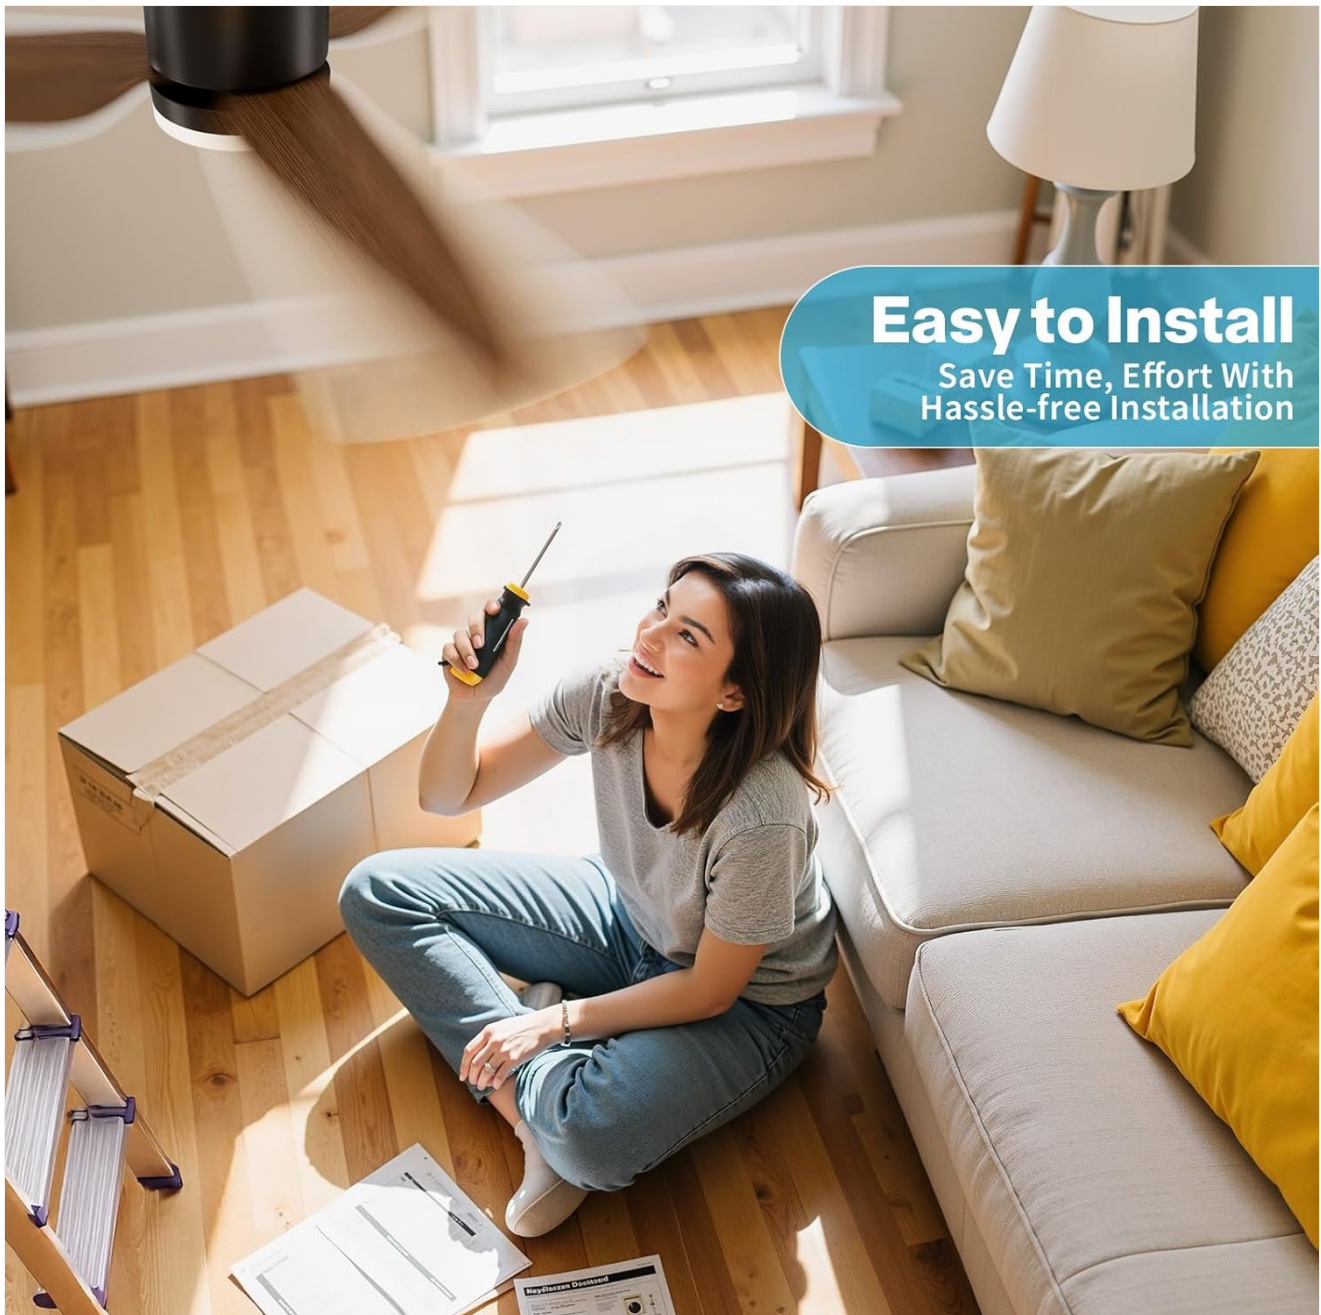


Image: A person installing the ceiling fan, demonstrating the ease of the installation process.

4. OPERATING INSTRUCTIONS

The ceiling fan is controlled by the included remote control. Ensure the remote control has working batteries.

4.1 Remote Control Functions

- **OFF:** Turns off both the fan and the light.

- **Light ON/OFF:** Toggles the LED light on or off independently.
- **Fan Forward/Reversal Rotating:** Changes the direction of the fan blades for summer (downward airflow) or winter (upward airflow) modes.
- **Natural Wind:** Activates a mode that simulates natural breeze by varying fan speeds.
- **Adjust 1-6 Speed of Fan:** Selects one of six fan speeds.
- **Set the Fan Timer:** Sets the fan to turn off automatically after 1, 2, or 4 hours.
- **PAIR CODE/FAN OFF:** Used for pairing the remote with the fan receiver or turning off the fan only.



Image: Illustration of the remote control and its various functions, including power, light, speed, direction, natural wind, and timer settings. The remote control range is up to 8 meters.

4.2 Fan Speed and Airflow

The fan offers 6 speed levels to suit different comfort needs:

- **Levels 1-2:** Provide a comfortable, gentle breeze for sleeping or resting.
- **Levels 3-4:** Offer natural wind for daily use.
- **Levels 5-6:** Deliver strong cooling wind for warmer conditions.



Image: Visual representation of fan blade movement at different speed levels (1-2, 3-4, 5-6) and their corresponding airflow intensity, along with the integrated LED light kit.

4.3 Reversible Motor Function

The fan features a reversible motor for year-round comfort:

- **Summer Mode (Forward Rotation):** Blades rotate counter-clockwise, pushing air downward to create a cooling effect.
- **Winter Mode (Reverse Rotation):** Blades rotate clockwise, drawing air upward to circulate warm air near the ceiling, helping to maintain a comfortable temperature.

Reversible Motor

Two Modes for Summer and Winter


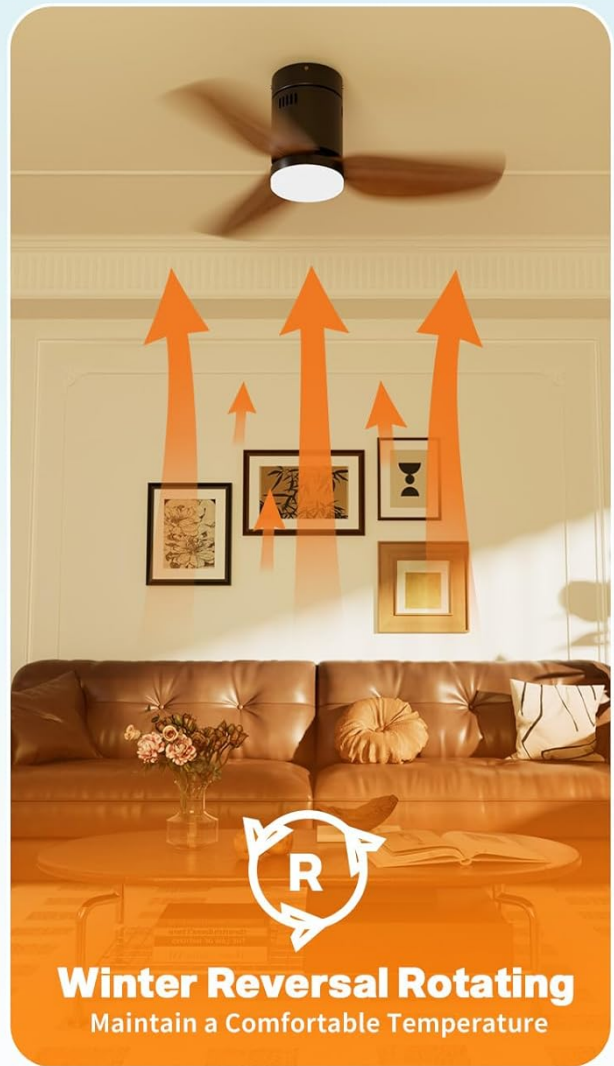


Image: Diagram illustrating the two modes of the reversible motor: summer forward rotation for powerful, rapid cooling (downward arrows) and winter reversal rotation to maintain comfortable temperature (upward arrows).

4.4 Quiet Operation

The fan is designed with an advanced motor for ultra-quiet operation, providing airflow with minimal noise, approximately 55 decibels at its highest setting.

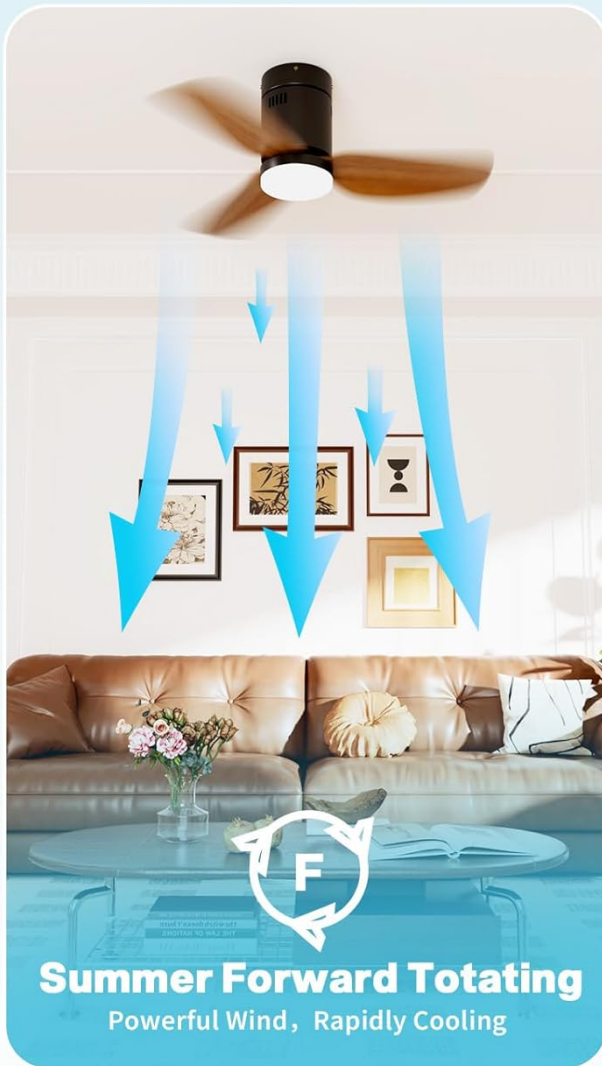

Super-quiet-peaceful Airflow , Noiseless Experience

Image: A woman reading peacefully in a room with the ceiling fan operating, highlighting its ultra-quiet performance with a visual representation of low noise levels (50dB).

5. MAINTENANCE

Regular maintenance helps ensure the longevity and optimal performance of your ceiling fan.

- **Cleaning:** To clean the fan, wipe the blades and motor housing with a soft, damp cloth. Do not use abrasive cleaners or solvents. For the wooden blades, a gentle hand wipe is recommended.
- **Tighten Fasteners:** Periodically check all screws and fasteners on the fan and mounting hardware to ensure they are secure.
- **Light Kit:** The LED light kit has a long lifespan. If replacement is ever needed, consult the manufacturer for compatible parts.

6. TROUBLESHOOTING

If you experience issues with your ceiling fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control battery low or not paired.	Check circuit breaker; Verify all wiring connections; Replace remote battery or re-pair remote.
Light does not work	Loose wire connection to light kit; Faulty LED light kit; Remote control issue.	Check light kit wiring; Contact support for light kit replacement; Ensure remote is functioning.
Fan makes excessive noise	Loose fan blades; Loose mounting hardware; Motor issue.	Tighten all blade screws; Ensure mounting bracket is secure; Contact support if motor noise persists.
Fan wobbles	Loose fan blades; Uneven blade installation; Loose mounting hardware.	Ensure all blade screws are tight; Verify blades are installed evenly; Check mounting bracket security.
Remote not responding	Low battery; Not paired with fan; Obstruction between remote and receiver.	Replace remote battery; Re-pair remote with fan; Ensure clear line of sight.

7. SPECIFICATIONS

Detailed technical specifications for the Simple Deluxe 40" Ceiling Fan:

Feature	Specification
Brand	Simple Deluxe
Model Name	Ceiling Fan with Light & Remote Control
Size	40 Inch Standard
Product Dimensions	13"D x 21.5"W x 10"H
Item Weight	10.85 Pounds
Color	Farmhouse Bronze
Number of Blades	3
Blade Length	40 Inches
Material	Metal+Wood
Voltage	90-265V
Wattage	15 watts (Fan), 29W (Total)
Noise Level	55 Decibels
Control Method	Remote
Number of Power Levels	6
Light Kit	Integrated LED, 1500 Lumens, 3000K Warm White
Indoor/Outdoor Usage	Indoor
Special Features	Remote Controlled, Reversible Motor, LED Light, Timer



Product Size



Basic Information

Voltage	90-265V
Color Temperature	3000K
Material	Metal+Wood
Wattage	29W

Image: Product dimensions (40" width, 10.8" height) and basic information including voltage (90-265V), color temperature (3000K), material (Metal+Wood), and wattage (29W).

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This Simple Deluxe ceiling fan is covered by a **2-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from improper installation, accident, misuse, abuse, or unauthorized modifications.

8.2 Customer Support

For technical assistance, warranty claims, or to inquire about replacement parts, please contact Simple Deluxe customer service. Refer to your purchase documentation or the Simple Deluxe official website for current contact information.