

[Manuals.plus](#) /

> [Jocca](#) /

> Jocca 10L 1700W Air Fryer User Manual

Jocca B0DDTNKSLH

Jocca 10L 1700W Air Fryer User Manual

Model: B0DDTNKSLH

INTRODUCTION

Thank you for choosing the Jocca 10L 1700W Air Fryer. This appliance utilizes advanced hot air technology to cook your favorite foods with little to no oil, offering a healthier alternative to traditional frying. With its generous 10-liter capacity, LED touchscreen, and 8 automatic programs, it is designed for convenience and versatility in your kitchen. Please read this manual thoroughly before first use to ensure safe and optimal operation.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- Ensure the appliance is placed on a stable, heat-resistant surface, away from walls or other appliances to allow for proper air circulation.
- The appliance features overheat protection and cool-touch handles for enhanced safety.

PRODUCT OVERVIEW

Familiarize yourself with the components and features of your Jocca Air Fryer.



Overall Design: The Jocca 10L Air Fryer features a modern stainless steel and black design, with a prominent viewing window and LED touchscreen on top.



Dimensions: Side view illustrating the appliance's dimensions: approximately 30.5 cm (depth) x 36.4 cm (width) x 43.5 cm (height).



LED Touchscreen: A close-up of the intuitive LED touchscreen display, showing various cooking program icons, temperature, and time settings.



Cooking Basket: A hand demonstrating the easy removal of the large capacity, non-stick coated cooking basket, ideal for preparing family-sized meals.



Cooking Chamber: An inside view of the cooking chamber, showing the spacious interior and the non-stick grid, suitable for various ingredients like vegetables.



Cool-Touch Handle: A close-up of the ergonomic, cool-touch handle, designed for safe and comfortable handling of the cooking basket.

Key Components:

- **Main Unit:** The primary housing containing the heating element, fan, and control circuitry.
- **LED Touchscreen Control Panel:** For intuitive operation, setting time, temperature, and selecting preset programs.

- **10-Liter Cooking Basket:** A large capacity, non-stick coated basket with a removable grid, designed for easy cleaning and efficient cooking.
- **Viewing Window with Internal Light:** Allows you to monitor your food's progress without interrupting the cooking cycle, preserving heat and energy.
- **Cool-Touch Handle:** Ensures safe handling of the hot cooking basket during and after operation.
- **Air Inlet and Outlet Vents:** Located on the top and back of the unit, crucial for proper air circulation and heat dissipation.
- **Anti-slip Feet:** Provide stability and prevent the appliance from sliding on your countertop.

SETUP AND FIRST USE

1. **Unpack:** Carefully remove all packaging materials and promotional labels from the air fryer.
2. **Clean:** Wipe the exterior of the appliance with a damp cloth. Wash the cooking basket and any removable accessories with warm, soapy water. Rinse thoroughly and dry completely.
3. **Placement:** Place the air fryer on a stable, flat, heat-resistant surface. Ensure there is at least 10 cm (4 inches) of clear space around the back and sides of the appliance for proper ventilation. Do not place it directly against a wall or under cabinets.
4. **Initial Run (Burn-off):** Before cooking food, it is recommended to run the air fryer for about 10-15 minutes at 180°C (350°F) without any food inside. This helps to burn off any manufacturing residues and eliminate initial odors. A slight odor may be present during this process; this is normal.
5. **Cool Down:** After the initial run, unplug the appliance and allow it to cool down completely before cleaning it again.

OPERATING INSTRUCTIONS

General Operation:

1. **Prepare Food:** Place your ingredients into the cooking basket. For best results, do not overfill the basket.
2. **Insert Basket:** Slide the cooking basket firmly back into the main unit until it clicks into place.
3. **Power On:** Plug the power cord into a grounded wall outlet. The LED display will illuminate.
4. **Select Program or Manual Settings:**
 - **Automatic Programs:** Choose one of the 8 preset programs by tapping the corresponding icon on the touchscreen. The air fryer will automatically set the optimal time and temperature.
 - **Manual Settings:** Use the temperature and time adjustment buttons (+ / -) to set your desired cooking temperature (60-200°C) and time (up to 2 hours).
5. **Start Cooking:** Press the Start/Pause button to begin the cooking process. The internal light can be turned on/off to view progress through the window.
6. **Shake/Flip (Optional):** For even cooking, some recipes may require shaking or flipping ingredients halfway through. The air fryer may beep to remind you. Carefully pull out the basket, shake or flip, and reinsert. The cooking will resume automatically.
7. **End of Cooking:** The air fryer will beep when the cooking time is complete and automatically shut off.
8. **Remove Food:** Carefully pull out the basket using the cool-touch handle. Use tongs or a spatula to remove the cooked food. Avoid tipping the basket directly to prevent oil/grease from dripping onto the food.
9. **Unplug:** Unplug the appliance from the wall outlet after use.

Automatic Programs:

Program Icon	Food Type	Default Temperature	Default Time
	Fries	180°C	15-20 min
	Chicken	190°C	20-25 min
	Steak	180°C	10-15 min
	Shrimp	160°C	8-12 min
	Fish	170°C	12-18 min
	Bake	160°C	20-30 min
	Pizza	190°C	10-15 min
	Vegetables	170°C	10-15 min

Note: Default settings are a guide. Adjust time and temperature based on food quantity, thickness, and desired crispiness.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your air fryer.

- **Always Unplug:** Before cleaning, always unplug the air fryer from the power outlet and allow it to cool down completely.
- **Cooking Basket and Grid:** The non-stick coated basket and grid are dishwasher safe. For manual cleaning, wash them with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely. Do not use metal utensils or abrasive cleaning materials as they can damage the non-stick coating.
- **Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water or any other liquid.
- **Interior:** If necessary, wipe the interior of the appliance with a damp cloth. For stubborn food residue, a small amount of mild dish soap can be used. Ensure the interior is completely dry before next use.
- **Heating Element:** Use a cleaning brush to remove any food residue from the heating element. Do not use water or liquid cleaners directly on the heating element.
- **Storage:** Store the air fryer in a cool, dry place when not in use. Ensure all parts are clean and dry before storage.

TROUBLESHOOTING

If you encounter any issues with your Jocca Air Fryer, please refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in; power outlet is not working; basket is not inserted correctly.	Ensure the power cord is securely plugged into a working outlet. Check if the basket is fully pushed into the unit until it clicks.
Food is not cooked evenly.	Basket is overfilled; food pieces are too large; food was not shaken/flipped.	Do not overfill the basket. Cut food into smaller, more uniform pieces. Shake or flip ingredients halfway through cooking.

Problem	Possible Cause	Solution
White smoke comes from the appliance.	Grease residue from previous use; fatty ingredients being cooked.	Clean the basket and interior thoroughly after each use. For fatty foods, place a small amount of water in the bottom of the outer pan to prevent smoke.
Food is not crispy.	Too much moisture in food; not enough oil (if desired); temperature too low or time too short.	Pat food dry before cooking. Lightly coat with oil for extra crispiness. Increase temperature or cooking time.
Unpleasant odor during first use.	Manufacturing residues burning off.	This is normal for first use. Run the air fryer empty for 10-15 minutes at 180°C. Ensure good ventilation.

SPECIFICATIONS

Feature	Detail
Brand	Jocca
Model	B0DDTNKSLH
Capacity	10 Liters
Power	1700 Watts
Voltage	230 Volts (AC)
Temperature Range	60°C - 200°C
Timer	Up to 2 hours
Control Type	LED Touchscreen
Programs	8 Automatic Programs
Material	Stainless Steel (front design)
Dimensions (LxWxH)	30.5 x 36.4 x 43.5 cm
Weight	7 Kilograms
Special Features	Viewing Window, Internal Light, Overheat Protection, Cool-Touch Handles, Non-stick Basket

WARRANTY AND SUPPORT

This Jocca Air Fryer is designed and manufactured to the highest quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or contact the retailer where the product was purchased. For technical support or service inquiries, please contact Jocca customer service through their official channels or the seller "JOCCA" on Amazon.de.

Please retain your proof of purchase for any warranty claims.

