

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BoxWave](#) /

› [BoxWave FineTouch Capacitive Stylus User Manual](#)

BoxWave FineTouch Capacitive Stylus

BoxWave FineTouch Capacitive Stylus User Manual

Model: FineTouch Capacitive Stylus

1. PRODUCT OVERVIEW

The BoxWave FineTouch Capacitive Stylus is designed for precise interaction with capacitive touchscreens, including devices like the ASHATA 1.8in EBook Reader. It features a unique clear disc tip for enhanced visibility and accuracy, and a lightweight, compact design for comfortable use.



Image: The BoxWave FineTouch Capacitive Stylus, showcasing its clear disc tip, accurate and responsive performance, and sleek, lightweight design.

2. PACKAGE CONTENTS

- BoxWave FineTouch Capacitive Stylus

Note: The ASHATA 1.8in EBook Reader device is not included.

3. SETUP AND FIRST USE

The FineTouch Capacitive Stylus requires no pairing or batteries. It is ready for immediate use.

1. Remove the protective cap from the stylus tip.
2. Gently touch the clear disc tip to your device's capacitive touchscreen.
3. The stylus is now ready for use.



Image: The stylus with its cap removed, showing the clear disc tip ready for use.

4. OPERATING INSTRUCTIONS

The FineTouch Capacitive Stylus simulates the touch of your finger, allowing for natural and precise interaction.

- **Tapping:** Use the stylus to tap on icons, select menu items, or activate functions on your screen.
- **Swiping:** Drag the stylus across the screen to scroll, navigate, or perform swipe gestures.
- **Writing/Drawing:** The clear disc tip provides enhanced visibility, allowing you to see exactly where your input is registered for detailed writing or drawing tasks.

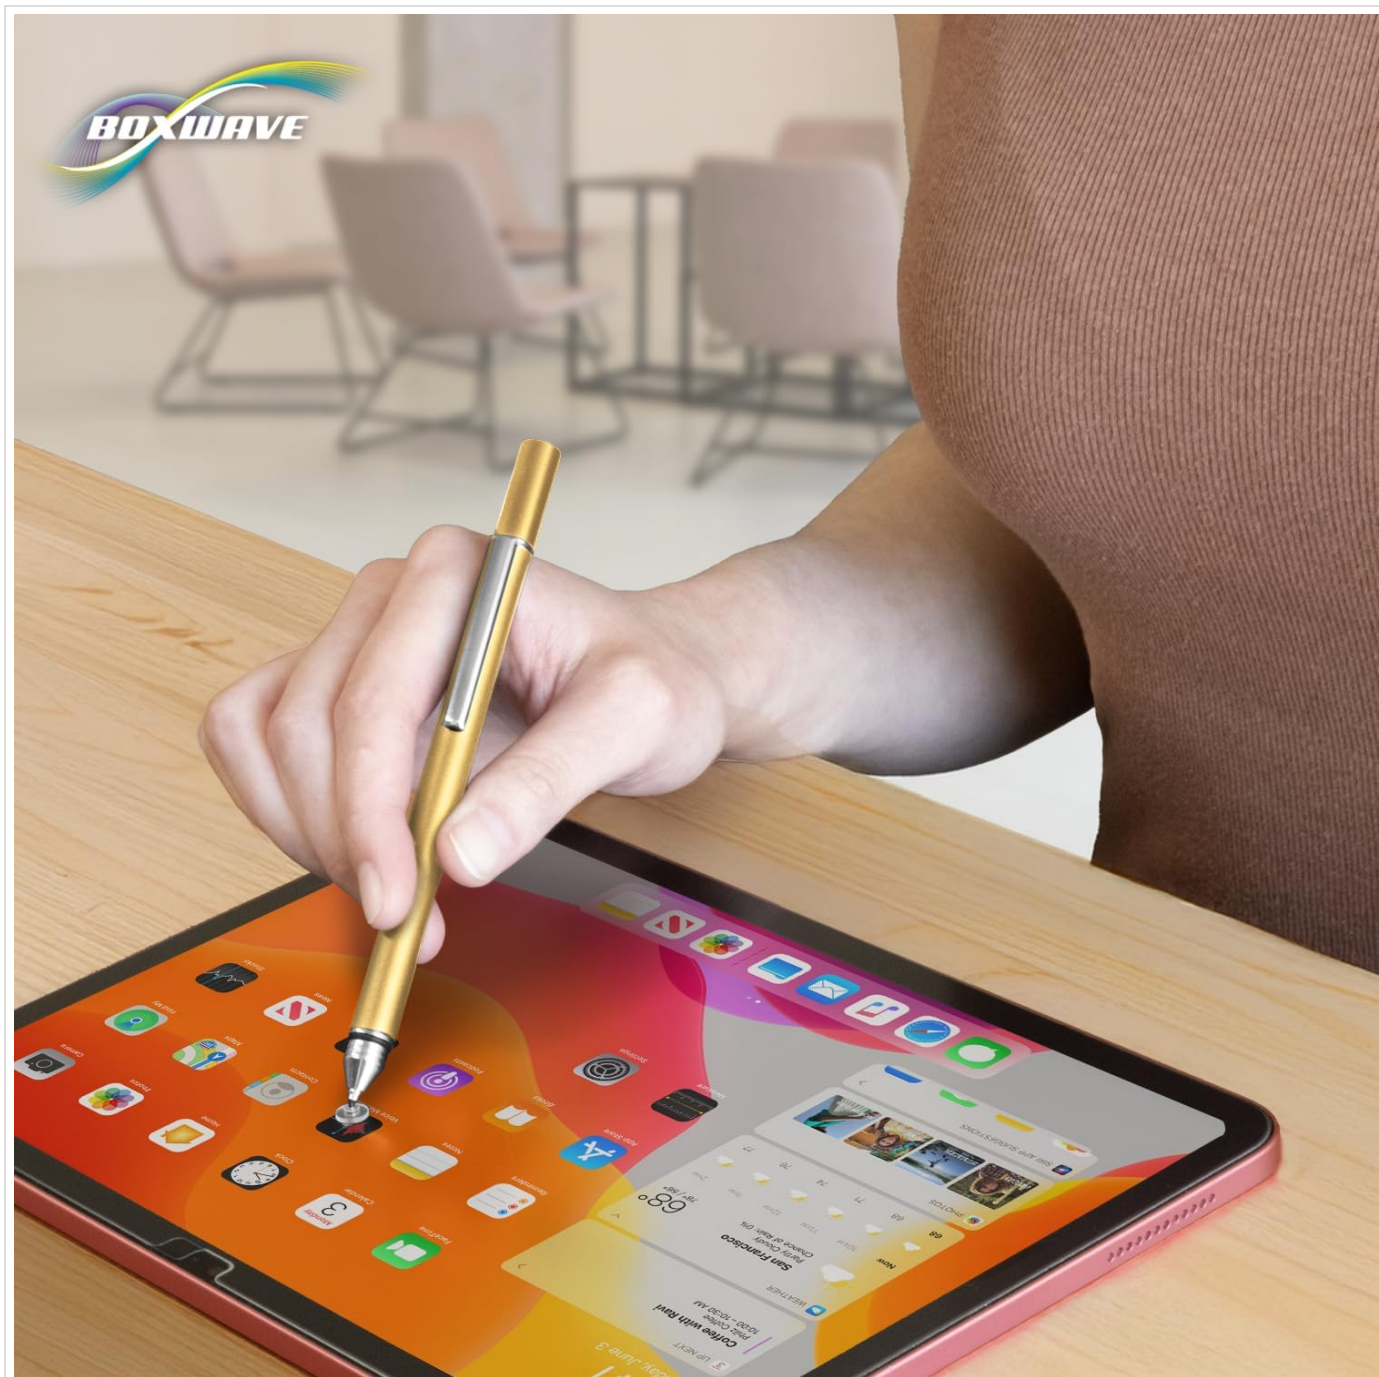



Image: A user operating the stylus on a tablet, demonstrating its natural feel.

Important Considerations:

- The FineTouch Capacitive Stylus does not support palm rejection. Avoid resting your palm on the screen while using the stylus.
- This stylus does not offer pressure sensitivity.

5. MAINTENANCE AND CARE

- **Cleaning:** Wipe the stylus body with a soft, dry cloth. For the clear disc tip, gently clean with a microfiber cloth to remove any smudges or debris.
- **Tip Protection:** Always replace the threaded cap when the stylus is not in use to protect the clear disc tip from damage.
- **Storage:** Store the stylus in a clean, dry place. The built-in metal clip allows for convenient attachment to a shirt pocket, case, or notebook.

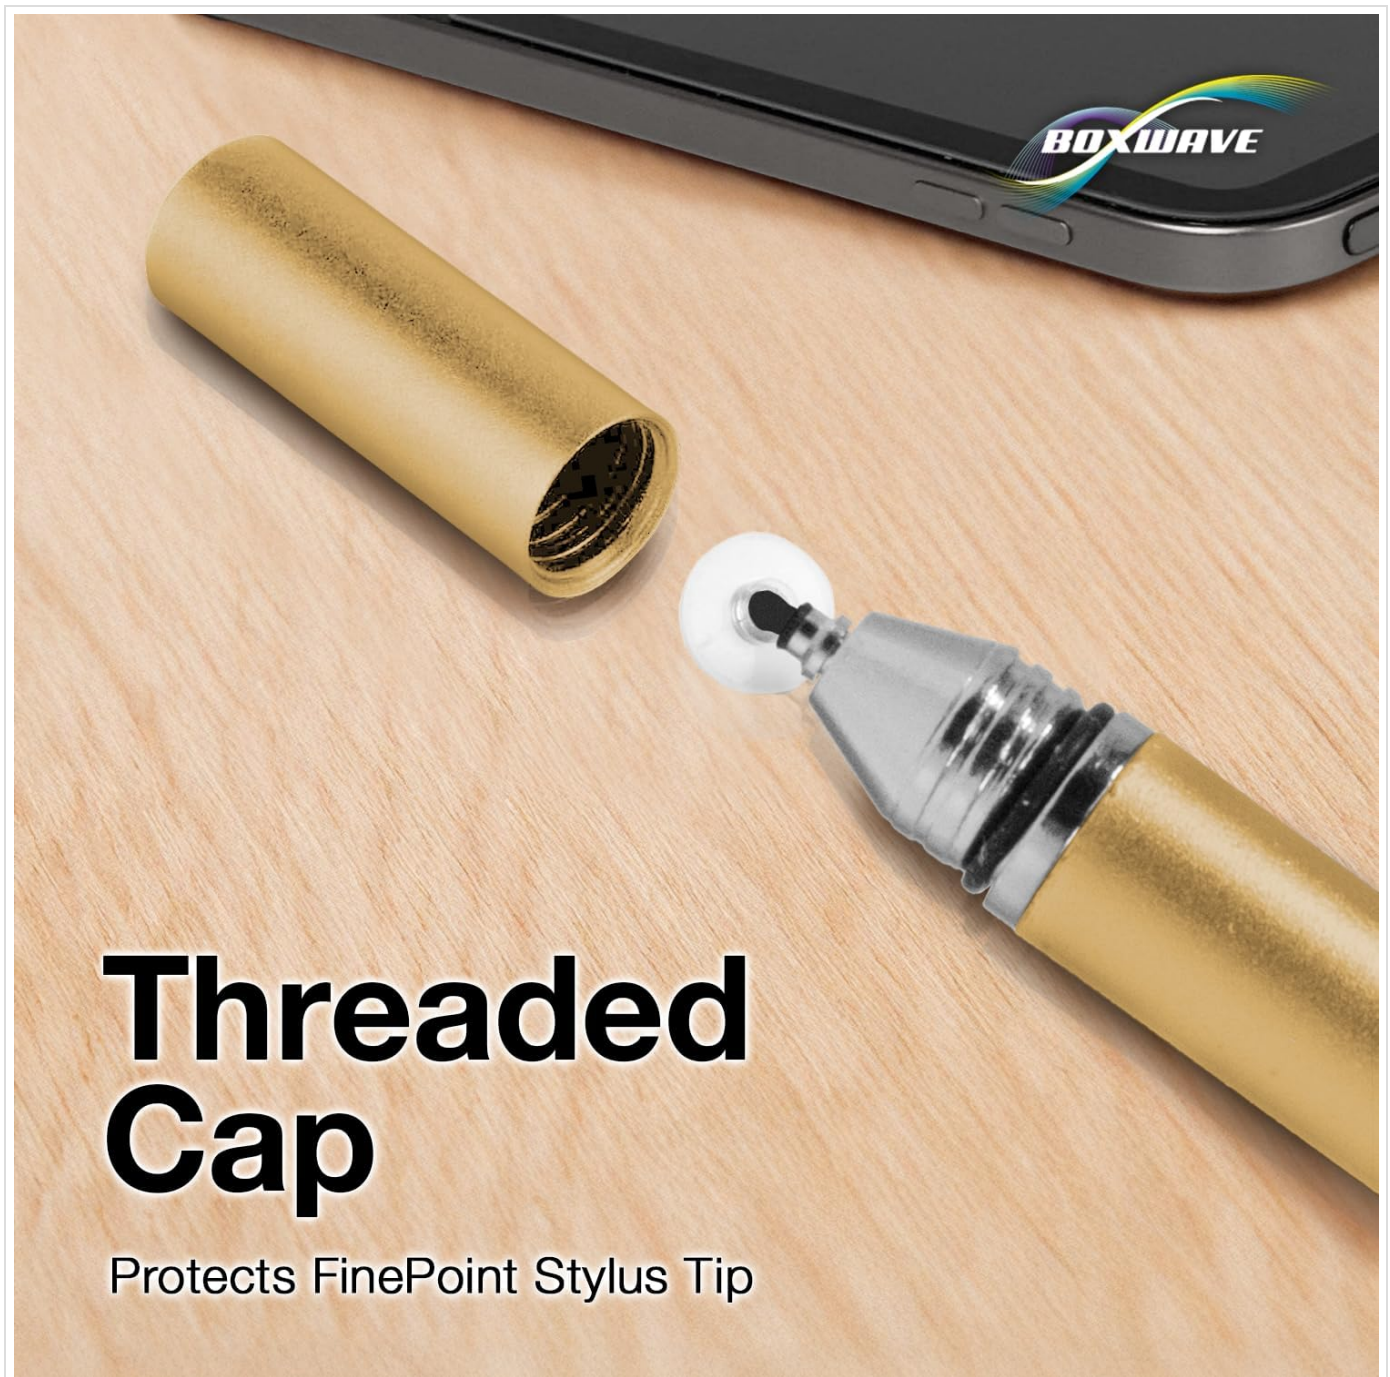

Threaded Cap

Protects FinePoint Stylus Tip

Image: The stylus with its threaded cap, illustrating how to protect the clear disc tip.

6. TROUBLESHOOTING

- **Stylus not responding:**

- Ensure your device's screen is clean and free of smudges or debris.
- Verify that the clear disc tip is intact and not damaged.
- Test the stylus on another capacitive touchscreen device to determine if the issue is with the stylus or your device.

- **Inaccurate input:**

- Make sure the clear disc tip is making full contact with the screen.
- Clean the screen and the stylus tip.

7. SPECIFICATIONS

Item Weight	1 ounces
Manufacturer	BoxWave
Model	FineTouch Capacitive Stylus
ASIN	B0DDV52GL3
Date First Available	July 15, 2024

8. WARRANTY AND SUPPORT

For warranty information or technical support, please contact BoxWave customer service. Refer to the product packaging or the official BoxWave website for contact details.

Limited 3rd party tech support for your device (up to 3 inquiries via messaging) is included, but BoxWave is not affiliated with or endorsed by ASHATA.

