

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Invicta](#) /

> [Invicta Pro Diver Model 47632 Quartz Chronograph Watch User Manual](#)

Invicta 47632

Invicta Pro Diver Model 47632 Quartz Chronograph Watch User Manual

Detailed instructions for your Invicta Pro Diver timepiece.

INTRODUCTION

This manual provides essential information for the proper use, care, and maintenance of your Invicta Pro Diver Model 47632 Quartz Chronograph Watch. Please read these instructions carefully to ensure optimal performance and longevity of your timepiece.



Image: Invicta Pro Diver Model 47632 watch, gold-toned with a green and black bezel, worn on a wrist.

SETUP AND INITIAL ADJUSTMENT

Before using your watch, perform the following initial adjustments:

1. Time Setting:

- Unscrew the crown (if applicable) and pull it out to position 2.
- Rotate the crown to set the hour and minute hands to the correct time.
- Push the crown back into position 0 and screw it in securely to ensure water resistance.

2. Date Setting:

- Pull the crown out to position 1.
- Rotate the crown to set the date. Avoid setting the date between 9 PM and 3 AM, as this may interfere with the automatic date change mechanism.
- Push the crown back into position 0 and screw it in securely.

3. Band Adjustment:

The stainless steel bracelet can be adjusted for a comfortable fit. It is recommended to have this procedure performed by a qualified watch technician to avoid damage to the band or watch.



Image: Diagram of the Invicta Pro Diver watch highlighting the crown for time adjustment and pushers for chronograph functions (Start/Pause, Adjust Time, Reset).

OPERATING INSTRUCTIONS

Your Invicta Pro Diver watch features a quartz movement with chronograph functions.

- **Time Display:** The main hands indicate hours, minutes, and seconds.
- **24-Hour Hand:** A sub-dial displays time in a 24-hour format, useful for distinguishing AM/PM or tracking a second time zone.
- **Calendar Window:** Displays the current date.
- **Chronograph (Stopwatch) Function:**
 - **Start/Pause:** Press the upper pusher to start the chronograph. Press it again to pause.
 - **Reset:** While the chronograph is paused, press the lower pusher to reset all chronograph hands to zero.
 - The chronograph measures elapsed time using dedicated sub-dials for minutes and seconds.

MAINTENANCE AND CARE

Proper care will help maintain the appearance and function of your watch.

- **Cleaning:** Wipe the watch case and bracelet with a soft, dry cloth. For stainless steel, a slightly damp cloth can be used, followed by drying.
- **Water Resistance (200 Meters / 660 Feet):**
 - This watch is suitable for professional marine activity and serious surface water sports, but not scuba diving.
 - Always ensure the crown is fully pushed in and screwed down (if applicable) before exposing the watch to water.
 - Do not operate the crown or pushers while the watch is wet or submerged.
 - Rinse the watch with fresh water after exposure to salt water.
- **Battery Replacement:** The watch is powered by a nonstandard battery (e.g., Renata 371 / SR920SW). When the watch stops or the second hand moves erratically, the battery may need replacement. It is recommended to have battery replacement performed by a professional watchmaker to ensure proper sealing and water resistance.
- **Avoid Extreme Conditions:** Protect your watch from extreme temperatures, strong magnetic fields, and severe shocks.

Deep Water Resistant

200 Meters / 660 Feet



Image: Invicta Pro Diver watch partially submerged in water, illustrating its water resistance capabilities.

TROUBLESHOOTING


If you encounter issues with your watch, refer to the following common solutions:

- **Watch Not Running:**
 - Check if the crown is fully pushed in and screwed down.
 - The battery may be depleted. Refer to the "Battery Replacement" section under Maintenance.
- **Time/Date Not Changing:**
 - Ensure the crown is in the correct position for setting (position 2 for time, position 1 for date).

- If the date is stuck, try advancing the time past midnight to see if it changes.
- **Chronograph Hands Not Resetting to Zero:**
 - This may require a chronograph calibration. Consult a professional watchmaker or refer to specific VD53 movement instructions for calibration procedures. This often involves pulling the crown to a specific position and using the pushers to align the hands.

SPECIFICATIONS

Model Name	Pro Diver
Model Number	47632
Movement Type	Quartz (TMI Caliber VD53-C)
Case Material	Stainless Steel
Band Material	Stainless Steel
Crystal Type	Flame Fusion
Case Diameter	48 mm
Case Thickness	16.7 mm
Band Width	26 mm
Band Length	186 mm
Water Resistance Depth	200 Meters (660 Feet)
Item Weight	215 Grams (7.58 ounces)
Battery Type	1 Nonstandard Battery (e.g., Renata 371 / SR920SW)

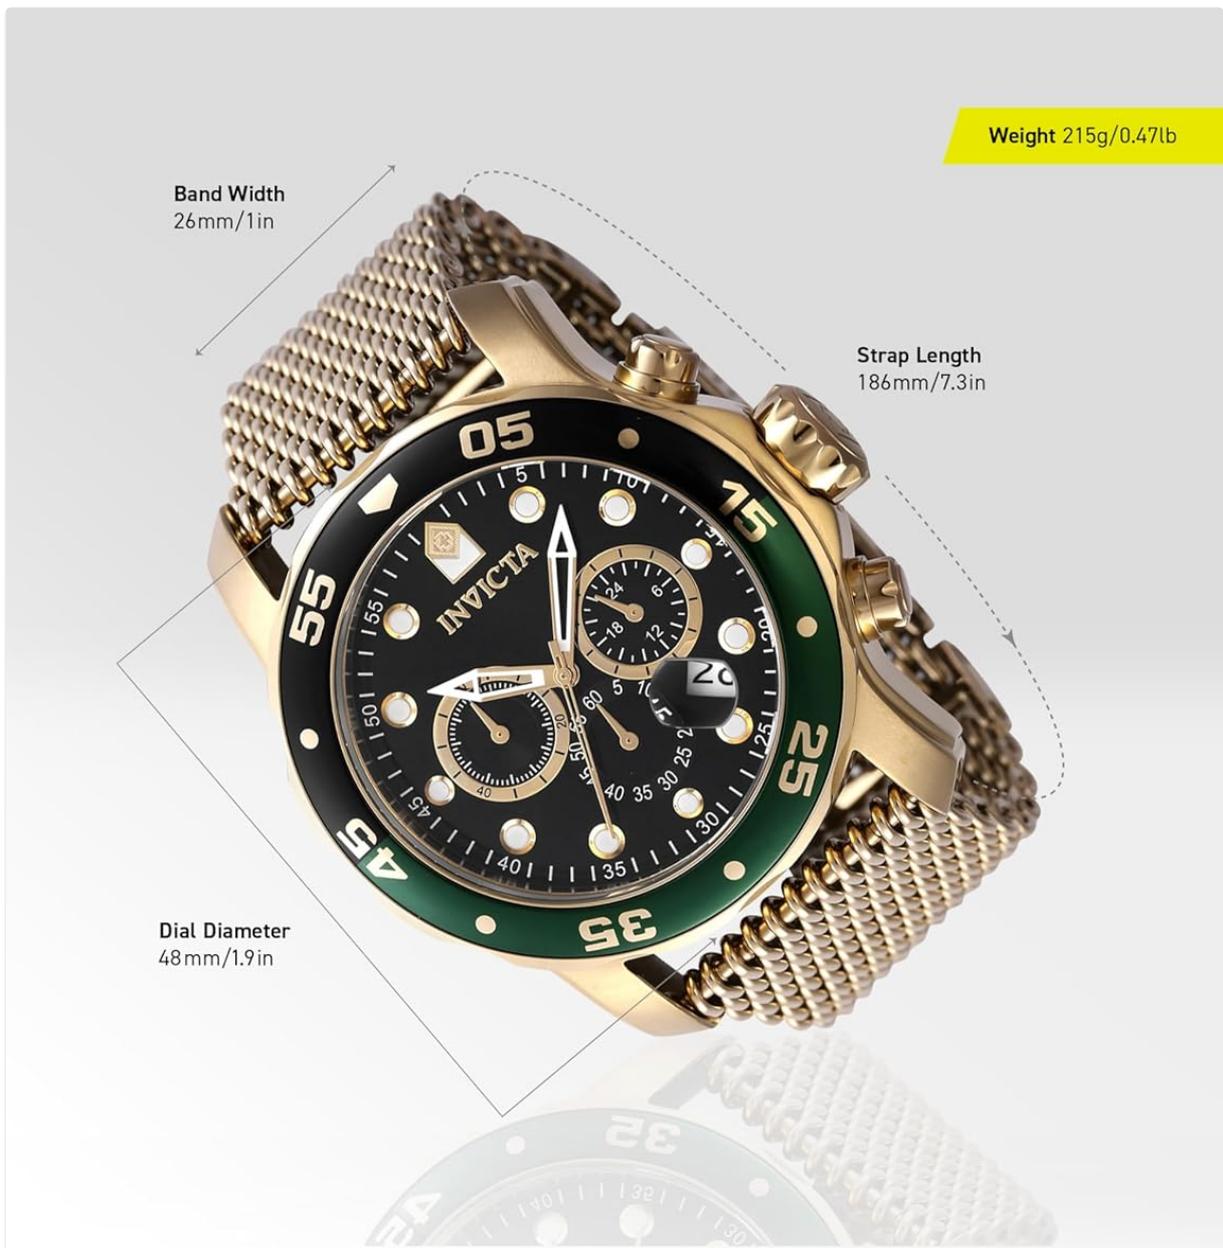

Dial Thickness 16.7mm/0.66in



Movement Japanese Quartz



Band Material Stainless Steel

Image: Detailed view of the Invicta Pro Diver watch showing key dimensions like band width, strap length, dial diameter, and dial thickness, along with movement type.

WARRANTY INFORMATION

Your Invicta Pro Diver Model 47632 watch comes with a **2-year limited warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use. It does not cover damage resulting from improper handling, accidents, unauthorized repairs, or normal wear and tear. Please retain your proof of purchase for warranty claims.

SUPPORT

For further assistance, service, or warranty claims, please contact Invicta customer support or visit the official Invicta website. When contacting support, please have your watch model number (47632) and proof of purchase readily available.

[Visit Invicta Official Website](#)