

[Manuals.plus](#) /

› [BIGMONAT](#) /

› BIGMONAT 3-in-1 Bluetooth Speaker & Sleep Sound Machine (Model B440) Instruction Manual

BIGMONAT B440

BIGMONAT 3-in-1 Bluetooth Speaker & Sleep Sound Machine (Model B440) Instruction Manual

INTRODUCTION

This BIGMONAT 3-in-1 device combines a powerful Bluetooth speaker, a sleep sound machine with 70 soothing sounds, and an RGB table lamp. Designed for versatile use in various settings, it offers up to 30 hours of playtime and convenient Type-C USB recharging. This manual provides detailed instructions for setup, operation, and maintenance.

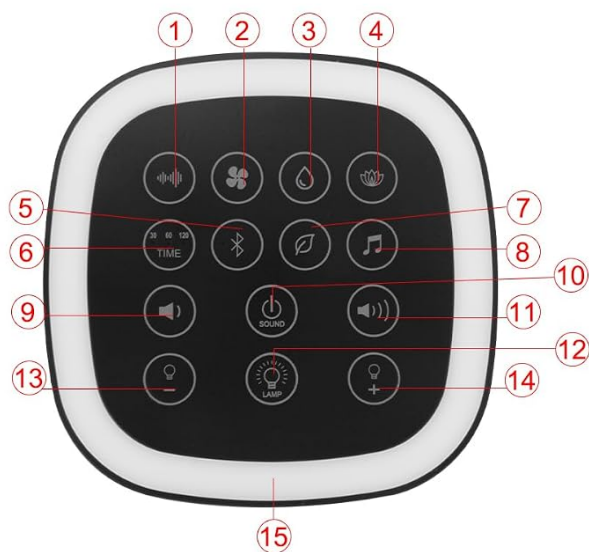


Image: The BIGMONAT 3-in-1 device showcasing its multiple functionalities as a Bluetooth speaker, sound machine, and night light.

PACKAGE CONTENTS

- 1 x BIGMONAT 3-in-1 Bluetooth Speaker
- 1 x Type-C USB Charging Cable
- 1 x User Manual

PRODUCT OVERVIEW & CONTROLS



1.White noise

2.Fan

3.Water

4.Zen

5.Bluetooth button/Indicator

6.Sleep timer

7.Nature

8.Other

9.Volume -

10.Sound switch/Off switch
(Press power button for 1-2 seconds
to turn ON or OFF the sound)

11.Volume +

12.Panel light transfer switch

13.Whiteness -

14.Whiteness +

15.Panel light

16.Battery charging indicator

17.Type-C charging interface

18.Main power switch



Image: Detailed diagram of the speaker's top panel controls and rear ports with corresponding numbers.

The following list details the functions of the numbered controls on your device:

1. White noise sound selection
2. Fan sound selection
3. Water sound selection
4. Zen sound selection
5. Bluetooth button/Indicator light
6. Sleep timer button
7. Nature sound selection
8. Other sound selection
9. Decrease volume (-)

10. Sound switch/Off switch (Press for 1-2 seconds to turn ON or OFF the sound)
11. Increase volume (+)
12. Panel light transfer switch (RGB fade on/off)
13. Decrease brightness (-)
14. Increase brightness (+)
15. Panel light
16. Lid for lamp
17. LED ball lamp
18. Speaker / built-in rechargeable battery
19. Battery charger indicator light
20. Type-C USB port
21. Main power on/off switch
22. Type-C USB cable

SETUP

Follow these steps to set up your BIGMONAT 3-in-1 device:

1. Locate the main power switch (21) on the back of the device.
2. Toggle the switch to the 'ON' position to power on the device.
3. The display will illuminate, indicating the device is ready for use.

Video: Demonstrates how to unbox and power on the BIGMONAT 3-in-1 Bluetooth Speaker by toggling the power switch on the back.

OPERATING INSTRUCTIONS

Power On/Off

- To power on the device, toggle the main power switch (21) on the back to 'ON'.
- To power off the device, toggle the main power switch (21) to 'OFF'.

Sound Selection

The device offers 70 soothing sounds across 6 categories: White Noise, Fan, Water, Zen, Nature, and Other.

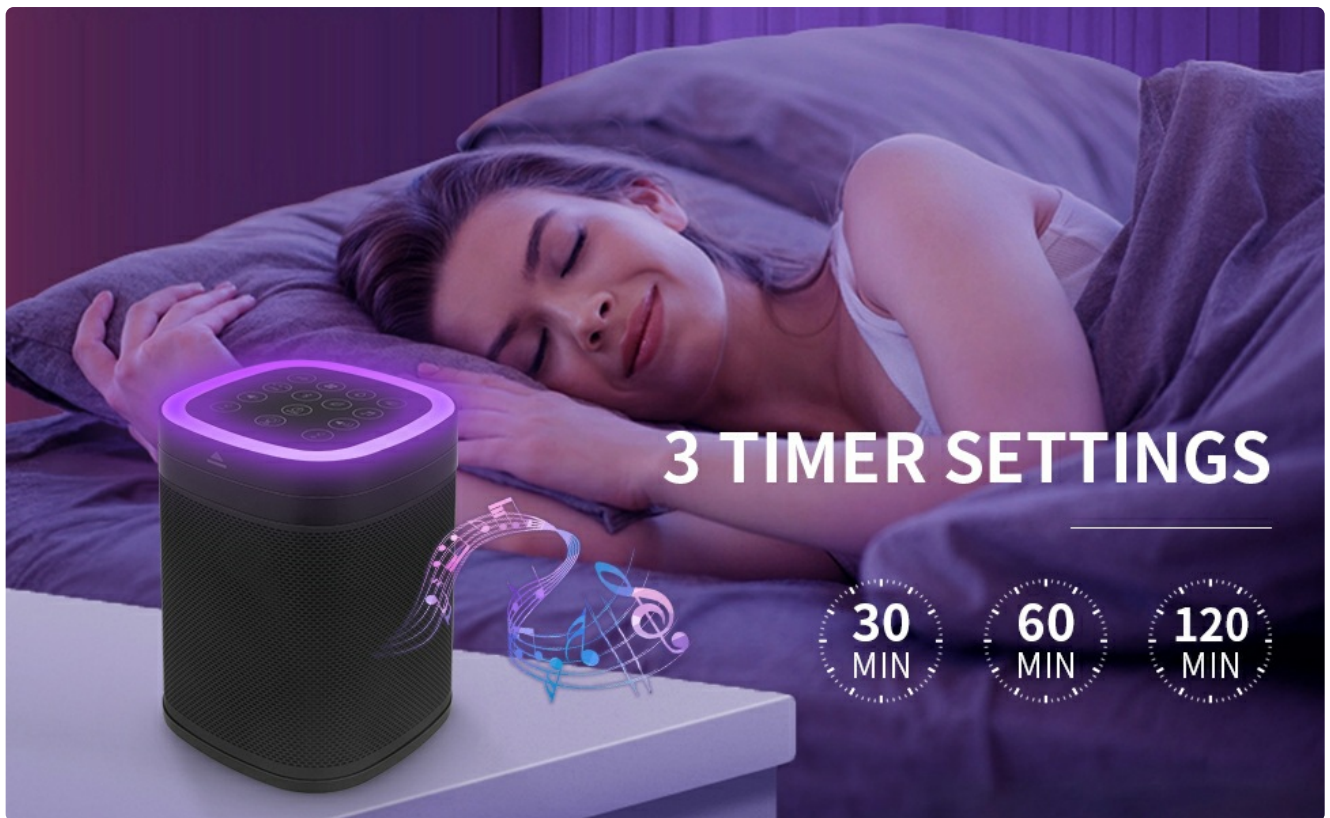


Image: Visual representation of the 70 soothing sounds categorized into White Noise, Fan, Water, Zen, Nature, and Other.

- Press the sound category buttons (1, 2, 3, 4, 7, 8) on the top panel to cycle through the available sounds within each category.
- To turn off the sound, press and hold the Sound switch/Off switch (10) for 1-2 seconds.

Volume Adjustment

- Use the Volume - (9) button to decrease the sound volume.
- Use the Volume + (11) button to increase the sound volume.
- Press and hold either volume button for faster adjustment.

Light Control

The device features an RGB colorful light show and a warm white LED lamp.

3.7V 2200 MAH LITHIUM-ION BATTERY.

The battery run time is approximately 45-50 hours at 50% volume level after fully charged, long enough for any outdoor activities , great for home use , camping ,party and so on .



Image: The speaker illuminated with different RGB colors, highlighting its night light feature.

- To activate the LED ball lamp (17), open the lid (16).
- To change the RGB light colors, press the Panel light transfer switch (12).
- To adjust the brightness of the light, use the Decrease brightness (-) (13) and Increase brightness (+) (14) buttons.
- The light can be used independently of the sound machine function.

Timer Settings

Image: The speaker with an illuminated top panel, showing icons for 30, 60, and 120-minute timer settings.

- Press the Sleep Timer button (6) to cycle through the available timer options: 30 minutes, 60 minutes, 120 minutes, or continuous play.
- When a timer is set, the sound will gradually fade out before turning off automatically.

Bluetooth Pairing



Compatible Apple & Android

Bluetooth 5.2-Seamless connection



Image: The speaker wirelessly connected to a smartphone, playing music via Bluetooth 5.2.

- Press the Bluetooth button (5) to activate Bluetooth pairing mode. The Bluetooth indicator light will blink.
- On your mobile device, go to Bluetooth settings and search for available devices.
- Select 'H-440-BT' (or similar) from the list to connect.
- Once successfully paired, the Bluetooth indicator light will remain solid.

CHARGING

Powered by lithium-ion battery

Be easy to carry about, great for travel

CHARGER TIME
3-4H

RUN TIME
30H

BATTERY
2200
mAh



USB-C



Image: The speaker being charged via its Type-C USB port, with charging time and battery life details.

The device has a built-in 3.7V 2200 mAh rechargeable battery.

- Connect the provided Type-C USB charging cable (22) to the Type-C charging interface (20) on the back of the device.
- Plug the other end of the USB cable into a compatible USB power adapter (not included).
- The battery charger indicator light (19) will illuminate during charging.
- A full charge takes approximately 3.5-4.5 hours.
- The battery provides approximately 45-50 hours of playtime at 50% volume level after being fully charged.

SAFETY INFORMATION

Please read and follow all safety instructions to prevent injury or damage to the device:

- **CAUTION:** To prevent electrical shock, do not operate the product while it is plugged in and in contact with water.
- Keep the product and its power cord out of the reach of children. This product is not intended for use by children.
- Always follow the instructions provided in the user manual for safe operation.

- To minimize noise exposure, do not use the product at high volumes for extended periods.

SPECIFICATIONS

Feature	Detail
Product Dimensions	4.76 x 4.76 x 6.61 inches; 2.27 Pounds
Item Model Number	B440-Black
Batteries	1 Lithium Ion batteries required. (included)
Manufacturer	BIGMONAT
Brand	BIGMONAT
Material	Plastic
Power Source	Battery Powered
Item Depth	4.76 inches

TROUBLESHOOTING

If you encounter any issues with your device, please refer to the following common solutions:

- **Device does not power on:** Ensure the main power switch (21) is in the 'ON' position and the battery is sufficiently charged. Connect to a power source using the Type-C USB cable (22) if needed.
- **Bluetooth pairing fails:** Ensure the device is in Bluetooth pairing mode (Bluetooth indicator light (5) blinking) and within range of your mobile device. Try restarting both the speaker and your mobile device.
- **No sound or low volume:** Check the volume levels on both the speaker (9, 11) and your connected mobile device. Ensure the sound is not muted.
- **Light not working:** Ensure the lid (16) is open for the LED ball lamp (17) and check the brightness settings (13, 14). Press the Panel light transfer switch (12) to cycle through light modes.
- For any other issues, please refer to the full user manual or contact customer support.

WARRANTY AND SUPPORT

For detailed warranty information, product registration, or to access customer support, please refer to the contact details provided in your product packaging or visit the official BIGMONAT website. Keep your purchase receipt for warranty claims.

Video: An overview of the BIGMONAT 3-in-1 Bluetooth Speaker, highlighting its sound, LED night light, and features.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question