

Tefal EY821

Tefal Easy Fry EY821 Far-Infrared Air Fryer Instruction Manual

Model: EY821 | Capacity: 6 Liters

1. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

2. PRODUCT OVERVIEW

The Tefal Easy Fry EY821 is a Far-Infrared Air Fryer designed for healthy cooking with minimal oil. It features a digital touch screen, a visible cooking window, and 12 pre-set programs.



Image 1: Front view of the Tefal Easy Fry EY821 Air Fryer, showcasing the digital control panel, handle, and visible cooking window with food inside.

Key Components:

- **Digital Touch Screen:** For selecting programs, adjusting temperature, and setting time.
- **Visible Window:** Allows monitoring of cooking progress without opening the drawer.
- **Cooking Basket/Drawer:** Removable for easy loading, unloading, and cleaning.
- **Air Inlet/Outlet:** Ensures proper air circulation for even cooking.
- **Power Cord:** For connecting to an electrical outlet.



Image 2: The Tefal Easy Fry EY821 Air Fryer positioned on a kitchen counter next to a cooked chicken and fries, illustrating its use in a home environment.

3. BEFORE FIRST USE (SETUP)

1. **Unpack:** Carefully remove the air fryer and all accessories from the packaging. Retain packaging for future storage or transport if needed.
2. **Clean:** Wash the cooking basket and any removable accessories with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely. Wipe the interior and exterior of the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface. Ensure there is adequate space (at least 10 cm) around the appliance for proper air circulation. Do not place it directly against a wall or under cabinets.
4. **Initial Run (Optional):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 180°C (350°F) to eliminate any manufacturing odors. A slight smell or smoke may occur, which is normal. Ensure the area is well-ventilated.

4. OPERATING INSTRUCTIONS

4.1 Powering On and Off

- Plug the power cord into a grounded electrical outlet. The digital display will illuminate.
- Press the power button (usually indicated by an icon) to turn the appliance on.
- To turn off, press and hold the power button until the display turns off. The appliance also features an automatic shut-off function.

4.2 Preparing Food for Cooking

- Place food items into the cooking basket. Do not overfill the basket to allow for proper air circulation.
- For best results, some foods may benefit from a light coating of oil.

- Slide the cooking basket firmly back into the main unit until it clicks into place.

4.3 Manual Cooking Mode

1. With the appliance on, use the temperature control buttons (usually '+' and '-') to set the desired cooking temperature. The temperature range is typically between 80°C and 200°C.
2. Use the time control buttons (usually '+' and '-') to set the desired cooking time. The timer can typically be set from 1 to 60 minutes.
3. Press the start/pause button to begin cooking. The appliance will start heating and the timer will count down.
4. During cooking, you can use the visible window to monitor the food. If necessary, pull out the basket to shake or turn food. The appliance will pause automatically and resume when the basket is reinserted.
5. Once the timer reaches zero, the appliance will beep and automatically shut off. Carefully remove the basket and transfer the cooked food.

5. COOKING PROGRAMS

The Tefal Easy Fry EY821 features 12 pre-set cooking programs for various food types. These programs automatically adjust temperature and time for optimal results.

Using Pre-set Programs:

1. With the appliance on, press the program selection button (often an icon representing different foods or a 'Menu' button) to cycle through the available programs.
2. Once the desired program is selected, the display will show the pre-set temperature and time. These can often be adjusted manually if needed.
3. Press the start/pause button to begin the program.
4. Refer to the recipe book or the appliance's digital display for specific program details and recommended food quantities.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer. Always unplug the appliance and allow it to cool completely before cleaning.

6.1 Cleaning the Cooking Basket and Accessories

- The cooking basket and any removable accessories are generally dishwasher-safe. Alternatively, wash them with hot water, dish soap, and a non-abrasive sponge.
- For stubborn food residue, soak the basket in hot water with dish soap for about 10-15 minutes before cleaning.
- Ensure all parts are thoroughly dry before reassembling or storing.

6.2 Cleaning the Main Unit

- Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads, as this may damage the stain-resistant surface.
- Clean the interior of the appliance with a damp cloth. If necessary, use a soft brush to remove food residue from the heating element, ensuring the appliance is completely cool and unplugged.
- Never immerse the main unit in water or any other liquid.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; power button not pressed.	Ensure the power cord is securely plugged into a working outlet. Press the power button.
Food is not cooked evenly.	Basket is overfilled; food not shaken/turned; incorrect temperature/time.	Do not overfill the basket. Shake or turn food halfway through cooking. Adjust temperature and time as needed.
Food is not crispy.	Too much moisture in food; not enough oil (for some foods); incorrect temperature/time.	Pat food dry before cooking. Lightly coat with oil if desired. Increase cooking time or temperature slightly.
White smoke coming from appliance.	Grease residue from previous use; high-fat food cooking.	Clean the basket and interior thoroughly. This is normal for high-fat foods; ensure proper ventilation. If smoke is black, unplug immediately.

8. SPECIFICATIONS

- **Model:** EY821
- **Brand:** Tefal
- **Type:** Far-Infrared Air Fryer
- **Capacity:** 6 Liters
- **Power:** 1550 Watts (1550-1835W range)
- **Product Dimensions:** 36.4D x 25.9W x 32.6H centimetres
- **Item Weight:** 4.7 Kilograms
- **Material:** Aluminium
- **Special Features:** Automatic Shut-Off, Stain Resistant, Temperature Control, Timer, Digital Touch Screen, Visible Window, 12 Programs
- **Recommended Uses:** Bake, Broil, Defrost, Reheat, Roast

9. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the warranty card included with your purchase or visit the official Tefal website. Keep your proof of purchase for any warranty claims.

For further assistance, you may contact Tefal customer service through their official channels. Contact details are typically available on the brand's website or in the product packaging.

[Visit the Official Tefal Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question