

[manuals.plus](#) /› [PERLESMITH](#) /› [PERLESMITH TV Stand with Power Outlet, Tall TV Stand for 32-75 inch TVs up to 110 lbs, Swivel Floor TV Stand with Tilt, AV Shelf, MDF Base, Height Adjustable TV Mount Stand, Max VESA 600x400mm, PSFS06 User Manual](#)

PERLESMITH PSFS06

PERLESMITH TV Stand with Power Outlet User Manual

Model: PSFS06

1. PRODUCT OVERVIEW

The PERLESMITH PSFS06 TV Stand is a versatile floor-standing solution designed to support televisions ranging from 32 to 75 inches and weighing up to 110 lbs. It features a swivel function, tilt adjustment, and multiple height configurations for optimal viewing. An integrated power strip with AC outlets and USB ports provides convenient power access for your devices. The stand includes an AV shelf and a sturdy MDF base for stability and additional storage.



Image 1.1: Overview of the PERLESMITH PSFS06 TV Stand, showcasing its design and integrated power outlet.

2. SAFETY INFORMATION

Please read and understand all instructions before assembly and use. Failure to follow these instructions may result in property damage, serious injury, or death. If you have any questions, contact customer support.

- **Weight Capacity:** Do not exceed the maximum weight capacity of 110 lbs (50 kg) for the TV mount and 11 lbs (5 kg) for the AV shelf. Overloading can cause instability and potential injury.
- **TV Compatibility:** Ensure your TV's VESA pattern and size are compatible with this stand (32"-75" TVs, VESA 100x100mm to 600x400mm).
- **Electrical Safety:** The integrated power strip is rated for 120V/12A (AC outlets) and 5V/2.1A (USB ports). Do not overload the power strip. Ensure the power cord is not pinched or damaged.
- **Stability:** Always place the TV stand on a flat, stable, and level surface. Do not allow children to climb on the stand or TV.
- **Assembly:** Assemble the product according to the instructions. Do not use power tools for assembly unless specifically instructed, as overtightening screws may cause damage.
- **Maintenance:** Regularly check all connections and fasteners to ensure they remain secure.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, contact PERLESMITH customer service.



Image 3.1: Detailed diagram showing all components and hardware included in the package for the PSFS06 TV Stand.

4. ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your PERLESMITH PSFS06 TV Stand. It is recommended to have two people for certain steps, especially when mounting the TV.

1. **Step 1: Assemble the Base.** Attach the main column to the MDF base using the provided screws and tools. Ensure the base is oriented correctly for the power strip cable routing.



Image 4.1: Assembly of the base and main column.

2. **Step 2: Install the Power Strip.** Carefully insert the integrated power strip into the designated slot on the main column. Route the power cable through the cable management clips.

Ergonomic Comfort

12 Height Configurations

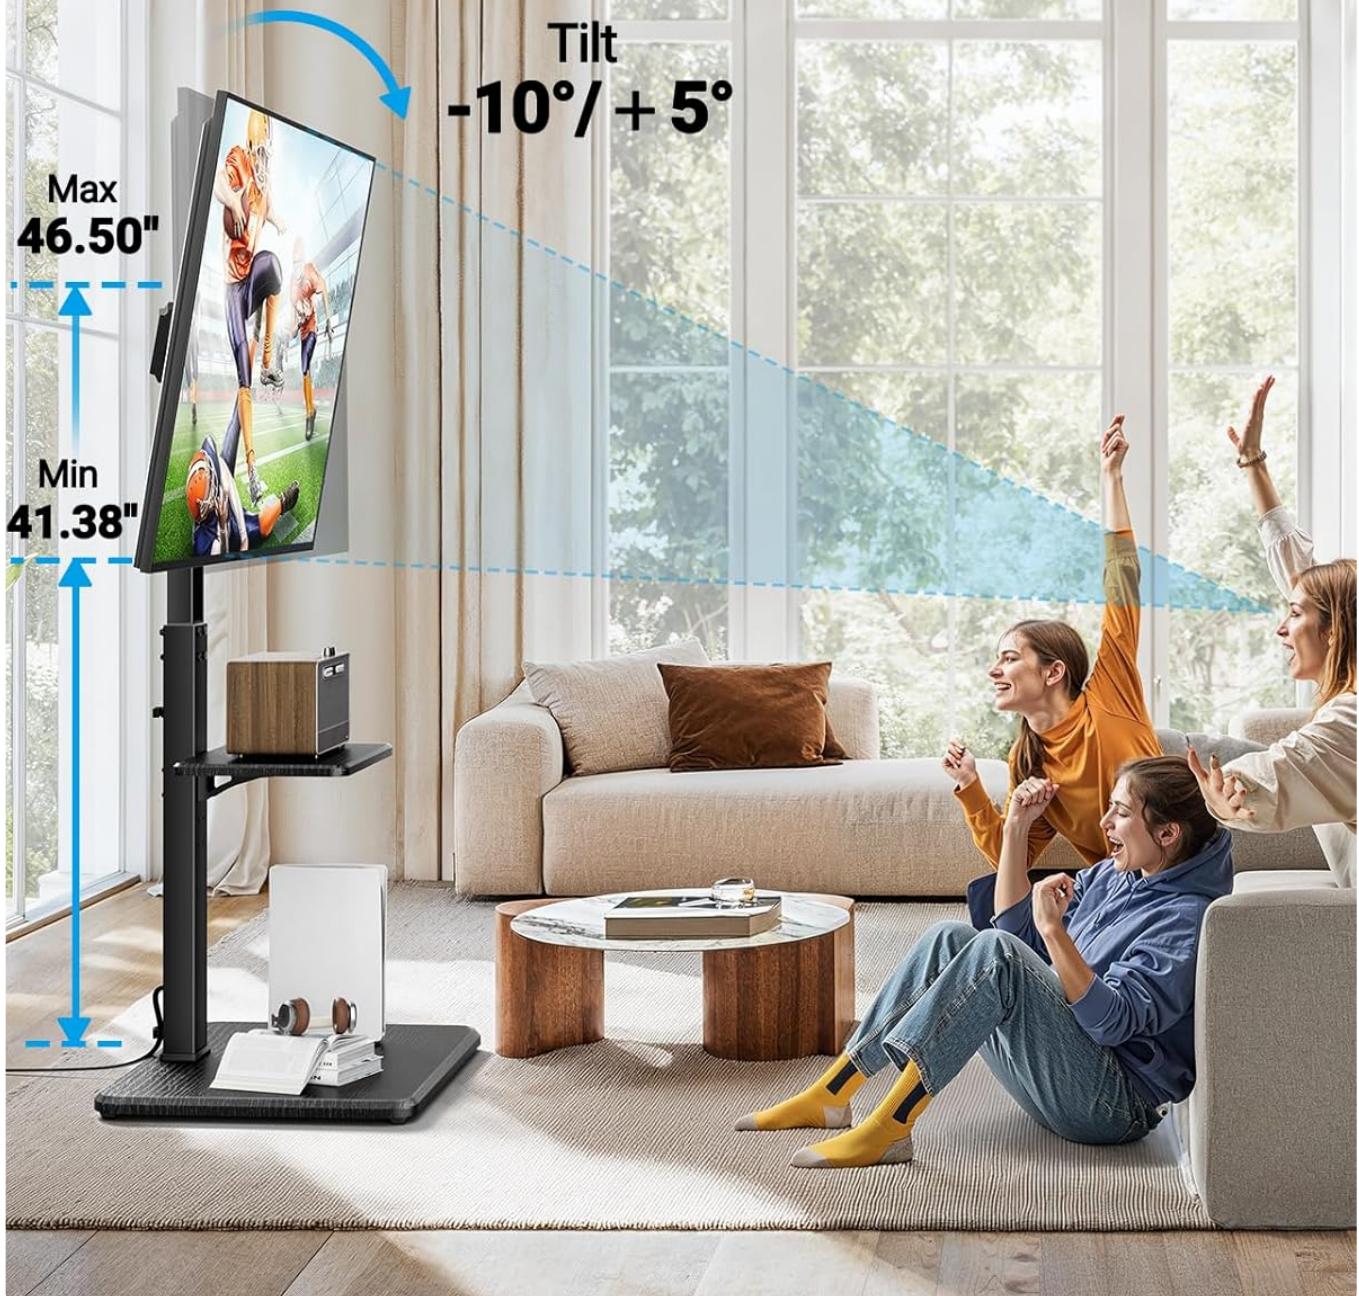


Image 4.2: Installation of the integrated power strip.

3. **Step 3: Attach the AV Shelf.** Secure the AV shelf to the main column at your desired height using the provided hardware. The shelf can be adjusted to three different heights.

Check Compatibility Before Purchase

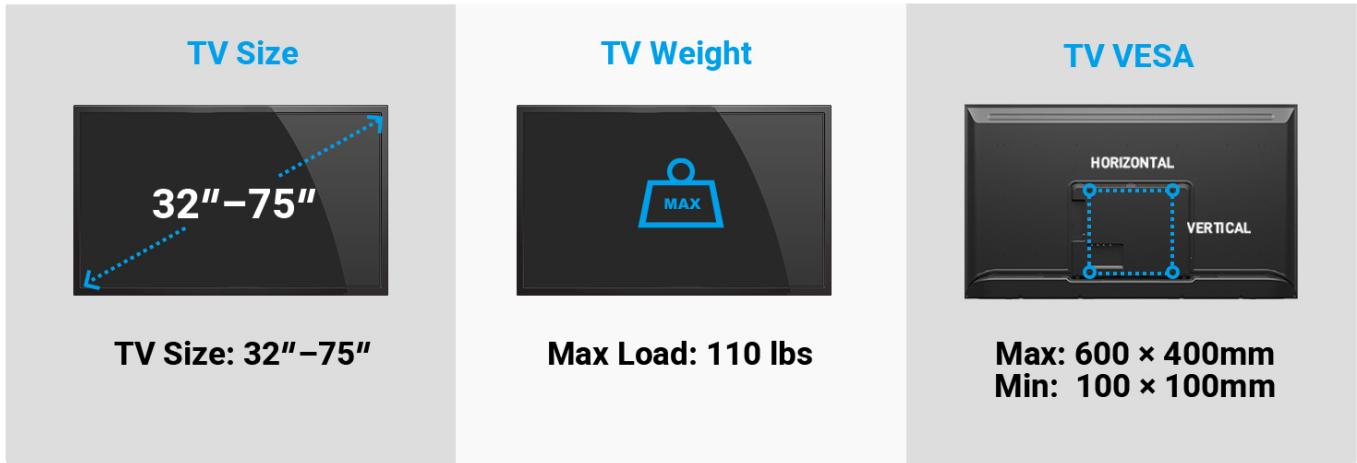


Image 4.3: Attaching the adjustable AV shelf.

4. **Step 4: Assemble the TV Plate.** Attach the TV plate to the top of the main column. This plate allows for height adjustments of the TV.

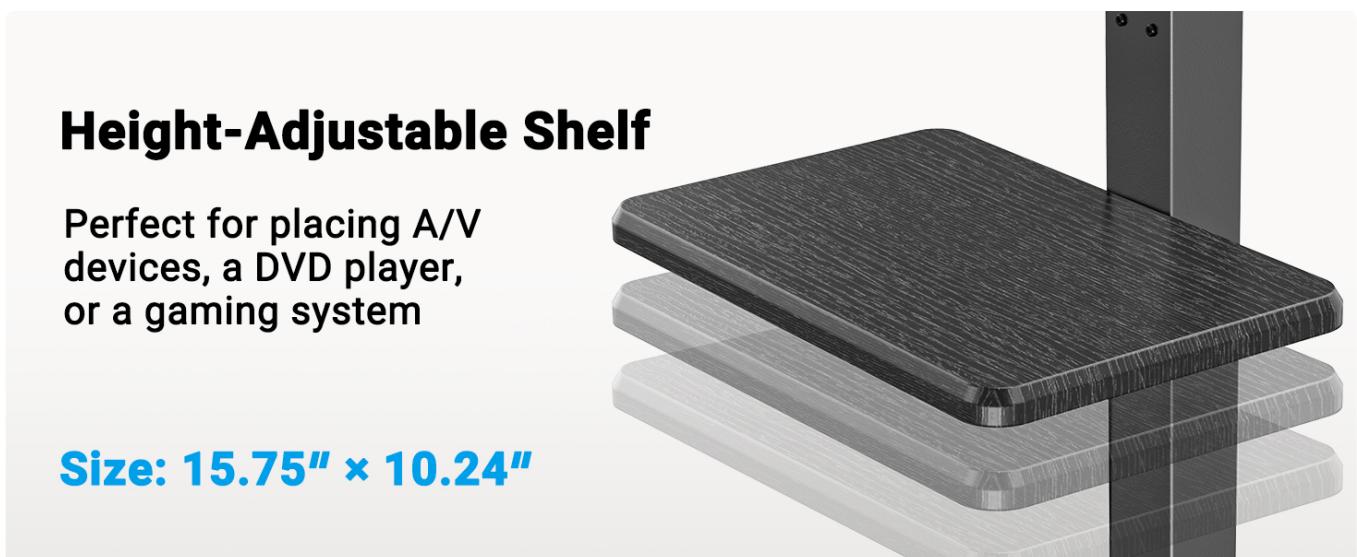


Image 4.4: Securing the TV plate.

5. **Step 5: Attach TV Brackets to TV.** Identify the correct screws and spacers for your TV's VESA mounting holes. Attach the two vertical TV brackets to the back of your television. Ensure they are level and securely fastened.



Image 4.5: Attaching TV brackets to the television.

6. Step 6: Mount TV to Stand. With assistance, carefully lift the television and hook the TV brackets onto the TV plate on the stand. Ensure the TV is centered and securely seated. Engage the security locks on the brackets to prevent accidental dislodgement.

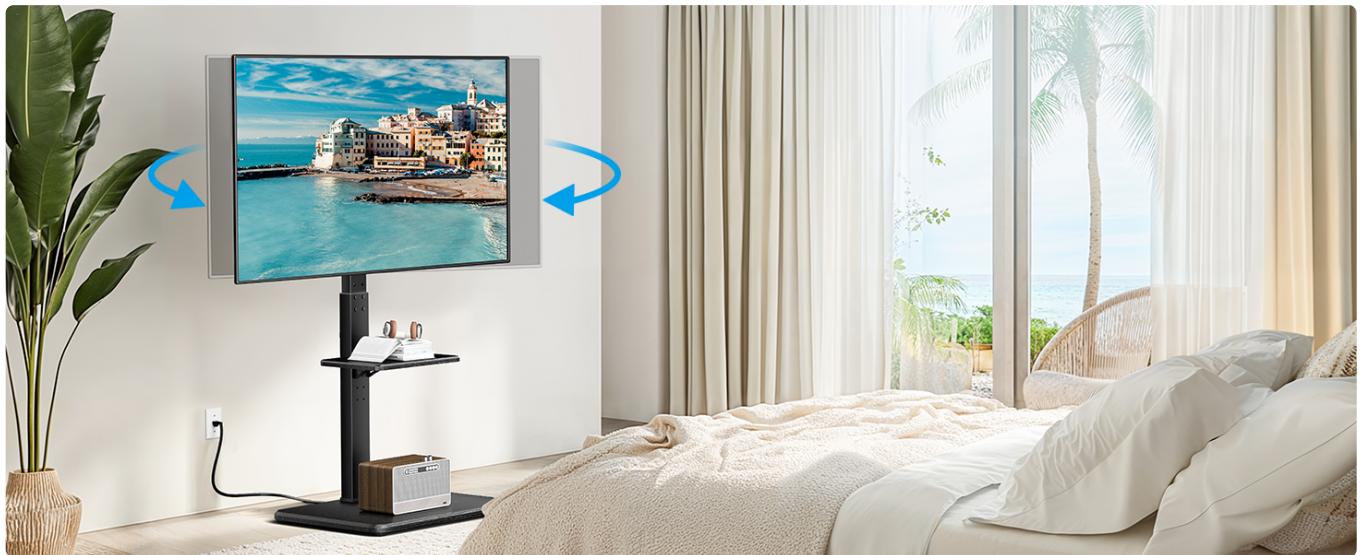


Image 4.6: Mounting the television onto the stand.

5. OPERATING INSTRUCTIONS

5.1 Swivel Function

The TV stand allows for a 70° swivel range ($\pm 35^\circ$ left or right) to optimize your viewing angle from various positions in the room. Gently rotate the television screen to the desired direction.

Customize Your Viewing Angle



Swivel:
 $\pm 35^\circ$

Image 5.1: Demonstrating the swivel capability of the TV stand.

5.2 Height and Tilt Adjustment

The stand offers 12 height configurations, allowing you to position your TV between 41.38 inches and 46.5 inches (from floor to center of TV). The TV mount also features a tilt range of $+5^\circ$ to -10° to reduce glare and improve viewing comfort.

- **Height Adjustment:** Adjust the height by repositioning the TV plate on the main column or by selecting different bracket hook heights on the TV brackets. Refer to the assembly instructions for detailed steps.

- **Tilt Adjustment:** Loosen the tilt adjustment knobs on the TV plate, adjust the screen to the desired angle, and then securely tighten the knobs.



Image 5.2: Visual representation of height and tilt adjustments.

5.3 Using the Integrated Power Outlet

The stand includes a built-in power strip with 3 AC outlets and 2 USB ports. Connect the stand's 6.5 ft power cord to a

wall outlet. You can then plug in your TV, media players, gaming consoles, or charge mobile devices directly from the stand.



Image 5.3: Detail of the integrated power strip.

6. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your TV stand.

- **Cleaning:** Wipe the stand with a soft, dry cloth. For stubborn marks, a slightly damp cloth can be used, followed by immediate drying. Avoid abrasive cleaners or solvents.
- **Inspection:** Periodically check all screws and fasteners to ensure they are tight and secure. Over time, vibrations or movement can cause them to loosen.
- **Cable Management:** Ensure cables are neatly routed through the cable management clips to prevent tripping hazards and maintain a tidy appearance.

Stable Support



Wipes Clean



More Space



Strong & Durable

Image 6.1: The MDF base and shelf are designed for easy cleaning and stable support.

7. TROUBLESHOOTING

If you encounter issues with your TV stand, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
TV stand is wobbly or unstable.	Loose fasteners; uneven floor; overloaded.	Ensure all screws are tightened. Place the stand on a level surface. Do not exceed weight capacity.
TV does not swivel smoothly.	Dust or debris in swivel mechanism; overtightened components.	Clean the swivel area. Check that no components are overtightened restricting movement.
Power outlets or USB ports not working.	Stand's power cord not plugged in; wall outlet issue; overloaded power strip.	Ensure the stand's power cord is securely plugged into a working wall outlet. Check the wall outlet with another device. Reduce the number of devices plugged into the power strip.
TV cannot be mounted (VESA/size issue).	Incompatible VESA pattern or TV size/weight.	Verify your TV's VESA pattern (100x100mm to 600x400mm) and weight (max 110 lbs) against the stand's specifications.



Security Locks



Cable Management



Anti-Slip Pads

Image 7.1: Features like security locks and cable management contribute to stability and ease of use.

8. SPECIFICATIONS

- **Model:** PSFS06
- **Brand:** PERLESMITH

- **Material:** Metal, MDF
- **Color:** Black
- **Mounting Type:** Floor Mount
- **Movement Type:** Swivel, Tilt
- **Compatible TV Sizes:** 32 - 75 inches
- **Maximum TV Weight Capacity:** 110 lbs (50 kg)
- **VESA Compatibility:** 100x100mm to 600x400mm
- **Height Adjustment:** 12 configurations, from 41.38" to 46.5" (floor to TV center)
- **Swivel Range:** ±35° (70° total)
- **Tilt Range:** +5° / -10°
- **AV Shelf Dimensions:** 15.75" x 10.24" (40cm x 26cm)
- **AV Shelf Weight Capacity:** 11 lbs (5 kg)
- **Base Dimensions:** 21.65" x 15.75" (55cm x 40cm)
- **Integrated Power Strip:** 3 AC Outlets (120V/12A), 2 USB Ports (5V/2.1A)
- **Power Cord Length:** 6.5 ft (2 meters)

Wide Compatibility



Max Load

110 LBS

VESA Patterns

600 × 400mm
600 × 200mm
400 × 400mm
400 × 300mm
300 × 300mm
300 × 200mm
200 × 300mm
200 × 200mm
200 × 100mm
100 × 100mm

Image 8.1: Compatibility details for TV size, weight, and VESA patterns.

9. WARRANTY AND SUPPORT

PERLESMITH products are designed for durability and performance. For warranty information, technical support, or assistance with parts, please contact PERLESMITH customer service through the retailer's platform or the official PERLESMITH website. Please have your model number (PSFS06) and purchase date available when contacting support.

© 2024 PERLESMITH. All rights reserved.