

[manuals.plus](#) /

› [TANLANIN](#) /

› [TANLANIN TE-108D Portable Bluetooth Vinyl Record Player Instruction Manual](#)

TANLANIN TE-108D

TANLANIN TE-108D Portable Bluetooth Vinyl Record Player Instruction Manual

Model: TE-108D

INTRODUCTION

Thank you for choosing the TANLANIN TE-108D Portable Bluetooth Vinyl Record Player. This manual provides essential information for the safe and efficient operation of your new record player. Please read it thoroughly before use and retain it for future reference.



Image: The TANLANIN TE-108D record player, showcasing its compact design and various features like 3-speed drive, bass & treble control, RCA output, vibration damping, and AUX/headphone jack.

WHAT'S IN THE Box

Ensure all items are present and in good condition upon unboxing:

- Turntable
- 45 RPM Adapter
- Power Adaptor
- Slip mat
- Extra Stylus Needle

SETUP

1. Initial Placement

Place the record player on a stable, flat surface away from direct sunlight, heat sources, and excessive dust or vibrations. The unit features four isolating feet to minimize vibration.

2. Power Connection

Connect the provided Power Adaptor to the DC 5V input port on the rear of the record player. Plug the adaptor into a suitable wall outlet.

Your browser does not support the video tag.

Video: A demonstration of the TANLANIN TE-108D record player's features, including power connection, record playback, and Bluetooth pairing. This video highlights the ease of use and various functionalities.

3. Turntable Preparation

Carefully remove any protective packaging from the turntable platter and tonearm. Place the slip mat on the platter.

OPERATING INSTRUCTIONS

1. Playing a Vinyl Record

1. Open the lid of the record player.
2. Place a vinyl record on the turntable platter. If playing a 45 RPM record, use the included 45 RPM adapter.
3. Select the appropriate speed (33, 45, or 78 RPM) using the speed selector switch.
4. Unlock the tonearm clip.
5. Gently lift the tonearm using the cueing lever.
6. Position the tonearm over the desired track of the record.
7. Lower the tonearm slowly onto the record using the cueing lever. The platter will begin to spin.
8. Adjust the volume using the VOL knob.
9. At the end of the record, the auto-stop function will automatically stop the platter. If auto-stop is off, manually lift the tonearm and return it to its rest.

2. Bluetooth Playback

Stream music wirelessly from your Bluetooth-enabled device:

1. Turn on the record player. The indicator light will glow blue, indicating Bluetooth pairing mode.

2. Enable Bluetooth on your smartphone or other device.
3. Search for "BLTD" in your device's Bluetooth settings and select it to pair.
4. Once paired, the indicator light will remain solid blue.
5. Play music from your device, and it will stream through the record player's built-in speakers.

3. AUX Input

Connect external audio devices via the AUX input:

1. Connect a 3.5mm audio cable (not included) from your external device (e.g., MP3 player, smartphone) to the AUX input jack on the record player.
2. The record player will automatically switch to AUX mode.
3. Adjust the volume on both your external device and the record player.

4. RCA Output

Connect the record player to external speakers or an amplifier for enhanced sound:

1. Connect RCA cables (not included) from the RCA output ports on the rear of the record player to the corresponding input ports on your external audio system.
2. Ensure your external audio system is set to the correct input.
3. Adjust volume and tone on both the record player and your external system.



AUX INPUT

Easily play audio from non-Bluetooth devices.



RCA LINE OUT

Connect speaker system or sound bar for louder sound.



HEADPHONE JACK

Enjoy private listening and alone time.

Image: Close-up of the TANLANIN TE-108D record player's side panel, illustrating the AUX input, RCA line out, and headphone jack for versatile connectivity options.

5. Headphone Listening

For private listening, plug headphones into the headphone jack on the front panel.

6. Tone Control

Use the BASS and TREBLE knobs to adjust the sound output to your preference.

MAINTENANCE

1. Cleaning

Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents. For the stylus, use a soft brush and gently brush from back to front.

2. Stylus Replacement

The stylus (needle) is a consumable part and will wear out over time. Replace it when you notice a decrease in sound quality or skipping. An extra stylus needle is included. Replacement needles are generally universal

types available from audio retailers.

TROUBLESHOOTING

- No Power:** Ensure the power adaptor is securely connected to both the unit and the wall outlet. Check if the power outlet is functional.
- No Sound:** Verify the volume knob is turned up. If using external speakers, check their connections and power. If using Bluetooth, ensure the device is properly paired and playing audio.
- Skipping Records:** Ensure the record player is on a stable, level surface. Clean the record and the stylus. The belt-driven turntable with spring suspension is designed to reduce vibration and skipping.
- Bluetooth Not Connecting:** Ensure the record player is in Bluetooth pairing mode (blue indicator light). Turn off and on Bluetooth on your device, then try pairing again. Make sure no other devices are currently connected to the record player via Bluetooth.
- Poor Sound Quality:** Check the condition of the stylus; it may need replacement. Ensure records are clean. Adjust Bass and Treble controls.

SPECIFICATIONS

Feature	Description
Product Dimensions	14 x 10 x 5 inches
Item Weight	7.06 pounds
Item Model Number	TE-108D
Maximum Rotational Speed	78 RPM
Included Components	45 RPM Adapter, Extra Stylus Needle, Power Adaptor, Slip mat, Turntable
Special Features	Adjustable Speed, Built-In Speaker, Built-In Bluetooth Receiver, Treble & Bass Control
Material	Engineered Wood
Style	Retro
Color	Alligator Pattern (Black & Green)
Compatible Devices	Headphone, MP3 Player, Smartphone, Tablet
Motor Type	AC Motor

WARRANTY AND SUPPORT

Warranty Information

For detailed warranty information, please refer to the documentation provided with your purchase or contact TANLANIN customer service. Keep your proof of purchase for warranty claims.

Customer Support

If you encounter any issues or have questions regarding your TANLANIN TE-108D record player, please contact TANLANIN customer support through the official website or the contact information provided in your product packaging.