

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Megachef](#) /

› [MegaChef 22 Quart Electric Roaster Oven User Manual MG-RST77](#)

Megachef MG-RST77

MegaChef 22 Quart Electric Roaster Oven User Manual

Model: MG-RST77

1. INTRODUCTION

Thank you for choosing the MegaChef 22 Quart Electric Roaster Oven. This appliance is designed to simplify your cooking experience, offering versatile options for roasting, baking, and slow cooking. Its generous capacity and thoughtful features make it ideal for preparing meals for family gatherings and special occasions.

Please read this manual thoroughly before operating the appliance to ensure safe and efficient use. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs. Always use oven mitts or pot holders when handling hot materials.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PRODUCT FEATURES

- **Large 22 Quart Capacity:** Features a large 22 Quart Capacity Removable Non-Stick Enameled Steel Roasting Pan, providing ample room for large meals.
- **Adjustable Temperature Control:** Adjustable 150 to 450 Degree Temperature Range for Roasting, Baking, and Cooking for different cuts of meats, roasts, veggies, and hardy stews.
- **Efficient Cooking:** An alternative to using a conventional oven, this countertop roaster heats up quickly and can cut cooking time.
- **Convenient Lid Holder:** Includes a brilliant and useful lid holder designed directly into the handles. Cleverly cut grooves assist with holding your lid, keeping it close and keeping your counters clean of spills and clutter.
- **Removable Roasting Rack:** Included removable roasting rack allowing your drips to collect at the bottom of the roasting pan, cooking your meals evenly and helping you remove your preferred cut of meat without it falling apart.
- **Self-Basting Lid:** Continuously recirculates moisture, ensuring meats and dishes remain tender and flavorful, reducing the need for manual basting.

4. PRODUCT OVERVIEW



Figure 1: MegaChef 22 Quart Electric Roaster Oven with a perfectly roasted turkey and vegetables.



Figure 2: The roaster oven disassembled, highlighting the removable inner pan and roasting rack for easy cleaning and use.



Figure 3: Front view of the roaster, displaying the temperature control knob and power indicator light.



Figure 4: The roaster with its lid open, demonstrating the convenient integrated lid holder on the side handle.

MegaChef



Figure 5: Detailed view of the control knob, showing temperature settings from 150°F to 450°F, including 'Keep Warm' and 'Defrost' options.



Figure 6: Close-up of the lid holder, illustrating how the lid securely rests on the handle to prevent drips and save counter space.

5. SETUP

1. **Unpack:** Carefully remove all packaging materials, including any protective films or inserts. Retain packaging for storage if desired.
2. **Clean:** Before first use, wash the removable roasting pan, roasting rack, and lid in warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.

- Assemble:** Place the main unit on a stable, heat-resistant surface. Insert the clean, dry removable roasting pan into the main unit. Place the roasting rack inside the roasting pan.
- Ventilation:** Ensure there is adequate space around the roaster oven for proper ventilation during operation.

6. OPERATING INSTRUCTIONS

6.1 General Operation

1. Prepare your food and place it on the roasting rack inside the removable pan.
2. Place the lid securely on the roaster oven.
3. Plug the power cord into a standard 120V AC electrical outlet.
4. Turn the temperature control knob to your desired setting (150°F to 450°F). The power indicator light will illuminate, indicating the unit is heating.
5. Once the desired temperature is reached, the indicator light may cycle on and off to maintain the temperature.
6. When cooking is complete, turn the control knob to "OFF" and unplug the unit.
7. Use oven mitts to carefully remove the lid, utilizing the integrated lid holder if desired.
8. Using the handles on the roasting rack, carefully lift the food out of the roaster.

6.2 Specific Settings

- Roast/Bake (150°F - 450°F):** Select the desired temperature for roasting meats, poultry, vegetables, or baking casseroles and desserts.
- Defrost:** This setting provides a gentle heat to safely defrost frozen items before cooking.
- Keep Warm:** After cooking, turn the knob to the "Keep Warm" setting to maintain food at a serving temperature without overcooking.

Your browser does not support the video tag.

Video 1: Demonstration of a roaster oven's versatility, showing preparation of various dishes including roasted vegetables, meat, and pasta. Note: This video features a similar product from a different brand (Suvivi) but illustrates general usage.

7. MAINTENANCE AND CLEANING

1. **Always unplug** the roaster oven and allow it to cool completely before cleaning.
2. **Removable Parts:** The removable roasting pan, roasting rack, and lid can be washed in warm, soapy water. These parts are non-stick for easy cleaning. Rinse thoroughly and dry completely.
3. **Exterior:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish. Never immerse the main unit in water or any other liquid.
4. **Storage:** Ensure all parts are clean and dry before storing. Store the roaster oven in a cool, dry place.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.

Problem	Possible Cause	Solution
Food not cooking evenly.	Incorrect temperature setting; overcrowding the pan.	Verify the temperature setting. Avoid overfilling the roasting pan to allow for proper heat circulation.
Lid does not fit properly.	Inner pan or rack not seated correctly.	Ensure the removable roasting pan and rack are correctly positioned within the main unit.

9. SPECIFICATIONS

Feature	Detail
Brand	Megachef
Model Name	MegaChef Electric Roasting Oven
Item Model Number	MG-RST77
Capacity	22 Quart
Color	Silver
Product Dimensions	14.5"D x 21"W x 9.5"H
Item Weight	18.06 pounds
Power Source	Electric
Temperature Range	150 to 450 Degrees Fahrenheit
Control Type	Knob Control
Special Feature	Adjustable Thermostat, Indicator Light, Large Capacity
Included Components	Roasting Rack
UPC	840191210037

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your product or visit the official Megachef website. Ensure you have your model number (MG-RST77) and proof of purchase available when contacting support.

For additional assistance, you may contact Megachef customer service.