



[Manuals.plus](#) /

> [Houselife](#) /

> Houselife Cordless Weed Trimmer and Leaf Blower Combo Instruction Manual

Houselife HL-LBST-001D

Houselife Cordless Weed Trimmer and Leaf Blower Combo Instruction Manual

Model: HL-LBST-001D

1. INTRODUCTION

Thank you for choosing the Houselife Cordless Weed Trimmer and Leaf Blower Combo. This versatile 3-in-1 tool is designed to simplify your lawn care, offering functions for trimming, edging, and blowing. Its lightweight and ergonomic design ensures comfortable and efficient operation for various outdoor tasks. This manual provides essential information for safe operation, assembly, maintenance, and troubleshooting.



Figure 1: Housetlife Cordless Weed Trimmer and Leaf Blower Combo.

2. IMPORTANT SAFETY INFORMATION

Always read and understand all instructions before operating this tool. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious personal injury.

General Safety Warnings:

- Always wear appropriate personal protective equipment (PPE), including eye protection, hearing protection, and sturdy footwear.
- Keep children, bystanders, and pets at least 50 feet (15 meters) away from the operating area.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or

dust.

- Avoid accidental starting. Ensure the switch is in the off-position before inserting battery pack, picking up or carrying the appliance.
- Use the appliance only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliances.
- Maintain tools with care. Keep cutting tools sharp and clean.
- Keep all parts of the body away from the cutting line. Do not attempt to remove cut material or hold material to be cut when lines are moving.
- Do not use the leaf blower near open flames or hot ashes.

Battery Compatibility Note:

This tool is designed to be compatible with DeWALT 20V MAX lithium-ion batteries (DCB200, DCB201, DCB203, DCB204, DCB205, DCB206, DCB207, DCB208, DCB210, DCB230, DCB240, etc.). **Battery is NOT included with this tool.** It is not compatible with DCBP034, DCBP520 batteries. Please confirm battery compatibility before purchase.



Figure 2: Trimmer showing compatibility with DeWALT 20V MAX batteries (battery not included).

3. SETUP AND ASSEMBLY

The HouseLife combo tool is designed for quick and easy assembly without the need for additional tools.

3.1. String Trimmer Assembly

1. **Attach Handle:** Secure the adjustable auxiliary handle to the main shaft. Ensure it is tightened firmly for stability.
2. **Connect Shaft Sections:** Align the two main shaft sections and push them together until they click securely into place.
3. **Attach Trimmer Head:** Connect the trimmer head assembly to the lower end of the shaft. Ensure the connection is firm and the locking mechanism is engaged.
4. **Insert Battery:** Slide a compatible DeWALT 20V MAX battery into the battery port on the handle until it clicks

into place.



Figure 3: The trimmer features adjustable handle and cutting angles for versatile use.

3.2. Leaf Blower Assembly

1. **Attach Nozzle:** Connect the detachable tapered nozzle to the main blower unit. Push and twist until it locks securely.
2. **Insert Battery:** Slide a compatible DeWALT 20V MAX battery into the battery port on the blower handle until it clicks into place.



Figure 4: The leaf blower is compatible with DeWALT 20V MAX batteries (battery not included).

4. OPERATING INSTRUCTIONS

4.1. Using the Cordless Weed Trimmer

The 3-in-1 design allows for versatile lawn care:

- **Trimmer:** Hold the trimmer with both hands, ensuring a comfortable grip. Press the safety lock-off button and then the trigger to start. Move the trimmer in a sweeping motion to cut grass and weeds.
- **Edger:** Rotate the trimmer head 180 degrees using the swivel lever to position the wheel for edging. Guide the wheel along the edge of sidewalks or driveways for clean lines.
- **Mower:** Adjust the pole and cutting angles to use the trimmer as a mini-mower for small, hard-to-reach areas or under benches.

The trimmer features an 8500 RPM motor and a 12-inch cutting swath. The 16.4ft auto-feed line ensures continuous

trimming without manual reloading. The upgraded copper motor provides quiet yet robust performance.



Figure 5: The trimmer can be used for trimming, edging, and mowing.

Houselife



AUTOMATIC LINE FEED

Figure 6: The automatic line feed system ensures continuous operation.

4.2. Using the Cordless Leaf Blower

The Houselife cordless leaf blower is designed for powerful and comfortable operation.

- **Starting the Blower:** Ensure the battery is securely inserted. Press the one-button control to start the blower.
- **Operation:** Direct the nozzle towards leaves, dust, and debris. The robust motor with axial fan technology delivers 400 CFM (Cubic Feet per Minute) and 130 MPH (Miles Per Hour) of airflow, making quick work of various outdoor debris.
- **Ergonomics:** The blower weighs just 3 lbs (without battery), minimizing fatigue during extended use. The anti-slip ergonomic handle provides a secure and comfortable grip.

130 MPH
FLOW SPEED

400 CFM
WIND SPEED



POWERFUL MOTOR

Figure 7: The leaf blower features a powerful motor for efficient clearing.

Houselife



LIGHTWEIGHT & CORDLESS

Lighter in hand, stronger in power

Figure 8: The lightweight design of the blower ensures easy handling.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Houselife combo tool.

- **Cleaning:** After each use, clean the tool with a damp cloth. Remove any grass clippings, dirt, or debris from the trimmer head and blower nozzle. Do not use harsh chemicals or abrasive cleaners.
- **String Replacement (Trimmer):** When the string line is depleted, replace it according to the instructions provided in the trimmer head manual (not included in this general manual). Ensure the correct diameter and type of string is used.
- **Battery Care:** Store batteries in a cool, dry place away from direct sunlight and extreme temperatures. Do not store batteries in a discharged state.
- **Storage:** The detachable design of both tools allows for compact storage. Disassemble the trimmer and blower into their main components for space-saving storage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Tool does not start.	Battery not inserted correctly or discharged.	Ensure battery is fully seated and charged.
Trimmer line not feeding automatically.	Line tangled or depleted.	Check and untangle line, or replace with new line.
Blower performance is weak.	Battery low or nozzle obstructed.	Charge battery fully. Clear any debris from the nozzle.
Excessive vibration or noise.	Loose parts or damaged cutting line/impeller.	Inspect all connections and components. Replace damaged parts. If problem persists, contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Houselife
Model Name	HL-LBST-001D
Power Source	Battery Powered (Battery Not Included)
Voltage	20 Volts
Item Weight	8.6 pounds (Combo)
Product Dimensions	12.8"L x 7.7"W x 17.3"H
Trimmer Cutting Swath	12 inches
Trimmer Motor Speed	8500 RPM
Blower Airflow	400 CFM
Blower Max Speed	130 MPH
Special Features	Portable, Lightweight, Instant Start, Compact Design

8. WARRANTY AND SUPPORT

Houselife provides a 1-year warranty for this product. For warranty claims, technical support, or any questions regarding your Cordless Weed Trimmer and Leaf Blower Combo, please contact Houselife customer service through the retailer's platform or visit the official Houselife website for contact information.

Please retain your proof of purchase for warranty validation.