

[manuals.plus](#) /› [CHEREEKI](#) /› [CHEREEKI Wireless Gamepad for PS-4 User Manual](#)

CHEREEKI STK-4006L

CHEREEKI Wireless Gamepad for PS-4

MODEL: STK-4006L**User Manual**

INTRODUCTION

Thank you for choosing the CHEREEKI Wireless Gamepad for PS-4. This controller is designed to enhance your gaming experience on PS-4, PS4 Slim, and PS4 Pro consoles, offering precise control, immersive feedback, and comfortable design. This manual provides detailed instructions on setting up, operating, maintaining, and troubleshooting your new gamepad.



Image: The CHREEKI Wireless Gamepad in white, showcasing its ergonomic design.

PRODUCT OVERVIEW

Familiarize yourself with the various components and buttons of your CHREEKI Wireless Gamepad.



Image: Detailed diagram of the CHEREEKI Wireless Gamepad, highlighting its various buttons and ports for easy identification.

Controller Components:

- **R1 Button:** Right shoulder button.
- **R2 Button:** Right trigger button.
- **L1 Button:** Left shoulder button.
- **L2 Button:** Left trigger button.
- **Light Bar:** Indicates controller status and player number.
- **Micro USB Port:** For charging and initial wired connection.
- **SHARE Button:** For sharing gameplay videos and screenshots.
- **OPTIONS Button:** Access in-game menus and options.
- **Directional Buttons (D-Pad):** For directional input.
- **Left Stick:** Analog stick for movement.
- **Home Button:** PS button, for turning on/off the console and accessing the PS menu.

- **Right Stick:** Analog stick for camera control or aiming.
- **Extension Port:** For compatible accessories.
- **Stereo Headset Jack:** For connecting a headset.

SETUP

1. Initial Connection and Pairing

The controller must be connected via USB cable for the first time to pair with your PS-4 console. This establishes the connection for future wireless use.

1. Ensure your PS-4 console is powered on.
2. Connect the Micro USB cable to the controller's Micro USB Port and the other end to a USB port on your PS-4 console.
3. Press the **Home Button** (PS button) on the controller. The light bar will flash and then glow steadily, indicating successful pairing.
4. Once paired, you can disconnect the USB cable to use the controller wirelessly.

2. Charging the Gamepad

The CHEREEKI Wireless Gamepad features a built-in 600 mAh rechargeable battery.

- Connect the controller to your PS-4 console or a standard USB charger using the Micro USB cable.
- The light bar will slowly pulse orange while charging.
- Charging typically takes 2-3 hours for a full charge.
- Once fully charged, the light bar will turn off.

Large Battery for Gamer

Charging Time



2 Hours

Play Time



7 Hours



Image: Illustration showing the controller's charging time of 2 hours and play time of 7 hours on a full charge.

3. Compatibility

This controller is compatible with PS-4, PS4 Slim, and PS4 Pro consoles.

Wide Compatibility



Image: Visual representation of the controller's wide compatibility with PS4, PS4 Slim, and PS4 Pro consoles.

OPERATING INSTRUCTIONS

1. Basic Controls

The gamepad features standard PS-4 button layouts for intuitive gameplay.

- Analog Sticks:** Use the Left Stick for character movement and the Right Stick for camera control or aiming.
- Directional Buttons (D-Pad):** For precise directional input in menus or specific game actions.
- Action Buttons (Triangle, Circle, Cross, Square):** Perform in-game actions as defined by the game.
- Shoulder and Trigger Buttons (L1, L2, R1, R2):** Used for various actions like shooting, aiming, or interacting.

2. Motion Sensor (Gyro) Control

The built-in 6-axis motion sensor allows for intuitive control by tilting and rotating the controller.

- In supported games, you can use motion control for actions like steering, aiming, or adjusting viewing angles.

- Experiment with tilting the controller to achieve faster turns, adjust viewing angles, or aim more accurately.

Gyro Motion Control

Built-in gyro motion sensor allows you control the game more freely. You can roll, pitch, yaw the controller to get movement and acceleration experience.



Faster turning



Adjust viewing angle



Aiming accurately



Image: Illustration demonstrating the Gyro Motion Control feature, allowing for faster turning, viewing angle adjustment, and accurate aiming.

3. Double Vibration Feedback

Experience immersive gameplay with the dual motor vibration feature, providing tactile feedback for in-game events.

- The controller will vibrate to simulate impacts, explosions, and other in-game sensations.
- Vibration intensity may vary based on game design.

Double Motor Vibration

Make you **FEEL IMMERSIVE** in the game



Image: Illustration of the Double Motor Vibration feature, showing the internal motors that provide immersive haptic feedback during gameplay.

4. Touchpad Functionality

The integrated touchpad allows for new ways to interact with games and navigate menus.

- Tap, swipe, or click the touchpad as required by specific games or system functions.

5. SHARE Button

The SHARE button allows you to easily share your gameplay moments.

- Press the **SHARE Button** to access the Share menu, where you can upload screenshots or video clips to social media, or start a broadcast.

6. Stereo Headset Jack

Connect your compatible 3.5mm headset to the Stereo Headset Jack for in-game audio and voice chat.

- Plug your headset into the port located at the bottom of the controller.
- Adjust audio settings via the PS-4 system menu.

7. Ergonomic Design

The controller is designed for comfort during extended gaming sessions.



Ergonomic Comfort Design

Fit the shape of the hand for more comfort
even for a long-time games



Image: Depiction of the controller's ergonomic design, showing how it comfortably fits the shape of the hand for prolonged use.

MAINTENANCE

Proper care will extend the life of your CHEREEKI Wireless Gamepad.

- **Cleaning:** Use a soft, dry cloth to wipe down the controller. For stubborn dirt, slightly dampen the cloth with water. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To maintain battery health, avoid fully discharging the controller frequently. If storing for a long period,

charge the battery to about 50% every few months.

- **Handling:** Avoid dropping the controller or exposing it to excessive force, which can damage internal components.

TROUBLESHOOTING

If you encounter issues with your gamepad, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Controller does not connect wirelessly or connection is unstable.	Not properly paired; too far from console; interference.	<ol style="list-style-type: none">1. Ensure initial wired pairing was successful.2. Re-pair the controller by connecting it with a USB cable and pressing the Home button.3. Ensure the controller is within 8 meters (approx. 26 feet) of the console.4. Minimize obstacles between the controller and console.
Controller does not charge or holds charge for a short time.	Faulty cable; power source issue; battery degradation.	<ol style="list-style-type: none">1. Try a different Micro USB cable.2. Try a different USB port on the console or a different USB wall adapter.3. Ensure the controller is fully charged (2-3 hours).4. If battery life significantly degrades over time, it may be due to normal wear.
Buttons are unresponsive or sticky.	Debris under buttons; physical damage.	<ol style="list-style-type: none">1. Gently clean around the buttons with a cotton swab slightly dampened with rubbing alcohol.2. Avoid spilling liquids on the controller.3. If a button is physically stuck or damaged, contact support.
No vibration feedback.	Vibration disabled in game/system settings; game does not support vibration.	<ol style="list-style-type: none">1. Check PS-4 system settings to ensure vibration is enabled.2. Verify that the game you are playing supports vibration feedback.

SPECIFICATIONS

Feature	Detail
Model Number	STK-4006L
Compatibility	PS-4, PS4 Slim, PS4 Pro
Connectivity	Wireless (Bluetooth), Wired (Micro USB)
Wireless Range	Up to 8 meters
Battery Type	Built-in Lithium-ion

Feature	Detail
Battery Capacity	600 mAh
Charging Time	Approx. 2-3 hours
Play Time	Up to 7 hours
Dimensions (L x W x H)	17.4 x 13 x 7.6 cm (approx. 6.85 x 5.12 x 2.99 inches)
Weight	210 grams (approx. 0.46 lbs)
Sensors	6-axis motion sensor (gyroscope, accelerometer)
Vibration	Dual motor vibration
Input/Output	Touchpad, Stereo Headset Jack, Extension Port

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official CHEREEKI website. Warranty terms and conditions may vary by region and retailer.

If you require technical support or have questions not covered in this manual, please contact the seller or CHEREEKI customer service through their official channels. Provide your model number (STK-4006L) and a detailed description of your issue for faster assistance.