

[Manuals.plus](#) /

› [Supfine](#) /

› Supfine 4-in-1 Evolving Tricycle SP-FINE-SLC Instruction Manual

Supfine SP-FINE-SLC

Supfine 4-in-1 Evolving Tricycle Instruction Manual

Model: SP-FINE-SLC

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the Supfine 4-in-1 Evolving Tricycle. This versatile tricycle is designed to adapt to your child's growth from approximately 9 months to 5 years of age, offering multiple modes of use to support their development and provide a safe, enjoyable riding experience. This manual provides essential information for assembly, operation, maintenance, and safety to ensure proper use of the product.



Image 1.1: The Supfine 4-in-1 Evolving Tricycle in use with a child.

2. SAFETY INFORMATION

Your child's safety is paramount. Please read and adhere to all safety warnings and instructions before assembling and using the tricycle.

- Always ensure the child is securely fastened with the 5-point safety harness.
- The tricycle must always be used under direct adult supervision. Never leave a child unattended on the tricycle.
- Ensure all locking mechanisms and fasteners are properly engaged before each use.
- Do not use the tricycle near stairs, steep inclines, swimming pools, or busy roads.
- Regularly inspect the tricycle for any loose parts, damage, or wear. Discontinue use if any issues are found.
- The maximum weight capacity for the child seat is not explicitly stated, but the tricycle is designed for children aged 9 months to 5 years.

3. PACKAGE CONTENTS

Before assembly, verify that all components are present in the package:

- Main Tricycle Frame
- Wheels (Front and Rear)
- Rotatable Seat
- Foldable Sunshade
- 5-point Safety Harness
- Push Handle (Telescopic)
- Handlebar
- Front Basket
- Rear Storage Basket
- Safety Bar/Guardrails
- Retractable Pedals

4. ASSEMBLY INSTRUCTIONS

Assembly is required for this tricycle. Please follow these general steps. Refer to the included diagrammatic instructions for detailed visual guidance.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface.
2. **Attach Wheels:** Securely attach the front and rear wheels to the main frame. Ensure they are firmly locked in place.
3. **Install Handlebar:** Insert the handlebar into the designated slot on the front fork and tighten any securing mechanisms.
4. **Mount Seat:** Attach the rotatable seat to the main frame. Ensure it clicks into place and can rotate smoothly.
5. **Attach Safety Bar and Harness:** Install the safety bar around the seat and connect the 5-point safety harness.
6. **Install Push Handle:** Insert the telescopic push handle into the rear of the tricycle frame. Adjust its height as needed.
7. **Attach Sunshade:** Mount the foldable sunshade to the seat's backrest or frame, ensuring it can be adjusted and folded.
8. **Install Pedals and Baskets:** Attach the retractable pedals to the front wheel assembly and secure the front and rear storage baskets.
9. **Final Check:** Before first use, double-check all connections, bolts, and locking mechanisms to ensure they are tight and secure.

5. OPERATING INSTRUCTIONS

5.1. 4-in-1 Evolving Modes

The tricycle transitions through different stages to accommodate your child's growth:

- **Parent-Controlled Push Tricycle (approx. 9-18 months):** The child is secured in the seat with the safety harness and safety bar. The parent controls direction and movement using the telescopic push handle. Pedals can be retracted or disengaged.
- **Assisted Tricycle (approx. 18-30 months):** The child can start to use the pedals, but the parent still assists with steering and pushing. The safety bar may be removed.
- **Training Tricycle (approx. 30-48 months):** The child steers and pedals independently, with the push handle still attached for occasional assistance or guidance.
- **Independent Tricycle (approx. 4-5 years):** The push handle and sunshade are removed, allowing the child to ride independently.

5.2. Adjusting the Push Handle

The telescopic push handle can be adjusted to a comfortable height for the parent. Locate the adjustment mechanism (usually a button or lever) on the handle, press it, and slide the handle to the desired height. Release the mechanism to lock it in place.

5.3. Adjusting the Sunshade

The 3-part enlarged sunshade can be adjusted to provide optimal protection from sun and wind. It can be set to different angles or folded back when not needed.

Adjustable sunshade

Adjust according to weather conditions to meet demand.



Third gear



Second gear



First gear

5.4. Rotating the Seat

The seat features a rotatable design, allowing it to face forward or backward. To rotate the seat, locate the rotation mechanism (often a lever or button underneath the seat), engage it, rotate the seat to the desired direction, and ensure it locks securely into position.



Image 5.2: Two-way rotatable seat.

5.5. Using Retractable Pedals

The pedals can be retracted or disengaged when the child is too young to pedal or when the parent is pushing. This prevents the child's feet from getting caught. Consult the specific mechanism on your tricycle for engaging/disengaging the pedals.

5.6. Engaging Brakes

The tricycle is equipped with two brakes on the rear wheels. To engage the brakes, press down on the brake

levers located near the rear wheels. Ensure the brakes are fully engaged when parking the tricycle to prevent accidental movement.

6. FEATURES

The Supfine Evolving Tricycle is designed with several key features for comfort, safety, and convenience:

- **4-in-1 Multifunctionality:** Adapts from a parent-controlled push tricycle to an independent tricycle for children aged 9 months to 5 years.
- **Ergonomic Design:** Modular design allows customization to the child's abilities, featuring comfortable seating and puncture-proof tires.
- **Safety Equipment:** Includes a 5-point safety harness, central safety bar, large adjustable sunshade, front wheel mudguard, and two rear wheel brakes.
- **Durable, Puncture-Proof Wheels:** Maintenance-free tires that do not require inflation, suitable for various terrains.
- **Height-Adjustable Push Handle:** Allows parents to find a comfortable pushing height while maintaining control.
- **Rotatable Seat:** Seat cushion with a rotatable design for forward or rear-facing positions.
- **Storage:** Equipped with a front basket and a large rear storage basket for carrying essentials.

7. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your tricycle.

- **Cleaning:** Wipe down the tricycle regularly with a damp cloth and mild soap. Avoid harsh chemicals that may damage the plastic or fabric.
- **Tires:** The puncture-proof tires do not require inflation. Keep them free from debris and inspect for any cuts or damage.
- **Moving Parts:** Periodically check all moving parts, such as wheels, pedals, and steering components, to ensure they operate smoothly. Lubricate if necessary with a child-safe lubricant.
- **Fasteners:** Regularly check all screws, bolts, and locking mechanisms to ensure they are tight. Tighten any loose fasteners.
- **Storage:** Store the tricycle in a dry, cool place away from direct sunlight and extreme temperatures to prevent material degradation.

8. TROUBLESHOOTING

If you encounter any issues with your tricycle, please refer to the following common troubleshooting tips:

- **Tricycle pulls to one side:** Check if all wheels are properly installed and tightened. Ensure the handlebar and push handle are aligned correctly.
- **Pedals not engaging/disengaging:** Verify that the pedal mechanism is clean and free of obstructions. Ensure it is correctly aligned for engagement or retraction.
- **Seat not rotating smoothly:** Check for any obstructions under the seat. Ensure the rotation mechanism is fully disengaged before attempting to rotate and fully engaged after rotation.

- **Brakes not effective:** Inspect the brake pads and mechanisms for wear or damage. Ensure they are properly adjusted and free from dirt.
- **Unusual noises:** Inspect all moving parts for loose connections or foreign objects. Lubricate joints if necessary.

If problems persist, please contact customer support.

9. SPECIFICATIONS

Brand	Supfine
Model Number	SP-FINE-SLC
Material	Plastic
Product Dimensions (L x W x H)	46 x 75 x 106 cm
Item Weight	7.5 Kilograms
Recommended Age Range	9 months to 5 years
Assembly Required	Yes
Country of Origin	China



Image 9.1: Tricycle dimensions.

10. WARRANTY AND SUPPORT

The Supfine 4-in-1 Evolving Tricycle comes with a **12-month manufacturer's warranty** from the date of purchase, covering defects in materials and workmanship under normal use.

For warranty claims, technical support, or any questions regarding your product, please contact your retailer or the manufacturer directly. Please have your model number (SP-FINE-SLC) and proof of purchase available when contacting support.