

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Intercleaner](#) /

› [Intercleaner Cordless Stick Vacuum and Portable Corded Vacuum Cleaner User Manual](#)

Intercleaner B0DF2BCYF2

Intercleaner Cordless Stick Vacuum & Portable Corded Vacuum Cleaner User Manual

Model: B0DF2BCYF2

1. INTRODUCTION

Thank you for choosing the Intercleaner Cordless Stick Vacuum and Portable Corded Vacuum Cleaner. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

Important Safety Instructions

- Always disconnect the appliance from the power supply before cleaning or maintenance.
- Do not use the vacuum cleaner to pick up water or wet substances.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Store the vacuum cleaner indoors in a dry place.

2. PRODUCT COMPONENTS

Familiarize yourself with the various parts of your Intercleaner vacuum cleaners.

Cordless Stick Vacuum Components



Description: This image displays the Intercleaner Cordless Stick Vacuum in its upright configuration, alongside its detachable handheld unit and two washable filters. The main unit shows the handle, dustbin, and motorized floor brush with LED headlights. The handheld unit is shown separately, highlighting its compact design. Two filters are depicted with water, indicating their washable nature.

- Main Body (Motor, Dustbin, Handle)
- Extension Wand
- Motorized Floor Brush with LED Headlights
- Detachable Handheld Vacuum Unit
- Washable Filters (Sponge Filter, HEPA Filter, Pre-filter)
- Charging Adapter

Portable Coded Vacuum Cleaner Components



Description: This image showcases the Intercleaner Portable Corded Vacuum Cleaner in its upright stick configuration, along with a comprehensive set of cleaning attachments and two replacement filters. The vacuum is black and blue, featuring a transparent dustbin. The attachments include various nozzles and brushes for different cleaning tasks, emphasizing its versatility.

- Main Body (Motor, Dustbin, Handle)
- Floor Nozzle
- Extension Tube
- Power Cord
- Various Attachments (Crevice tool, brush tool, etc.)
- Replacement Filters

3. SETUP AND ASSEMBLY

Cordless Stick Vacuum Assembly

1. **Attach the Extension Wand:** Insert the extension wand into the main body until it clicks securely into place.
2. **Attach the Motorized Floor Brush:** Connect the motorized floor brush to the other end of the extension

wand, ensuring it locks.

3. **Charge the Battery:** Before first use, fully charge the vacuum. Connect the charging adapter to the vacuum and plug it into a power outlet. The charging indicator lights will show the charging status.

2 in 1 Convert to Handheld Convenient Storage

Freestanding dock for accessible storage in upright mode



Description: This image illustrates the versatility of the InterCleaner Cordless Stick Vacuum. On the left, a user is shown detaching the handheld unit from the stick vacuum, demonstrating its 2-in-1 capability. On the right, the stick vacuum is shown freestanding and connected to a charging cable plugged into a wall outlet, highlighting its convenient storage and charging method.

Portable Corded Vacuum Assembly

1. **Attach the Extension Tube:** Insert the extension tube into the main body.
2. **Attach the Floor Nozzle:** Connect the floor nozzle to the other end of the extension tube.
3. **Select Attachments:** For specific cleaning tasks, detach the floor nozzle and attach the desired accessory directly to the main body or extension tube.

4. OPERATING INSTRUCTIONS

Cordless Stick Vacuum Operation

- **Power On/Off:** Press the power button located on the handle to turn the vacuum on or off.
- **Speed Control:** The vacuum features 2-speed power control. Press the speed control button to switch between standard mode (for daily dust removal) and max mode (for large particles, pet hair, etc.).
- **LED Headlights:** The motorized floor brush is equipped with LED headlights to illuminate dust and debris in dark areas.
- **2-in-1 Handheld Mode:** To convert to a handheld vacuum, press the release button to detach the main body from the extension wand. Attach desired accessories directly to the handheld unit.
- **Flexible Swivel:** The 180-degree flexible swivel brush head allows for easy maneuvering around furniture and into tight spaces.



Description: This image highlights the powerful suction and motor of the InterCleaner Cordless Stick Vacuum, demonstrating its effectiveness on carpets, floors, and marble. It shows the vacuum head actively cleaning various types of debris, including crumbs, pet hair, and dust, with visual indicators for "Strong Suction" and "Powerful Motor."

Powerful Suction and Quiet Operation

Suitable for Corner



Description: This image illustrates the flexible swivel capabilities of the InterCleaner Cordless Stick Vacuum. It shows the vacuum head articulating at 90 and 180 degrees, allowing it to easily reach under furniture and into corners. A sleeping dog under a bed further emphasizes the quiet operation and ability to clean in hard-to-reach areas.

Detachable Hand Vacuum



Description: This image focuses on the detachable handheld vacuum mode of the InterCleaner unit. A hand is shown using the compact handheld vacuum to clean the interior of a car, specifically between car seats. The text "Convert to handvac to clean tight spaces, sofa, car, & more" highlights its utility for detailed cleaning.

Portable Corded Vacuum Operation

- **Power On/Off:** Plug the power cord into a suitable electrical outlet. Press the power switch on the handle to turn the vacuum on or off.
- **Cord Management:** Ensure the power cord is not tangled or obstructing your path during operation.
- **Lightweight Design:** This vacuum is designed to be lightweight for easy maneuverability, even for children under adult supervision.

Lightweight and Easy to Use

Only 3lb, children can also help with housework



Description: This image shows a young girl operating the InterCleaner Portable Corded Vacuum Cleaner on a carpeted floor, emphasizing its lightweight design and ease of use. The text "Lightweight and Easy to Use Only 3lb, children can also help with housework" reinforces its accessibility for various users.

5. MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dustbin

- Always empty the dustbin when the debris reaches the MAX fill line or after each use.
- Press the dustbin release button and carefully remove the dustbin.
- Open the dustbin lid and empty contents into a trash receptacle.
- Reattach the dustbin securely.

Cleaning the Filters

The InterCleaner vacuum cleaners feature a multi-stage filtration system for efficient dust separation.

15000Pa Strong Suction


High-efficiency Filtration

Sponge Filter

HEPA Filter

Pre-filter

Strong Cyclone

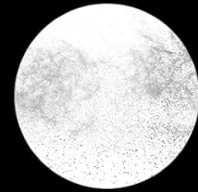

Description: This diagram illustrates the 15000Pa strong suction and high-efficiency filtration system of the InterCleaner vacuum. It visually breaks down the filtration layers: Sponge Filter, HEPA Filter, Pre-filter, and Strong Cyclone, showing how air passes through each stage to capture various sizes of debris, from fine dust to larger particles like pet food.

1. **Remove Filters:** Twist or pull to remove the sponge filter, HEPA filter, and pre-filter from the dustbin assembly.
2. **Clean Filters:** Tap off loose dirt. For a deeper clean, rinse the filters under cold running water. Do not use detergent.
3. **Dry Filters:** Allow all filters to air dry completely for at least 24 hours before reinserting them. Do not use a hairdryer or other heating devices.
4. **Reassemble:** Once completely dry, reinsert the filters in the correct order into the dustbin.

Note: Regular cleaning of filters is crucial for maintaining suction power and preventing motor overheating.

Cleaning the Brush Roll (Cordless Stick Vacuum)

- Turn off and unplug the vacuum.
- Locate the brush roll access cover on the bottom of the motorized floor brush.

- Open the cover and remove the brush roll.
- Use scissors or a brush to remove any tangled hair or debris from the brush roll.
- Reinsert the brush roll and close the cover securely.

6. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on (Cordless)	Battery is not charged.	Charge the battery fully.
Vacuum does not turn on (Corded)	Not plugged in or power outlet issue.	Ensure power cord is securely plugged in. Test outlet with another device.
Low suction power	Dustbin full; Filters clogged; Blockage in hose/nozzle; Brush roll tangled.	Empty dustbin. Clean/wash filters. Check for and remove blockages. Clean brush roll.
Brush roll not spinning (Cordless)	Tangled debris; Brush roll jammed.	Turn off vacuum, remove debris from brush roll.
Vacuum stops suddenly	Overheating (Cordless); Blockage (Corded).	Turn off and allow to cool for 30 minutes. Check for and remove blockages.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	InterCleaner
Model	B0DF2BCYF2
Special Feature	Bagless
Included Components	Brush
Is Cordless?	Yes (for stick vacuum)
Recommended Uses	Carpet, Hard Floor
Color	White
Battery Type	Lithium-Ion (for cordless)
Number of Items	1
Control Method	Touch, Push Button
Style	Lightweight Cordless Stick Vacuum + Corded Stick
Number of Speeds/Power Levels	2
Portable	Yes

Feature	Detail
Indoor/Outdoor Usage	Indoor

8. WARRANTY INFORMATION

InterCleaner products are manufactured to the highest quality standards. For specific warranty details, please refer to the warranty card included with your purchase or visit the official InterCleaner website. Keep your purchase receipt as proof of purchase for any warranty claims.

9. CUSTOMER SUPPORT

If you have any questions or require assistance with your InterCleaner vacuum cleaner, please contact our customer support team:

- **Website:** Visit the [InterCleaner Store on Amazon](#) for FAQs and product information.
- **Email:** Refer to your product packaging or warranty card for direct email support.
- **Phone:** Refer to your product packaging or warranty card for phone support numbers.

Please have your model number (B0DF2BCYF2) and purchase date ready when contacting support.

