

[Manuals.plus](#) /

› [Tiny Land](#) /

› Tiny Land 7-in-1 Foldable Pikler Triangle Climbing Set Instruction Manual

Tiny Land TLTGPT006OW-US

Tiny Land 7-in-1 Foldable Pikler Triangle Climbing Set Instruction Manual

Model: TLTGPT006OW-US

1. INTRODUCTION

The Tiny Land 7-in-1 Foldable Pikler Triangle Climbing Set is a versatile indoor play structure designed to promote physical development, balance, and independence in young children. Inspired by Montessori principles, this set offers multiple configurations to keep children engaged and active.

2. SAFETY INFORMATION

- **Adult supervision is required at all times** when children are using the climbing set.
- Ensure the set is placed on a flat, stable surface.
- Keep the play area clear of obstacles and sharp objects.
- Regularly inspect all components for wear, damage, or loose connections. Do not use if damaged.
- Maximum recommended age: 120 months (10 years). Minimum recommended age: 24 months (2 years).
- This product is designed for indoor use only.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Pikler Triangle (main climbing frame)
- Reversible Board (climbing board on one side, slide on the other)
- Climbing Arch (can also be inverted for use as a rocker)
- Assembly Hardware (screws, Allen wrenches)
- Instruction Manual



Image: Individual components of the Pikler Triangle Set, including the triangle frame, arch, and reversible board.

4. ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. It is recommended to have two adults for easier assembly.

1. **Unpack Components:** Lay out all parts and hardware on a clean, soft surface to prevent scratches. Refer to the parts list to ensure everything is present.
2. **Assemble the Pikler Triangle:** Connect the rungs to the side panels of the triangle frame using the provided screws and Allen wrench. Ensure all connections are secure.
3. **Assemble the Climbing Arch:** Similarly, attach the rungs to the curved side panels of the arch.
4. **Attach the Reversible Board:** The reversible board can be attached between the Pikler Triangle and the Climbing Arch, or used independently. Secure it using the designated attachment points and hardware. Ensure the board is firmly locked into place to prevent accidental detachment during use.
5. **Final Check:** After assembly, double-check all screws and connections to ensure they are tight and secure. There should be no wobbling or loose parts.

Video: A demonstration of assembling the Pikler Triangle Set and configuring its various components. This video is provided by Emilia Taneva | Bubbly Moments.

Versatile Pikler Triangle Set



Pikler Triangle*1



Skating & Climbing*1



Rock Bed*1

Image: The fully assembled Pikler Triangle Set, showcasing the triangle, reversible board, and arch in a connected configuration.

5. OPERATING INSTRUCTIONS & PLAY MODES

The Tiny Land Pikler Triangle Set offers 7 versatile play modes to encourage active and imaginative play. Always ensure the setup is stable and secure before allowing children to play.

5.1 Standard Pikler Triangle

Use the Pikler Triangle as a standalone climbing structure. Children can climb up and down the rungs, developing gross motor skills and coordination.

5.2 Slide Configuration

Attach the reversible board to the Pikler Triangle with the smooth side facing down to create a slide. Ensure the board is securely hooked at the top and rests firmly on the ground or a lower rung.

5.3 Climbing Ramp Configuration

Attach the reversible board to the Pikler Triangle with the climbing holds facing up to create a climbing ramp. This provides a different challenge for ascending.

5.4 Arch Climber

The climbing arch can be used independently as a low climbing structure, allowing toddlers to crawl over and through it.

5.5 Rocker/Balance Board

Invert the climbing arch to transform it into a gentle rocker. This can be used for balancing or as a cozy spot for relaxation with a cushion.

5.6 Bridge/Tunnel

Connect the Pikler Triangle and the Climbing Arch with the reversible board to create a bridge or tunnel structure. This encourages crawling, balancing, and imaginative play.

5.7 Fort/Tent

Drape a blanket or sheet over the Pikler Triangle to create a fort or tent, fostering imaginative play and a sense of personal space.

Versatile Gameplay



Image: Children demonstrating different play configurations of the Pikler Triangle Set, including climbing, sliding, and using the arch.

Video: A child demonstrating various ways to interact with the Pikler Triangle Set, promoting independence and confidence.
This video is provided by McKenna | Playful Days.



Image: An adult and child enjoying the climbing arch configured as a rocker, highlighting its versatility.

6. MAINTENANCE

- **Cleaning:** Wipe down the wooden surfaces with a damp cloth and mild soap if necessary. Avoid harsh chemicals or abrasive cleaners. Dry thoroughly after cleaning.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Tighten any loose hardware to maintain stability and safety.
- **Storage:** When not in use, the Pikler Triangle can be folded for space-saving storage. Loosen the reinforced side screws to fold the frame securely. Store in a dry place away from direct sunlight or extreme temperatures to prevent wood warping or damage.
- **Wood Care:** The product is made from natural wood. Minor variations in grain and color are normal. Avoid prolonged exposure to moisture.

Durable Wooden Materials

*Our products meet the highest standards of safety and quality under ASTM F1148 and ASTM F963.



Image: Detail of the product's durable wooden materials, highlighting smooth surfaces and safety certifications.

7. TROUBLESHOOTING

If you encounter any issues with your Tiny Land Pikler Triangle Set, please refer to the following common solutions:

- **Wobbling or Instability:** Ensure all screws are fully tightened. Check that the set is on a level surface.
- **Difficulty Folding:** Ensure the reinforced side screws are sufficiently loosened before attempting to fold the frame. Do not force the mechanism.
- **Missing Parts or Damaged Components:** If any parts are missing or damaged upon arrival, please contact Tiny Land customer support immediately for assistance.

8. SPECIFICATIONS

Feature	Detail
Brand	Tiny Land

Model Number	TLTGPT006OW-US
Material Type	Wood
Age Range Description	Kid (24 to 120 months)
Item Dimensions (L x W x H)	110 x 21 x 31 inches (assembled)
Indoor/Outdoor Usage	Indoor
Assembly Required	Yes
Educational Objective	Develop and improve motor skills, coordination, and confidence through active play

Perfect Dimensions & Space Efficiency

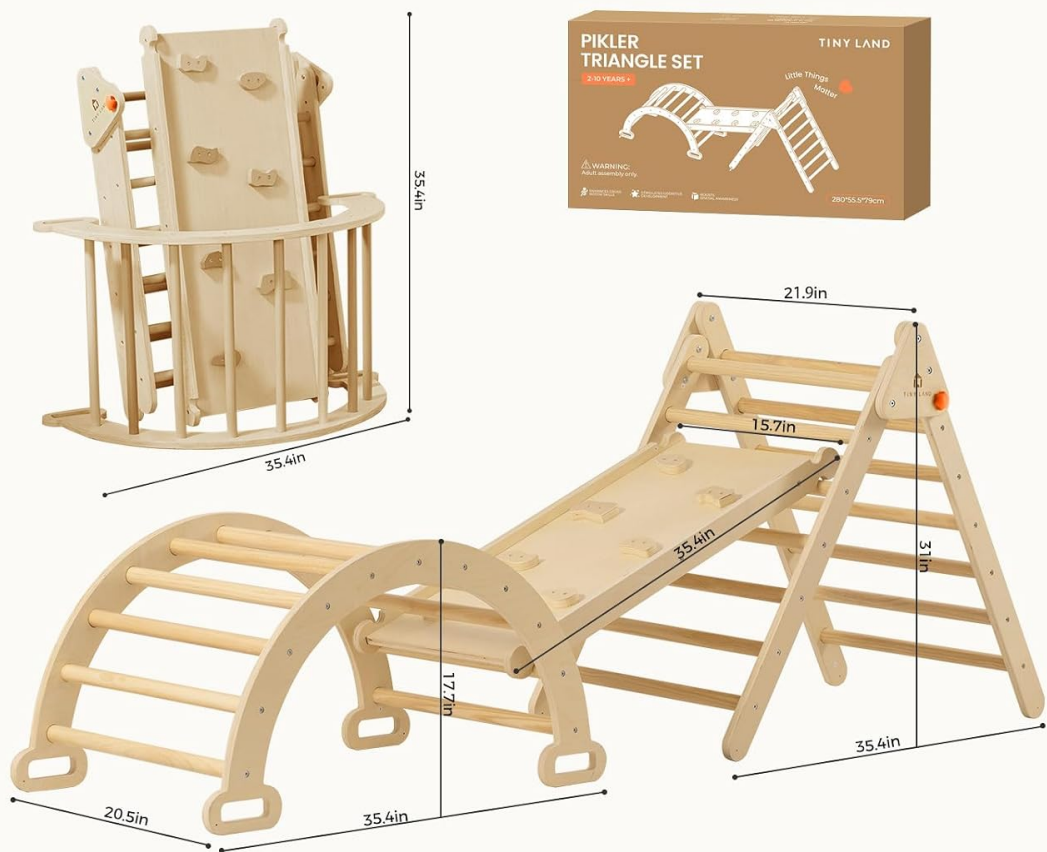


Image: Detailed dimensions of the Pikler Triangle Set in various configurations, illustrating its size and space efficiency.

9. WARRANTY AND SUPPORT

Tiny Land is committed to providing high-quality products. For any questions, concerns, or support needs

regarding your Pikler Triangle Set, please contact Tiny Land customer service. While specific warranty details are not provided in this manual, please retain your proof of purchase for any warranty claims. For further assistance, visit the official Tiny Land store or contact their customer support channels.