

FUNYET FUNYET-2-IN-1-LAPTOP-TABLET-1

FUNYET 2-in-1 Laptop Tablet User Manual

Model: FUNYET-2-IN-1-LAPTOP-TABLET-1

1. INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your FUNYET 2-in-1 Laptop Tablet. Please read this manual thoroughly before using the device to ensure optimal performance and longevity. Keep this manual for future reference.

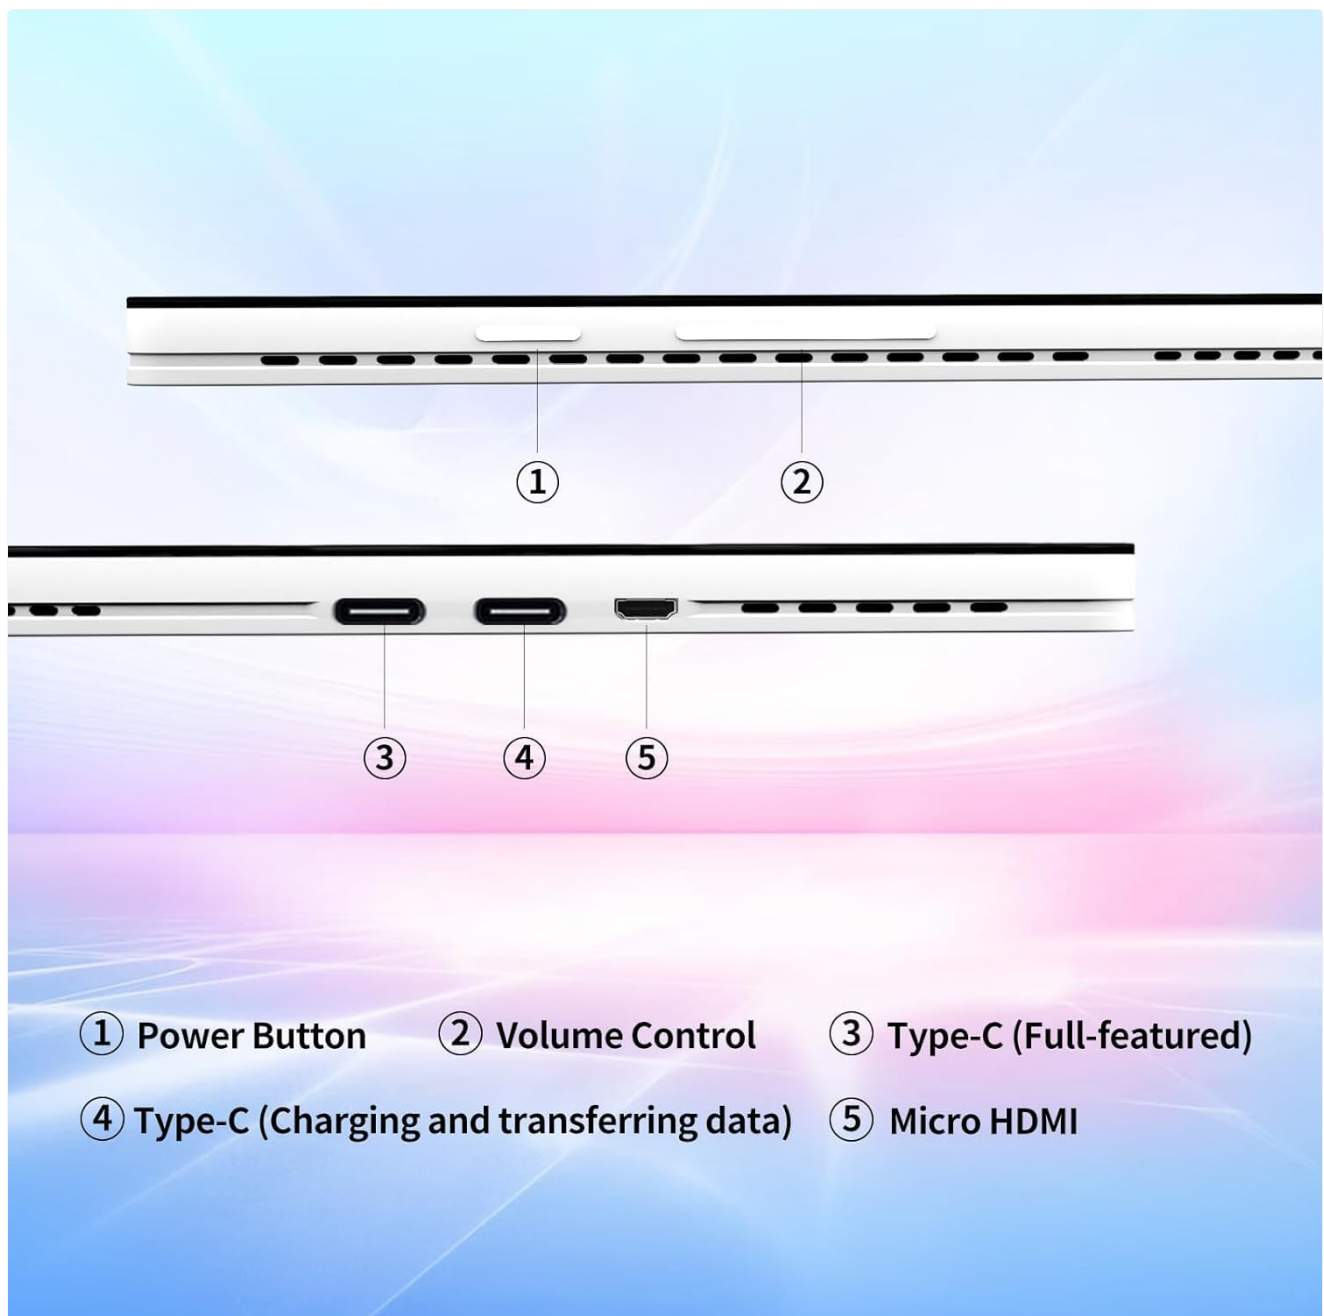 
2. PRODUCT OVERVIEW

2.1 Package Contents

- FUNYET 2-in-1 Laptop Tablet
- Detachable Keyboard
- AC Power Adapter
- User Manual (this document)

2.2 Device Layout and Ports

Familiarize yourself with the various ports and buttons on your device.



- ① Power Button ② Volume Control ③ Type-C (Full-featured)
④ Type-C (Charging and transferring data) ⑤ Micro HDMI

Image: Side view of the FUNYET 2-in-1 Laptop Tablet illustrating the location of the power button, volume control, two Type-C ports, and Micro HDMI port.

1. **Power Button:** Press and hold to power on/off or sleep/wake the device.
2. **Volume Control:** Adjusts the system volume.
3. **Type-C (Full-featured):** Supports data transfer, video output, and power delivery.
4. **Type-C (Charging and Data Transfer):** Primarily for charging the device and data transfer.
5. **Micro HDMI:** Connects to external displays.

2.3 Key Features

- **Processor:** Intel 12th Gen Celeron N100 (up to 3.4 GHz, 4 cores, 4 threads).
- **Memory:** 16GB DDR5 RAM for efficient multitasking.
- **Storage:** 512GB SSD for fast boot times and ample storage.
- **Display:** 14-inch 1920 x 1200 IPS Touchscreen.
- **Connectivity:** Wi-Fi 6 (802.11ax) and Bluetooth 5.2.
- **Cameras:** 2MP Front Camera and 5MP Rear Camera.

- **Keyboard:** Detachable, backlit keyboard.



Image: The device displaying multiple open applications, illustrating its multitasking capabilities with 16GB LPDDR5 RAM and 512GB SSD.

3. SETUP

3.1 Initial Charging

Before first use, connect the AC power adapter to the device's charging Type-C port and a power outlet. Charge the device until the battery is full. The battery indicator will show charging status.

3.2 Attaching and Detaching the Keyboard

The keyboard connects magnetically to the tablet. Align the magnetic connectors on the tablet and keyboard until they snap into place. To detach, gently pull the tablet away from the keyboard.

3.3 Adjusting the Kickstand

The integrated kickstand allows for various viewing angles. Extend the kickstand from the back of the tablet and

adjust it to your desired position. Ensure the kickstand is fully extended and stable to prevent the device from tipping.



Image: Visual guide demonstrating the correct method for deploying the device's kickstand for stable use, alongside examples of incorrect positioning.

3.4 First Boot and Windows Setup

Press and hold the Power Button until the screen turns on. Follow the on-screen instructions to complete the Windows 11 Pro setup, including language selection, network connection, and user account creation.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off and Sleep Mode

- **Power On:** Press and hold the Power Button for a few seconds.
- **Power Off:** From Windows, go to Start > Power > Shut down. Alternatively, press and hold the Power Button, then select 'Shut down' from the options.

- **Sleep Mode:** Briefly press the Power Button to enter or exit sleep mode.

4.2 Using the Touchscreen

The 14-inch display supports multi-touch gestures. Use your fingers to navigate, tap, swipe, pinch-to-zoom, and interact with applications.

4.3 Using the Keyboard and Touchpad

When the keyboard is attached, it functions as a standard laptop keyboard. The integrated touchpad supports multi-touch gestures for navigation. The keyboard features backlighting for use in low-light conditions.

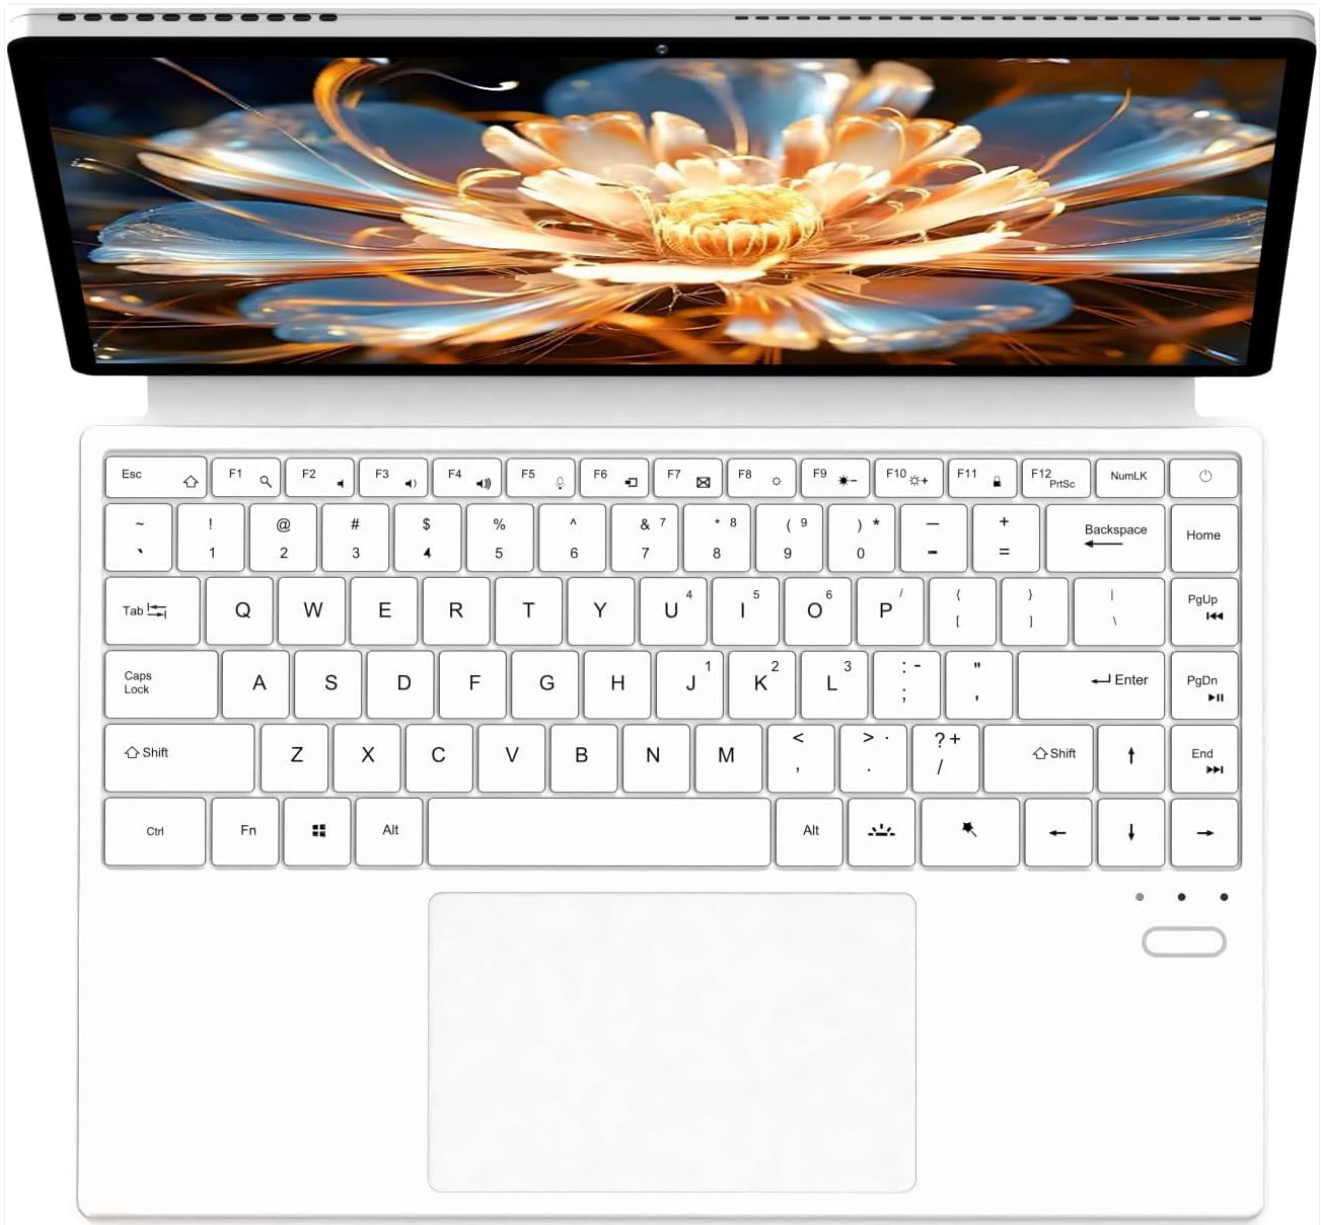 


Image: A close-up view of the detachable backlit keyboard, showing the key layout and touchpad.

4.4 Connecting Peripherals

- **USB-C Devices:** Connect compatible USB-C devices to the Type-C ports for data transfer or external display output (if full-featured).
- **External Display:** Use the Micro HDMI port to connect to an external monitor or TV. An appropriate adapter may be required.

4.5 Wireless Connectivity

- **Wi-Fi:** Access network settings in Windows to connect to available Wi-Fi 6 networks.
- **Bluetooth:** Pair Bluetooth devices such as headphones, mice, or keyboards through Windows Bluetooth settings.



Image: The device in use, highlighting its wireless capabilities (Wi-Fi 6, Bluetooth 5.2) and integrated cameras (2MP front, 5MP rear).

4.6 Camera Usage

The device includes a 2MP front camera and a 5MP rear camera. Use the built-in Camera application in Windows to take photos, record videos, or participate in video calls.

5. MAINTENANCE

5.1 Cleaning

Use a soft, lint-free cloth to clean the screen and exterior surfaces. For stubborn marks, dampen the cloth slightly with water or a screen-safe cleaner. Avoid harsh chemicals or abrasive materials.

5.2 Battery Care

To prolong battery life:

- Avoid extreme temperatures.
- Do not fully discharge the battery frequently.
- If storing the device for an extended period, charge it to about 50-70%.

10 Hour Battery Life



- Daily use: 10 hours of battery life
- Watch video(Wi-Fi OFF): 6-8 hours of battery life
- Watch video(Wi-Fi ON): 4 hours of battery life

Image: An illustration of the 38Wh battery capacity and estimated usage times: 10 hours for daily use, 6-8 hours for video playback (Wi-Fi off), and 4 hours for video playback (Wi-Fi on).

5.3 Software Updates

Regularly check for and install Windows updates to ensure system stability, security, and access to the latest features. Go to Start > Settings > Windows Update.

5.4 Storage Management

Periodically review and manage your storage space. Delete unnecessary files, uninstall unused applications, and consider cloud storage for large files to maintain optimal performance.

6. TROUBLESHOOTING

- **Device does not power on:** Ensure the device is charged. Connect the AC adapter and try again. If unresponsive, press and hold the power button for 15-20 seconds to perform a hard reset.
- **Keyboard not responding:** Ensure the keyboard is securely attached. Check if the keyboard's power is on (if it has a separate power switch or indicator). Re-attach the keyboard.
- **Wi-Fi connectivity issues:** Check if Wi-Fi is enabled in Windows settings. Restart your router and the device. Ensure you are within range of a Wi-Fi network.
- **Slow performance:** Close unnecessary applications. Check for background processes consuming resources. Ensure sufficient free storage space. Run a system scan for malware.
- **Screen not rotating:** Ensure auto-rotation is enabled in Windows settings (Action Center).

7. SPECIFICATIONS



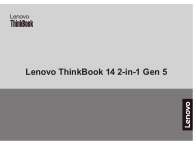
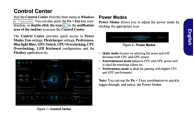
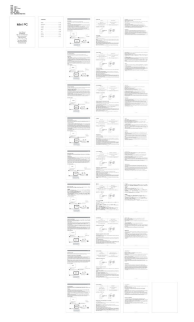

Feature	Specification
Model Name	FUNYET-2-IN-1-LAPTOP-TABLET-1
Processor	Intel Celeron N100 (12th Gen)
RAM	16 GB DDR5
Storage	512 GB SSD
Screen Size	14 Inches
Screen Resolution	1920 x 1200 pixels
Operating System	Windows 11 Pro
Wireless Type	802.11ax (Wi-Fi 6)
Bluetooth	Bluetooth 5.2
Front Camera	2 MP
Rear Camera	5 MP
Item Weight	5.37 pounds
Product Dimensions	12.5 x 8.4 x 0.4 inches
Color	White

8. WARRANTY AND SUPPORT

FUNYET offers a **30-day free exchange** and a **1-year free repair** service for all its products. For any questions or assistance regarding your FUNYET 2-in-1 Laptop Tablet, please contact FUNYET support. We aim to respond within 24 hours.

For support, please visit the official FUNYET store or contact customer service through your purchase platform.

Related Documents - FUNYET-2-IN-1-LAPTOP-TABLET-1

	<p>MUNBYN IRX15 Rugged Laptop User Manual</p> <p>User manual for the MUNBYN IRX15 Rugged Laptop, providing detailed instructions on setup, basic functions, device layout, troubleshooting, and support resources.</p>
	<p>MSI Summit E13 Flip Evo A11MT-223 Quick Start Guide</p> <p>Get started quickly with the MSI Summit E13 Flip Evo A11MT-223 laptop. This guide covers setup, features, and package contents for this 13.4-inch Intel Evo certified device with Core i7, 16GB RAM, and 512GB SSD.</p>
	<p>Lenovo ThinkBook 14 2-in-1 Gen 5 Quick Start Guide</p> <p>Quick start guide for the Lenovo ThinkBook 14 2-in-1 Gen 5 laptop. Covers setup, device overview, ports, and SAR/radio frequency information. Learn about your new 2-in-1 device from Lenovo.</p>
	<p>Thunderobot Control Center User Guide: Features and Settings</p> <p>Explore the Thunderobot Control Center, a comprehensive guide to managing your laptop's performance, LED keyboard, power modes, overclocking, and customization features. Learn to optimize your gaming experience.</p>
	<p>Firebat Mini PC User Manual - Setup, Features, and Troubleshooting</p> <p>Comprehensive user manual for Firebat Mini PC models (e.g., AK2, MN56, AM02, T8). Covers package contents, setup, hardware connections, VESA mounting, BIOS settings, FAQ, and troubleshooting for optimal performance.</p>
	<p>Lenovo ThinkPad X1 2-in-1 Gen 10 Aura Edition: AI-Powered Performance, Versatility, and Specifications</p> <p>Explore the Lenovo ThinkPad X1 2-in-1 Gen 10 Aura Edition (21Q1S1D401). This AI-powered laptop features Intel Core Ultra processors, Copilot+ PC capabilities, a 360° hinge, and comprehensive technical specifications for business professionals.</p>