

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Uthfy](#) /

› [Uthfy Space Heater HPC-F2014YL Instruction Manual](#)

Uthfy HPC-F2014YL

Uthfy Space Heater Instruction Manual

Model: HPC-F2014YL

Brand: Uthfy

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this heater. Failure to follow these instructions may result in fire, electric shock, or injury.

- Do not use outdoors. This heater is designed for indoor use only.
- Use only on a firm, level surface to prevent tipping.
- Keep combustible materials such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front, sides, and rear of the heater.
- Do not use in bathrooms, laundry areas, or similar damp indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handles when moving this heater.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug heater when not in use.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.

- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- This heater includes a tip-over safety switch and overheat protection. If the heater tips over or overheats, it will automatically shut off for safety.
- Ensure the power outlet is suitable for the heater's voltage (120 Volts AC) and is properly grounded.

PRODUCT OVERVIEW

The Uthfy Space Heater (Model HPC-F2014YL) is a 32-inch electric tower ceramic heater designed for indoor use, providing efficient and rapid heating for areas up to 400 sq.ft. It features a realistic 3D flame effect, 80° oscillation, and multiple control options for personalized comfort and energy efficiency.



Image: The Uthfy Space Heater, a tall black tower unit, is shown with its remote control. The heater emits warm air, indicated by orange wavy lines, and features a realistic flame display at its base.



Image: The Uthfy Space Heater is positioned in a large room, demonstrating its ability to provide widespread heat. Text overlays

highlight its 1500W power, 50°F-99°F thermostat range, and 400 sq.ft heating coverage.

Components

- Heater Unit (main body)
- Base (requires assembly)
- Remote Control
- User Manual (this document)

SETUP

Follow these steps to properly set up your Uthfy Space Heater for first use:

1. **Unpack:** Carefully remove all components from the packaging. Inspect for any damage. Retain packaging for future storage or transport.
2. **Assemble Base:** The heater unit comes with a detachable base. Attach the two halves of the base together, then align the assembled base with the bottom of the heater unit. Secure it firmly using the provided screws. Ensure the base is stable and the heater stands upright without wobbling.
3. **Placement:** Place the heater on a firm, level, and non-combustible surface. Ensure it is positioned away from walls, furniture, curtains, and any other combustible materials. Maintain at least 3 feet (0.9 meters) of clear space around the heater for proper airflow and safety.
4. **Power Connection:** Plug the power cord directly into a grounded 120V AC electrical outlet. Do not use extension cords, power strips, or surge protectors, as these can overheat and pose a fire hazard.



Image: A Uthfy Space Heater stands tall in a living room, with an arrow indicating its 32-inch height. Insets show its 3D flames, fast heating capability, and portable handle, illustrating its design and features.

OPERATING INSTRUCTIONS

Your Uthfy Space Heater can be operated conveniently using the touch control panel located on top of the unit or the included remote control.

Control Panel and Remote Control Functions

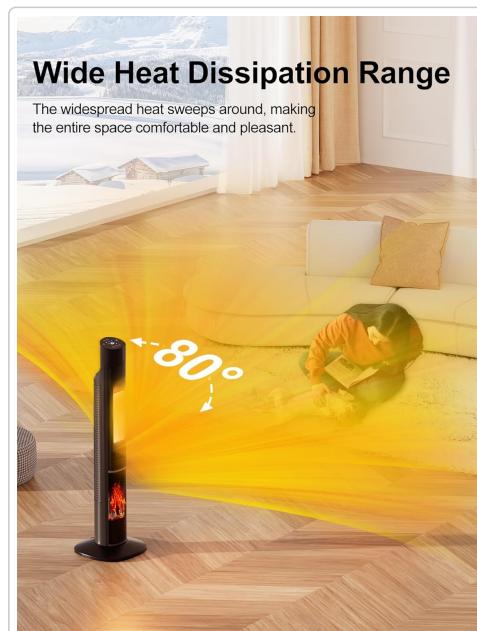


Image: A close-up of the Uthfy Space Heater's top control panel, showing touch buttons and an LED display. Text highlights its 3 heat modes, 24-hour timer, and 3D realistic flames feature, indicating ease of use.



Image: The Uthfy Space Heater is shown in a living room setting, with a remote control in the foreground, illustrating the convenience of remote operation for adjusting settings like oscillation from a distance.

Control Functions Overview

Button/Function	Description
Power On/Off	Turns the heater on or off.
Mode	Cycles through heating modes: High (1500W), Low (1000W), and ECO mode.
Temperature (+/-)	Adjusts the thermostat setting from 50°F to 99°F in 1°F increments.
Oscillation	Activates or deactivates the 80° oscillation feature for wider heat distribution.

Button/Function	Description
Timer	Sets the auto-off timer from 1 to 24 hours.
3D Flame	Turns the realistic 3D flame effect on or off.
LED Screen On/Off	Turns the LED display on the control panel on or off for undisturbed sleep.

Using the Heater

- Power On:** Press the Power button on the control panel or remote. The heater will turn on and the LED display will illuminate.
- Select Heating Mode:** Press the "Mode" button repeatedly to cycle between High (1500W), Low (1000W), and ECO modes. ECO mode automatically adjusts power consumption to maintain the set temperature efficiently.
- Set Temperature:** Use the "+" or "-" buttons to set your desired room temperature. The heater will cycle on and off to maintain this temperature, saving energy.
- Activate Oscillation:** Press the "Oscillation" button to enable the 80° oscillation feature, which helps distribute warm air more evenly across the room. Press again to stop oscillation.
- Set Timer:** Press the "Timer" button repeatedly to set the desired auto-off time, ranging from 1 to 24 hours. The heater will automatically turn off after the set duration.
- Flame Effect:** Press the "3D Flame" button to turn the realistic flame effect on or off independently of the heating function.
- LED Display:** If desired, press the "LED Screen On/Off" button to turn off the LED display on the control panel for a darker room, especially at night.
- Power Off:** Press the Power button again to turn off the heater. The heater will continue to run its fan for approximately 30 seconds to dissipate residual heat from the ceramic elements before fully shutting down, which helps prolong the product's lifespan.

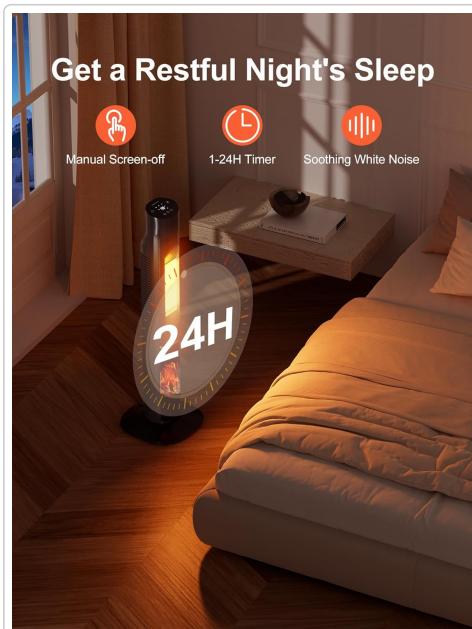


Image: The Uthfy Space Heater is shown in a dimly lit bedroom, emphasizing its features for a restful night's sleep, including manual screen-off, 1-24 hour timer, and soothing white noise for quiet operation.

MAINTENANCE

Regular maintenance is crucial for ensuring the optimal performance, efficiency, and longevity of your Uthfy Space Heater.

Cleaning

- Disconnect Power:** Always unplug the heater from the electrical outlet and allow it to cool completely for at least 30 minutes before attempting any cleaning.
- Exterior Cleaning:** Use a soft, damp cloth to wipe the exterior surfaces of the heater. For stubborn marks, a mild soap solution can be used, but ensure no liquid enters the heater. Do not use abrasive cleaners, chemical solvents, or flammable liquids, as these can damage the finish or create a fire hazard.
- Air Intake/Exhaust:** Use a vacuum cleaner with a brush attachment to gently remove dust and lint from the air intake and exhaust grilles. This prevents dust buildup that can impede airflow and reduce heating efficiency. Do not allow water or cleaning solutions to drip into the heater's interior.

Storage

When storing the heater, especially during off-season periods, follow these guidelines:

- Unplug the heater and allow it to cool completely.
- Clean the heater thoroughly as described in the "Cleaning" section.
- Store the heater in its original packaging, if possible, to protect it from dust and damage. If original packaging is unavailable, use a sturdy box and protective materials.
- Store the heater in a cool, dry place, away from direct sunlight, excessive moisture, and extreme temperatures.
- Do not place heavy objects on top of the heater during storage, as this could cause damage to the unit.

TROUBLESHOOTING

If your Uthfy Space Heater is not operating correctly, consult the following table for common issues and their corresponding solutions. If the problem persists after attempting these solutions, please contact customer support.

Troubleshooting Guide

Problem	Possible Cause	Solution
Heater does not turn on.	No power to the unit; Power button not pressed; Tip-over switch activated; Overheat protection activated.	Ensure plug is fully inserted into a working 120V AC outlet. Press the Power button firmly. Place heater on a firm, level surface. If overheat protection activated, unplug, wait 10 minutes for cooling, then plug back in.
Heater turns off unexpectedly.	Tip-over switch activated; Overheat protection activated; Timer set; Power surge.	Ensure heater is on a stable, level surface. Check for obstructions to air flow around the heater. Unplug, wait 10 minutes, then plug back in. Verify if the auto-off timer is set.
No heat or insufficient heat.	Incorrect mode selected; Thermostat set too low; Air inlets/outlets blocked; Room size exceeds heating capacity.	Select High (1500W) mode for maximum heat. Increase the thermostat setting to a higher temperature. Clear any dust or obstructions from air grilles. Ensure room size is within 400 sq.ft.

Problem	Possible Cause	Solution
Oscillation not working.	Oscillation feature not activated.	Press the Oscillation button on the control panel or remote to activate the feature.
Remote control not working.	Batteries are dead or incorrectly inserted; Obstruction between remote and heater; Remote sensor blocked.	Replace batteries (ensure correct polarity). Remove any physical obstructions between the remote and the heater. Point remote directly at the heater's sensor.



Image: An illustration demonstrating the Uthfy Space Heater's safety features, including a 45-degree tip-over protection mechanism that automatically shuts off the unit, and a temperature gauge showing overheat protection thresholds for safe operation.

SPECIFICATIONS

Technical specifications for the Uthfy Space Heater (Model HPC-F2014YL):

Feature	Detail
Brand	Uthfy
Model Number	HPC-F2014YL
Dimensions (D x W x H)	8.58"D x 8.58"W x 31.2"H
Item Weight	6.64 pounds
Color	Black
Form Factor	Tower
Indoor/Outdoor Usage	Indoor

Feature	Detail
Heating Coverage	300-400 Sq.ft
Heat Output	1500 Watts (High), 1000 Watts (Low)
Fuel Type	Electric
Voltage	120 Volts (AC)
Thermostat Range	50°F - 99°F (1°F increment)
Oscillation	80°
Timer	1-24 hours auto-off
Special Features	3D Realistic Flame, Remote & Touch Control, Delayed Heat Dissipation, Quiet Operation, Overheat and Tip-over Protection, V0 Flame-Retardant Material
Certifications	ETL Certified
Assembly Required	Yes (Base)
Batteries Required (for remote)	Yes

WARRANTY AND SUPPORT

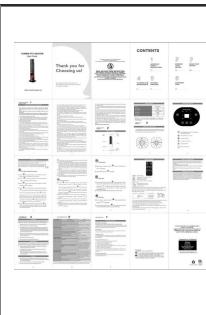
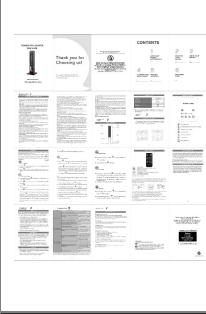
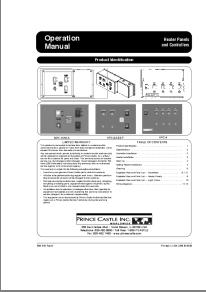
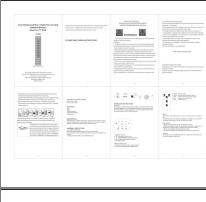
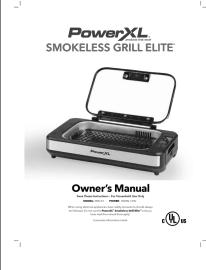
For warranty information or technical support regarding your Uthfy Space Heater, please refer to the contact details provided with your product packaging or visit the official Uthfy website. It is recommended to keep your purchase receipt as proof of purchase for any warranty claims.

For common questions and immediate assistance, please refer to the troubleshooting section of this manual.

PRODUCT VIDEOS

No official product videos from the seller are available for embedding at this time. Please refer to the detailed instructions and images provided in this manual for guidance.

Related Documents - HPC-F2014YL

	<p><u>Uthfy Tower PTC Heater User Guide and Safety Instructions</u></p> <p>Comprehensive user guide for the Uthfy Tower PTC Heater, including important safety instructions, operating procedures, troubleshooting tips, and customer care information. Learn how to use and maintain your electric heater safely and effectively.</p>
	<p><u>Tower PTC Heater HPC-F2014YL User Guide and Safety Instructions</u></p> <p>Comprehensive user guide for the Tower PTC Heater Model HPC-F2014YL, including safety instructions, operation details, assembly, maintenance, troubleshooting, and warranty information. Designed for residential supplemental heating.</p>
	<p><u>Tower PTC Heater HPC-F2409YL User Guide and Safety Instructions</u></p> <p>User guide for the Tower PTC Heater, model HPC-F2409YL. This manual provides essential safety instructions, operation procedures, cleaning and maintenance tips, troubleshooting solutions, and warranty information for residential use.</p>
	<p><u>Prince Castle Heater Panels and Controllers Operation Manual</u></p> <p>Operation manual for Prince Castle Heater Panels and Controllers, including product identification, specifications, installation, startup, settings, cleaning, and wiring diagrams for models HPC-1SNCA, HPC-2A/2AF, and HPC-4.</p>
	<p><u>JTF-803B Electronic Control Tower Fan Owner's Manual</u></p> <p>Owner's manual for the JTF-803B Electronic Control Tower Fan, including safety information, technical specifications, assembly instructions, operation instructions, and maintenance.</p>
	<p><u>PowerXL Smokeless Grill Elite SMG-01 Owner's Manual: Instructions, Safety & Cooking Guide</u></p> <p>Get the most out of your PowerXL Smokeless Grill Elite (Model SMG-01) with this comprehensive owner's manual. Find detailed instructions for setup, operation, cleaning, troubleshooting, safety precautions, and cooking charts for delicious meals.</p>

[\[pdf\]](#)

Constructional Data Report Standard Multi Mark Gil Diaz Safety Information Amazon Uthfy 32 Space Heater for Large Room 1500W Tower With Flame Indoor Use Portable Electric Ceramic Thermostat Remote 70° Oscillation 24 H Timer 3 Modes Office Bedroom Home Kitchen 51MK0jqOLRL m media amazon images | |||

AUTHORIZATION TO MARK This authorizes the application of the Certification Mark(s) shown below to the products R2018 CSA C22.2#46:2013 Ed.9 Product: Fan Heater

Brand Name: AKIRES, LIFESMART Models: **HPC-F2014YL, HPC-F2014YLSLM,**

HPC-F2014YLRGM, HPC-F2014YLBLM ATM for Report 230400969CXI-001 Page

1...

lang:en **score:22** filesize: 49.28 K page_count: 1 document date: 2023-08-11