

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [CLEANmaxx](#) /

› [CLEANmaxx 3-in-1 Multi-Surface Floor Cleaner User Manual](#)

CLEANmaxx B0DF2JPZW4

CLEANmaxx 3-in-1 Multi-Surface Floor Cleaner User Manual

Model: B0DF2JPZW4

1. INTRODUCTION

Thank you for choosing the CLEANmaxx 3-in-1 Multi-Surface Floor Cleaner. This versatile appliance is designed to simplify your cleaning routine by combining vacuuming, wet cleaning, and drying functions in a single device. It is suitable for a wide range of surfaces, including carpets, tiles, laminate, linoleum, and sealed wooden floors.

Please read this manual carefully before first use to ensure safe and optimal operation of your new appliance. Keep these instructions for future reference.

2. SAFETY INSTRUCTIONS

Always observe the following safety precautions to reduce the risk of fire, electric shock, or injury:

- Read all instructions before using the appliance.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep the appliance out of reach of children and pets.
- Use only CLEANmaxx approved cleaning solutions. Do not use flammable or combustible liquids.
- Unplug the appliance from the power outlet when not in use and before cleaning or performing maintenance.
- Do not use the appliance if the power cord or plug is damaged. Contact customer support for repair.
- Do not use the appliance to pick up large, sharp, or hot objects.
- Ensure all filters and tanks are correctly installed before operation.

3. PACKAGE CONTENTS

Please check the contents of your package to ensure all items are present:

- 1 x CLEANmaxx 3-in-1 Floor Cleaner Main Unit

- 1 x Carpet Roller Brush
- 1 x Hard Floor Brush
- 1 x Self-Cleaning and Storage Station
- 1 x CLEANmaxx Carpet Shampoo (500 ml)

4. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your CLEANmaxx floor cleaner:

- **Handle:** For comfortable grip and control.
- **Clean Water Tank:** Holds fresh water and cleaning solution (500 ml capacity).
- **Dirty Water Tank:** Collects dirty water and debris (600 ml capacity).
- **Roller Brush Head:** Interchangeable head for different floor types.
- **Power Button:** To turn the appliance on/off.
- **Self-Cleaning Button:** Activates the self-cleaning cycle.





Figure 4.1: Overview of the CLEANmaxx 3-in-1 Multi-Surface Floor Cleaner.



Figure 4.2: Detachable clean and dirty water tanks for easy filling and emptying.

5. SETUP

Follow these steps to set up your CLEANmaxx floor cleaner before first use:

1. **Assemble the Handle:** Insert the handle into the main unit until it clicks securely into place.
2. **Fill the Clean Water Tank:** Remove the clean water tank from the appliance. Open the cap and fill it with clean water. For wet cleaning, add the recommended amount of CLEANmaxx carpet shampoo or suitable floor cleaning solution. Close the cap securely and reinsert the tank into the appliance.
3. **Attach the Correct Roller Brush:** Depending on your floor type, select either the carpet roller brush or the hard floor brush. Align the brush with the slot in the brush head and push it in until it locks. Ensure it is securely fastened.



Figure 5.1: Attaching or replacing the roller brush in the brush head.

6. OPERATING INSTRUCTIONS

The CLEANmaxx 3-in-1 Floor Cleaner offers versatile cleaning modes:

6.1. General Operation

1. Plug the power cord (7-meter length) into a suitable electrical outlet.
2. Press the Power Button to turn on the appliance.
3. Tilt the appliance back to engage the roller brush and begin cleaning.

6.2. Wet Cleaning (Hard Floors)

For effective cleaning of tiles, laminate, linoleum, and sealed wooden floors:

- Ensure the hard floor brush is installed.
- Fill the clean water tank with water and, if desired, a suitable hard floor cleaning solution.
- Turn on the appliance and move it slowly over the floor. The appliance will dispense water, scrub, and

then vacuum up the dirty liquid.

6.3. Carpet Cleaning

For deep cleaning of carpets and rugs:

- Ensure the carpet roller brush is installed.
- Fill the clean water tank with water and the provided CLEANmaxx carpet shampoo.
- Turn on the appliance and move it slowly over the carpet. The appliance will dispense the shampoo solution, agitate the carpet fibers, and then extract the dirty liquid.



Figure 6.1: Demonstrating effective cleaning on both carpet and hard floor surfaces.



Figure 6.2: The appliance applies shampoo and cleans deep into carpet fibers.



Figure 6.3: The CLEANmaxx cleaner is suitable for various floor types including carpet, concrete, wood, and tile.

7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your CLEANmaxx floor cleaner.

7.1. Emptying and Cleaning Tanks

After each use, or when the dirty water tank is full:

1. Turn off and unplug the appliance.
2. Remove the dirty water tank.
3. Empty the dirty water and rinse the tank thoroughly with clean water.
4. Clean any debris from the filter located in the dirty water tank.
5. Rinse the clean water tank if any cleaning solution was used.
6. Allow both tanks to air dry before reassembling.

7.2. Self-Cleaning Function

The appliance features a convenient self-cleaning function:

1. Place the appliance on its self-cleaning and storage station.
2. Ensure the clean water tank has sufficient water.
3. Press the Self-Cleaning Button. The appliance will run a cycle to clean the roller brush and internal pathways.
4. After the cycle, empty and clean the dirty water tank as described above.



Figure 7.1: The self-cleaning station simplifies post-cleaning maintenance.

7.3. Replacing Roller Brushes

The roller brushes are replaceable for optimal cleaning performance:

- Turn off and unplug the appliance.
- Remove the brush head cover.
- Carefully pull out the used roller brush.
- Insert the new roller brush, ensuring it clicks into place.
- Replace the brush head cover.

8. TROUBLESHOOTING

If you encounter issues with your CLEANmaxx floor cleaner, refer to the following table:

| Problem | Possible Cause | Solution |
|----------------------------|--|---|
| Appliance does not turn on | Not plugged in; Power outlet fault; Damaged cord/plug | Check power connection; Try another outlet; Contact customer support |
| Poor suction | Dirty water tank full; Filter clogged; Brush head blocked | Empty and clean dirty water tank; Clean filter; Remove any blockages from brush head |
| Leaves streaks on floor | Dirty roller brush; Too much cleaning solution; Dirty water tank full | Clean or replace roller brush; Use less solution; Empty and clean dirty water tank |
| Water not dispensing | Clean water tank empty; Tank not properly installed; Nozzle clogged | Refill clean water tank; Reinstall tank securely; Check for nozzle blockages |

9. SPECIFICATIONS

| Feature | Specification |
|---------------------------|------------------|
| Brand | CLEANmaxx |
| Model | B0DF2JPZW4 |
| Color | Black |
| Dimensions (L x W x H) | 112 x 28 x 36 cm |
| Material | ABS Plastic |
| Power | Max. 600 W |
| Cable Length | 7 meters |
| Clean Water Tank Capacity | 500 ml |
| Dirty Water Tank Capacity | 600 ml |

10. WARRANTY AND SUPPORT

Your CLEANmaxx 3-in-1 Multi-Surface Floor Cleaner is covered by a standard manufacturer's warranty. Please refer to the warranty card included in your original packaging for specific terms and conditions. For technical support, spare parts, or any questions not covered in this manual, please contact CLEANmaxx

customer service through the retailer where you purchased the product or visit the official CLEANmaxx website for contact information.