

DINOSAURS'ISLAND TOYS B0DF2RLPXM

DINOSAURS'ISLAND TOYS Tyrannosaurus Rex Action Figure User Manual

Model: B0DF2RLPXM

Brand: DINOSAURS'ISLAND TOYS

1. INTRODUCTION

Thank you for purchasing the DINOSAURS'ISLAND TOYS Tyrannosaurus Rex Action Figure. This toy is designed to provide an immersive play experience with realistic roaring sounds, continuous spray, vibration, light-up features, and movable parts. Please read this manual carefully before use to ensure proper setup, operation, and maintenance.

2. SAFETY INFORMATION

- **Recommended Age:** This toy is suitable for children aged 3 years and up.
- **Battery Safety:** Use only the specified battery type. Do not mix old and new batteries, or different types of batteries. Insert batteries with correct polarity. Remove batteries if the toy will not be used for an extended period.
- **Water Safety:** Use clean tap water for the spray feature. Do not use any other liquids. Ensure the water reservoir cap is securely closed to prevent leaks.
- **Choking Hazard:** This toy contains small parts and is not suitable for children under 3 years old. Adult supervision is recommended during play.
- **Cleaning:** Refer to the Maintenance section for proper cleaning instructions.

3. PACKAGE CONTENTS

- 1 x Tyrannosaurus Rex Action Figure (Model: B0DF2RLPXM)
- 1 x Instruction Manual

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment on the underside of the dinosaur.
2. Using a screwdriver (not included), open the battery compartment cover.
3. Insert the required batteries (e.g., 3 x AA batteries, not included) according to the polarity indicators (+/-).
4. Replace the battery compartment cover and secure it with the screw.

4.2 Water Reservoir Refill (for Spray Feature)

1. Locate the water reservoir cap, typically on the dinosaur's head or back.
2. Carefully open the cap.
3. Fill the reservoir with clean tap water using a small dropper or bottle (not included). Do not overfill.
4. Securely close the water reservoir cap.



Image 4.2.1: The Tyrannosaurus Rex Action Figure, ready for setup.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Locate the power switch, usually on the dinosaur's belly or near the battery compartment. Slide the switch to the 'ON' position to activate the toy. Slide to 'OFF' to power down.

5.2 Activating Roaring, Vibration, and Light-Up Features

Once powered on, press the activation button, typically located on the dinosaur's side or back. This will trigger realistic roaring sounds, cause the dinosaur to vibrate, and illuminate its mouth with a light effect, simulating mist spray.

Vibrates Continuously, Lights Up & Roars



Image 5.2.1: Illustration of the Tyrannosaurus Rex activating its roaring, vibration, and light-up features.

5.3 Activating Head-Thrashing Motion

To engage the head-thrashing motion, gently wag the dinosaur's tail from side to side. This action will cause the head to move dynamically, enhancing the play experience.

Wag the tail to activate head-thrashing motion



Image 5.3.1: Demonstrating how to wag the tail to activate the head-thrashing motion.

5.4 Utilizing Movable Jaws and Limbs

The Tyrannosaurus Rex features articulated jaws and limbs. These parts can be manually adjusted to create various poses and enhance imaginative play scenarios. Gently move the jaws to open and close the mouth, and position the legs and arms as desired.

Movable Jaws & Limbs

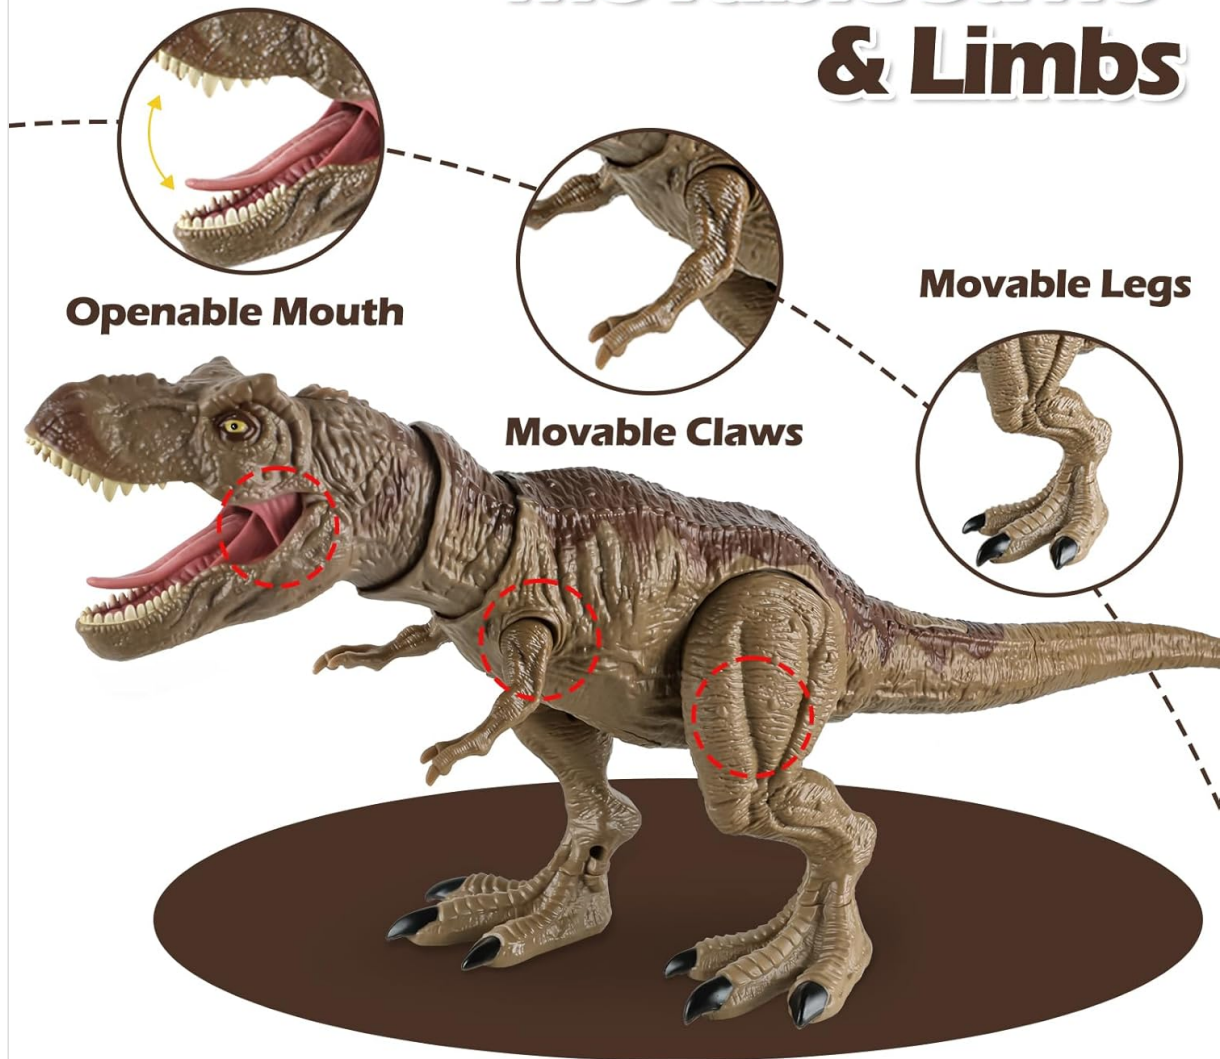


Image 5.4.1: Close-up view highlighting the movable jaws, claws, and legs of the action figure.

6. MAINTENANCE

6.1 Cleaning

To clean the action figure, wipe it with a soft, damp cloth. Do not submerge the toy in water or use harsh chemicals, as this may damage the electronic components and paint finish.

6.2 Battery Replacement

If the toy's sounds, lights, or movements become weak or stop functioning, it may be time to replace the batteries. Follow the battery installation steps in Section 4.1.

6.3 Water Reservoir Care

After use, it is recommended to empty any remaining water from the reservoir to prevent stagnation. Allow the reservoir to air dry before storing the toy.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Toy does not power on or function.	Batteries are dead or incorrectly installed.	Check battery polarity or replace with new batteries.
Spray feature is not working.	Water reservoir is empty or clogged.	Refill the water reservoir. Ensure the nozzle is clear of obstructions.
Roaring sound is weak or distorted.	Low battery power.	Replace batteries.
Head-thrashing motion is not smooth.	Tail not wagged correctly or internal mechanism obstruction.	Ensure the tail is wagged gently and fully. Check for any visible obstructions.

8. SPECIFICATIONS

- **Product Dimensions:** 19 x 6 x 9 inches
- **Item Weight:** 1.26 pounds
- **Manufacturer Recommended Age:** 3 years and up
- **Manufacturer:** DINOSAURS'ISLAND TOYS
- **Model Number:** B0DF2RLPXM

9. WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. For specific warranty details, please refer to the packaging or contact DINOSAURS'ISLAND TOYS customer support directly. If you encounter any issues or have questions not addressed in this manual, please reach out to our customer service team for assistance.