



[Manuals.plus](#) /

› [Trucozie](#) /

› Trucozie Cordless Vacuum Cleaner T351 User Manual

## Trucozie T351

# Trucozie Cordless Vacuum Cleaner T351 User Manual

Model: T351 | Brand: Trucozie

## IMPORTANT SAFETY INFORMATION

---

Please read all instructions carefully before using this appliance and retain for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.
- Do not use in an enclosed space where vapors are present from oil base paint, paint thinner, mothproofing substances, flammable dust, or other explosive or toxic vapors.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Always turn off this appliance before connecting or disconnecting hose.
- Store the appliance indoors. Put the appliance away after use to prevent accidents.

- Use only the charger supplied by the manufacturer to recharge.
- Do not incinerate the appliance even if it is severely damaged. The batteries can explode in a fire.
- This appliance is intended for household use only.

## PRODUCT OVERVIEW AND COMPONENTS

---

The Trucozie T351 Cordless Vacuum Cleaner is designed for versatile and efficient cleaning. Below is an overview of the main unit and included accessories.



Image: The Trucozie T351 Cordless Vacuum Cleaner shown with its main body, extension tube, motorized brush head, and various

attachments including a crevice tool and 2-in-1 brush. Also visible are the battery pack and charger.

## Included Components:

- Adjustable Extension Tube
- Battery Pack (7-cell)
- Charger
- Wall Hanger
- Crevice Tool
- HEPA Filter
- LED Big Brush (Motorized Brush Head)
- 2-in-1 Brush

## SETUP AND ASSEMBLY

---

### 1. Battery Installation

Ensure the battery pack is securely installed into the main unit. Proper alignment is crucial for the vacuum to power on.



*Image: A two-panel image illustrating battery installation. The left panel shows the battery pack being aligned with the groove on the vacuum's main body. The right panel shows the battery fully inserted, with checkmarks indicating correct alignment and an 'X' for incorrect alignment. Ensure the battery clicks into the designated groove. Misalignment may block the vacuum from starting.*

### 2. Assembling the Vacuum

Connect the extension tube to the main unit, then attach the desired cleaning head (e.g., LED Big Brush) or accessory to the other end of the extension tube. For handheld use, attach accessories directly to the main unit.

## OPERATING INSTRUCTIONS

---

### Powering On and Suction Modes

The Trucozie T351 features 3 powerful suction modes to adapt to various cleaning needs. Press the power button to turn on the vacuum. Use the mode selection button to cycle through the suction levels (Low, Medium, High).

# Powerful Cordless Vacuum with Brushless Motor

3-Level Suction & Clog Alerts for Efficient Cleaning



*Image: A close-up of the vacuum's handle and control panel, showing a hand operating the unit. The display indicates battery level and suction mode. This illustrates the powerful brushless motor and 3-level suction.*

## Using the Motorized Brush Head


The LED Big Brush is designed with an anti-tangle feature and integrated LED lights to illuminate dark areas, making hidden dust and debris visible.



*Image: The motorized brush head with its LED lights activated, cleaning under a sofa, highlighting its ability to illuminate hidden pet hair and debris.*

## Versatile Cleaning with Attachments

Utilize the various attachments for specialized cleaning tasks. The 2-in-1 brush and crevice tool are ideal for upholstery, tight spaces, and high corners.

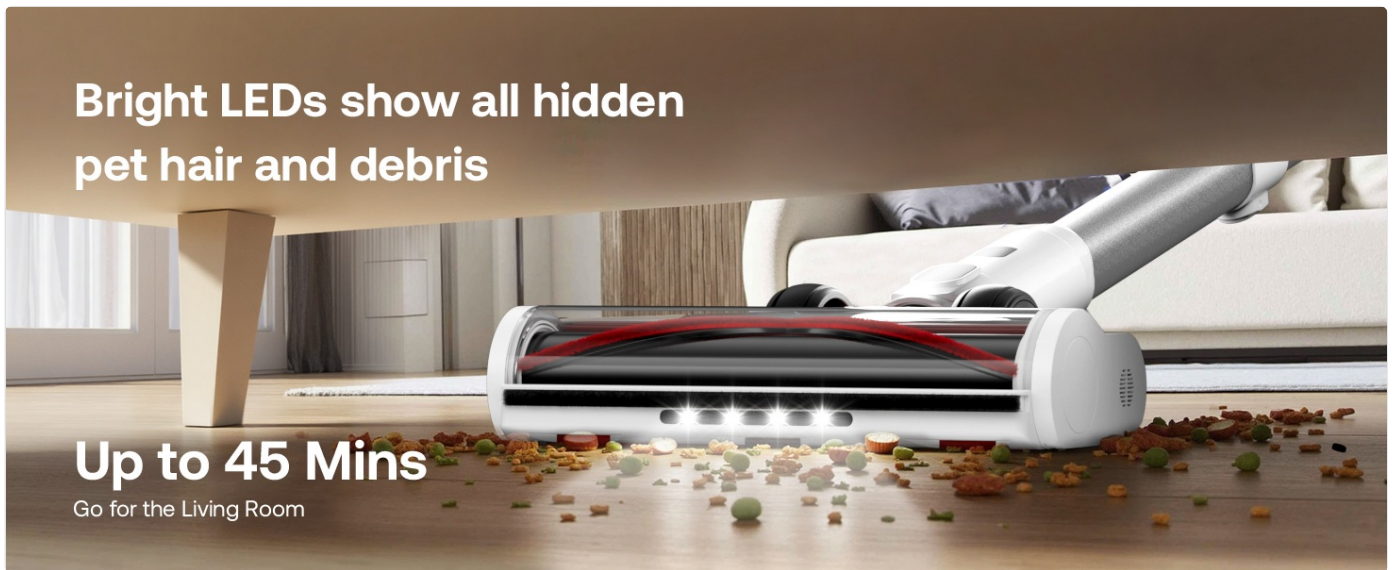

*Image: A three-panel image demonstrating the use of different attachments: cleaning a car interior, removing pet hair from a cushion, and vacuuming a sofa with the crevice tool.*

## MAINTENANCE

### 1. Dust Cup Emptying

Empty the dust cup regularly to maintain optimal suction performance. The one-click dust removal system ensures a mess-free process.

## Battery Installation Steps



Ensure battery clicks into designated groove. Misalignment may block vacuum from starting.

*Image: A two-panel image showing the dust cup removal process. The left panel shows pressing a button to release the dust cup. The right panel shows the dust cup detached from the main unit, ready for emptying. Press the button and rotate to the right to take off the dust cup.*

# One-Click Dust Removal

Never touch the mess



Washable HEPA Filter

*Image: A visual representation of the one-click dust removal feature, showing debris falling from the dust cup into a trash bin. This highlights the ease of emptying without touching the mess.*

## 2. Filter Cleaning

The 6-layer sealing filtering system captures 99.99% of fine particles. Regularly clean the HEPA, metal, and sponge filters to prevent weakening suction and blockages.

## Battery Removal Steps



Press the button with your thumb, slide the battery back with your fingers, and remove it.

*Image: A two-panel image showing the dust cup being emptied into a bin and the washable HEPA filter system being rinsed under water. This demonstrates the ease of cleaning and maintenance.*

# 6-Stage Multi-Filtration

99.99% Effectively Traps Over Allergens & Dirt



*Image: An exploded view diagram illustrating the 6-stage multi-filtration system, showing how it effectively traps allergens and dirt.*

### 3. Brush Roll Cleaning

The anti-tangle brush is designed to minimize hair wrap. Periodically inspect and clean the brush roll to ensure smooth operation.

# Anti-Tangle Brush

Enjoy smooth cleaning, unhindered by tangled hair and debris



*Image: A comparison image showing the Trucozie anti-tangle brush with minimal hair wrapped around it, next to a generic brush with significant hair tangles. This highlights the effectiveness of the anti-tangle design.*

## 4. Battery Removal for Charging/Replacement

The detachable battery pack allows for easy replacement and charging.



Image: A two-panel image illustrating battery removal. The left panel shows pressing a button with the thumb. The right panel shows sliding the battery back with fingers and removing it from the main unit.

## TROUBLESHOOTING

Refer to the following common issues and their solutions. If the problem persists, please contact customer service.

### Q: The battery is charged fully, why the vacuum couldn't turn on?

1. Please install the battery pack on the vacuum cleaner, ensure the battery clicks securely into the designated groove on the machine. If it's not aligned properly, the vacuum may not turn on.
2. Unplug the power cord to turn it on. The vacuum cleaner cannot turn on while it's charging.
3. If the vacuum cleaner still cannot work, please record a video and contact Customer Service.

### Q: Why won't the battery charge?

1. Ensure you are using the original charger, which has a Trucozie T351 logo on the label, and the charger is properly plugged in.
2. Check the charger and the cable for any damages.
3. Check whether the battery indicator blinks red or green.
4. Record a video of battery charging and contact Customer Service.

### Q: Why the vacuum stops picking up debris?

1. Take out the HEPA filter and the metal filter, and check if they are dirty. If the filters haven't been cleaned for a long time, please follow the manual to clean them.
2. Please re-install the filters properly.
3. Please check the extension tube for any blockages.
4. If the issue persists, please record a video of the problem and contact Customer service.

### Q: Why does the floor brush stop rotating?

1. Take off the brush roller, and re-install it to make sure the roller is installed correctly.
2. Try to turn the floor brush, see if it can be smoothly moved.
3. If the floor brush still won't rotate, remove the conductive tube and connect the floor brush directly to the main unit.
4. If the issue still exists, please record a video and contact Customer Service.

## PRODUCT SPECIFICATIONS

---

Feature	Detail
Brand	Trucozie
Model Name	T351
Color	White
Maximum Suction	40Kpa (as per feature bullets)
Run Time	Up to 45 Mins
Battery Type	7-cell Lithium Ion (included)
Filter Type	HEPA Filter, Metal Filter, Sponge Filter (6-layer filtration system)
Dust Cup Capacity	0.6 Liters
Noise Level	75 dB
Product Dimensions	16.93"L x 10.63"W x 6.92"H
Item Weight	6.92 pounds
Special Features	6-Stages High-Efficiency Filtration, 3 Suction Levels, 8-in-1 Portable, 180° Rotatable Brush & LED Headlights, Anti-Tangling, LED Display, Brushless Motor, One-click Dust Removal

## WARRANTY AND CUSTOMER SUPPORT

---

Each Trucozie stick vacuum cleaner comes with a **12-month protection plan**. For any issues or inquiries, our **24/7 customer service** is available to assist you.

Please contact us via message or email if you encounter any problems with your product. Provide your model number (T351) and a detailed description of the issue for faster assistance.

For further assistance, visit the official Trucozie store: [Trucozie Home Store](#)

